

5GCPE

openwrt-321gadget-5GCPE

1.启动open wrt，通过lan口进入系统



2.进入openwrt文件夹

- 打开winSCP软件
- 选择文件协议---选择"SCP"
- 主机名---登录openwrt地址 (例: 192.168.2.1)

Revision #1

Created 12 June 2022 18:35:21 by

Updated 9 July 2022 18:58:35 by