

HUAWEI RH2288H


V3

- [HUAWEI RH2288H V3](#)
- [HUAWEI RH2288H V3 iBMC BIOS](#)
- [HUAWEI RH2288H V3 RAID SR130 LSISAS3008 EFI](#)
- [HUAWEI RH2288H V3 RAID SR130 LSISAS3008 Legacy/Dual](#)
- [HUAWEI RH2288H V3 / /](#)
- [HUAWEI RH2288H V3](#)
- [HUAWEI RH2288H V3](#)
- [HUAWEI RH2288H V3](#)
- [RAID-](#)
- [RAID- LEGACY](#)
- [RAID-SAS Topology](#)
- [RAID-](#)
- [RAID-](#)
- [RAID-](#)
- [RAID- RAID](#)
- [RAID-](#)
- [RAID-](#)
- [RAID- RAID](#)
- [RAID-](#)
- [RAID-](#)
- [RAID- RAID / RAID RAID](#)


HUAWEI RH2288H V3

- KVM IPMI

Image not found or type unknown

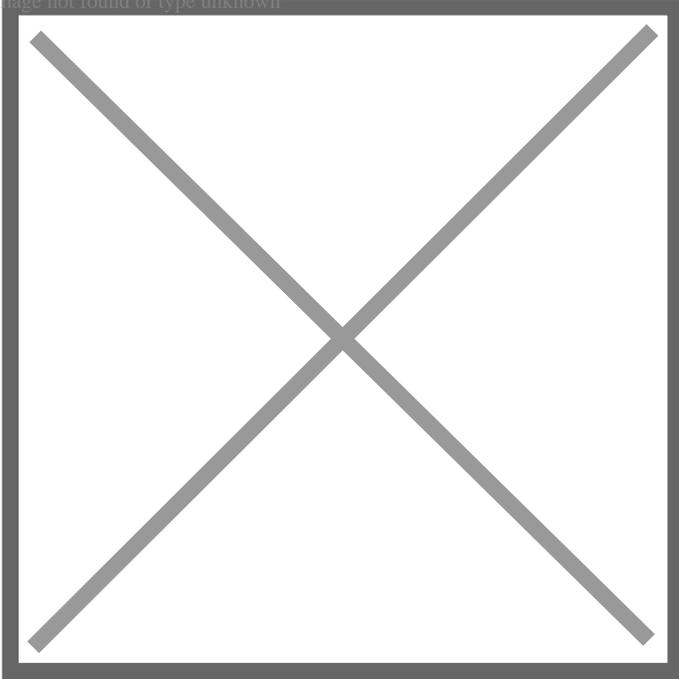


- ISO

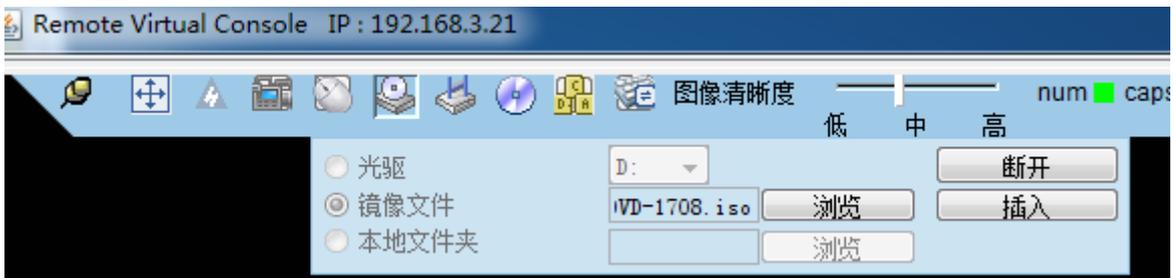


- RAID

Image not found or type unknown

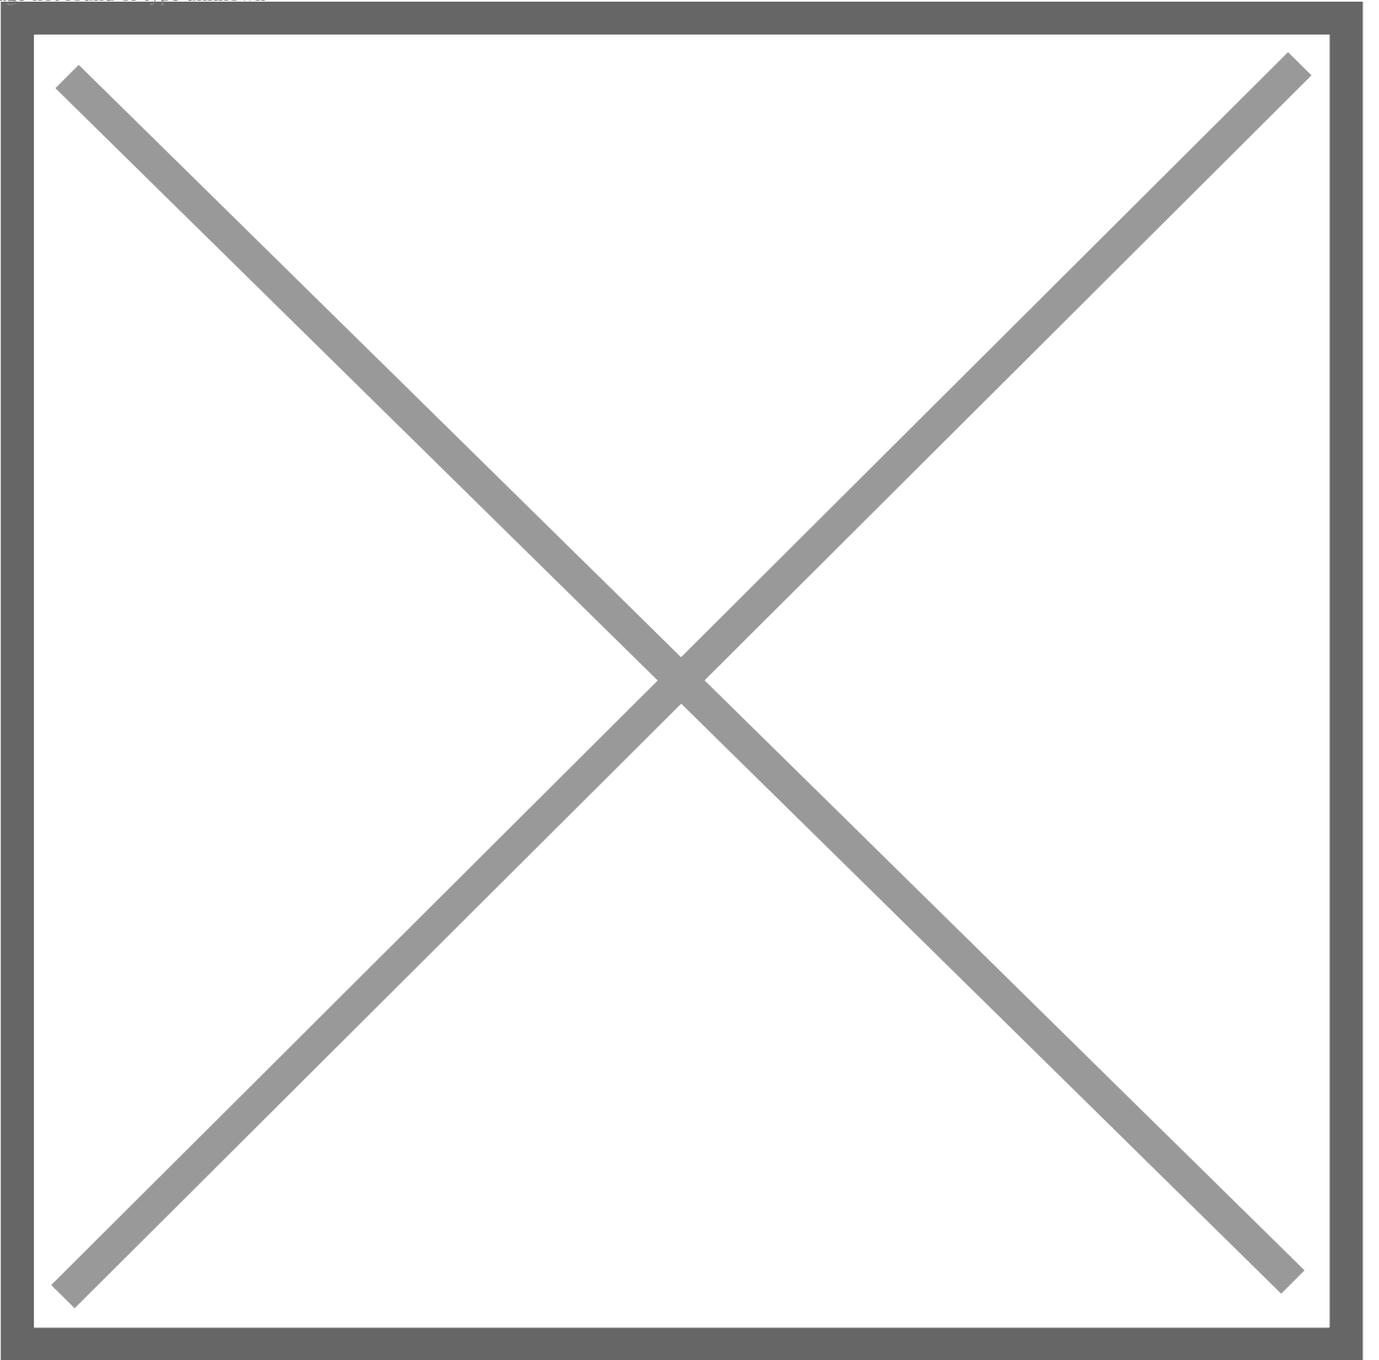


- F11

Image not found or type unknown

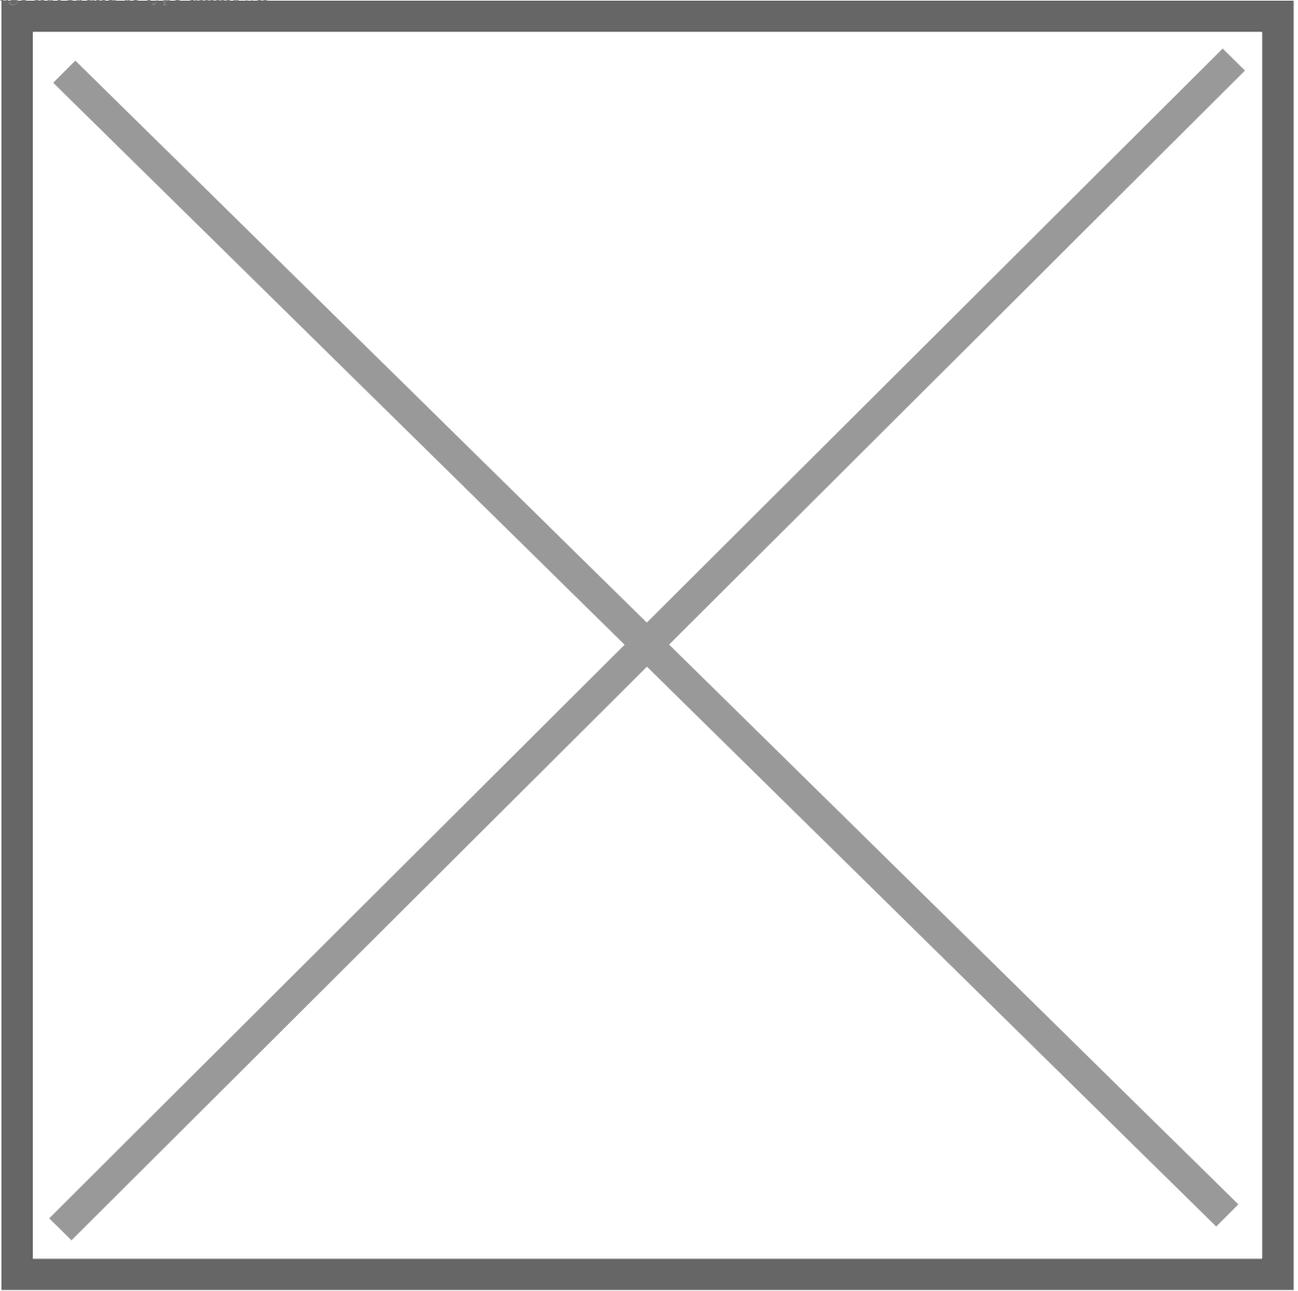


- **BIOS Huawei12#\$**

Image not found or type unknown

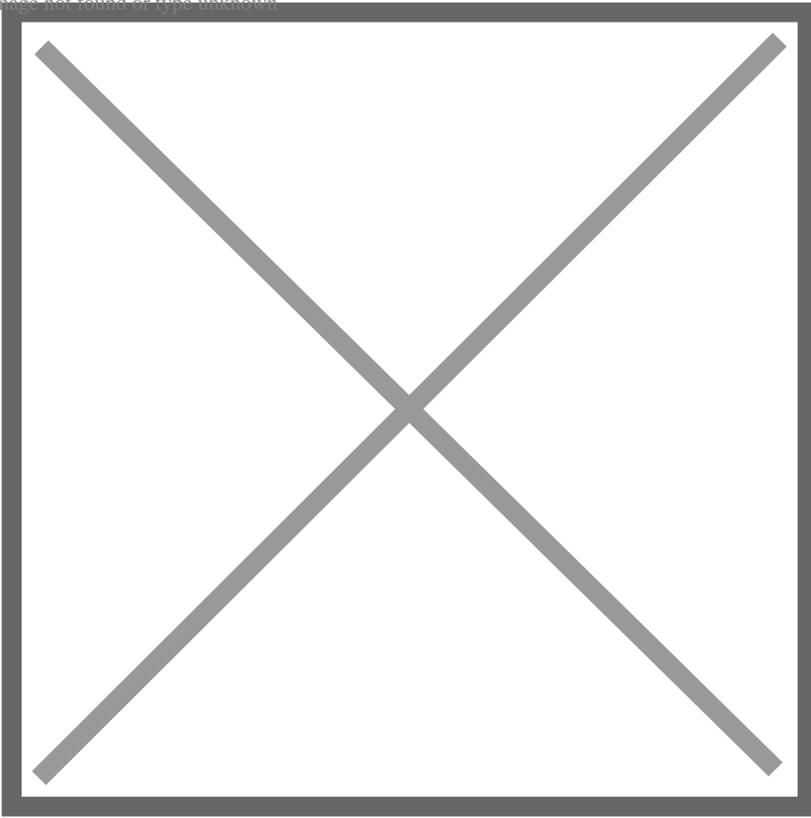


- CD ROM ISO

Image not found or type unknown

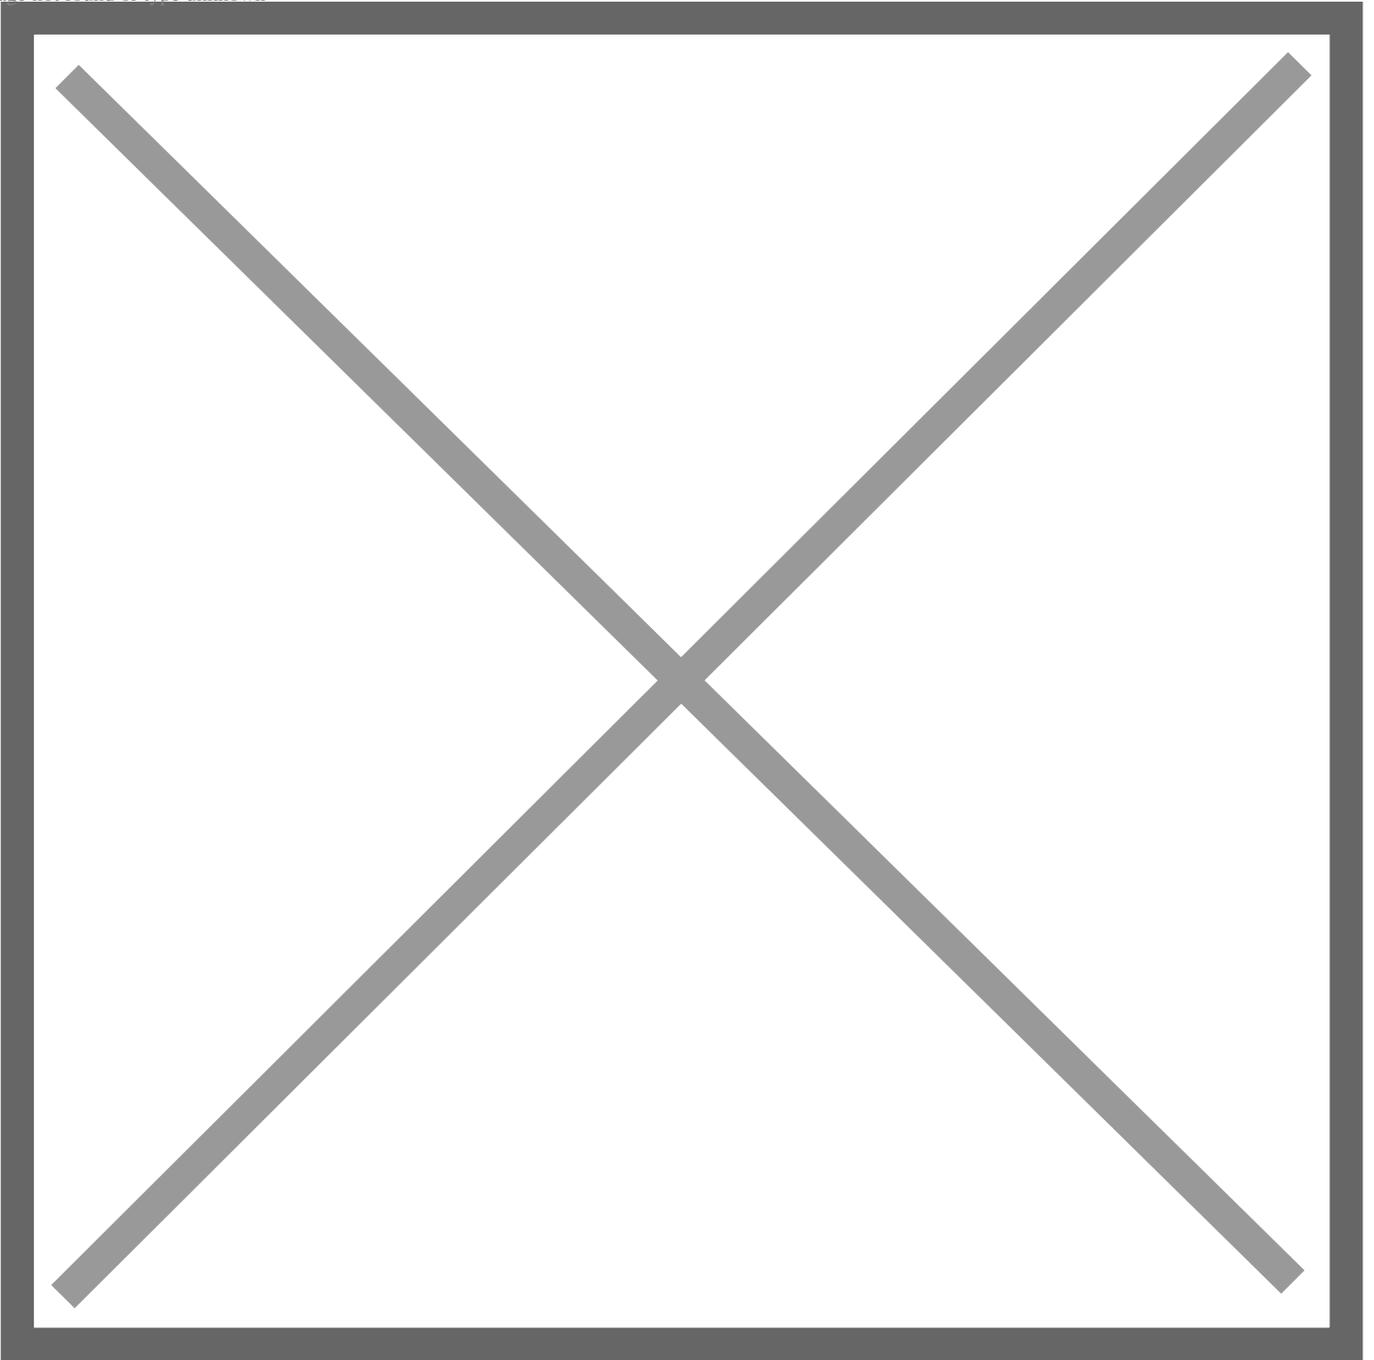


- Install CentOS 7

Image not found or type unknown

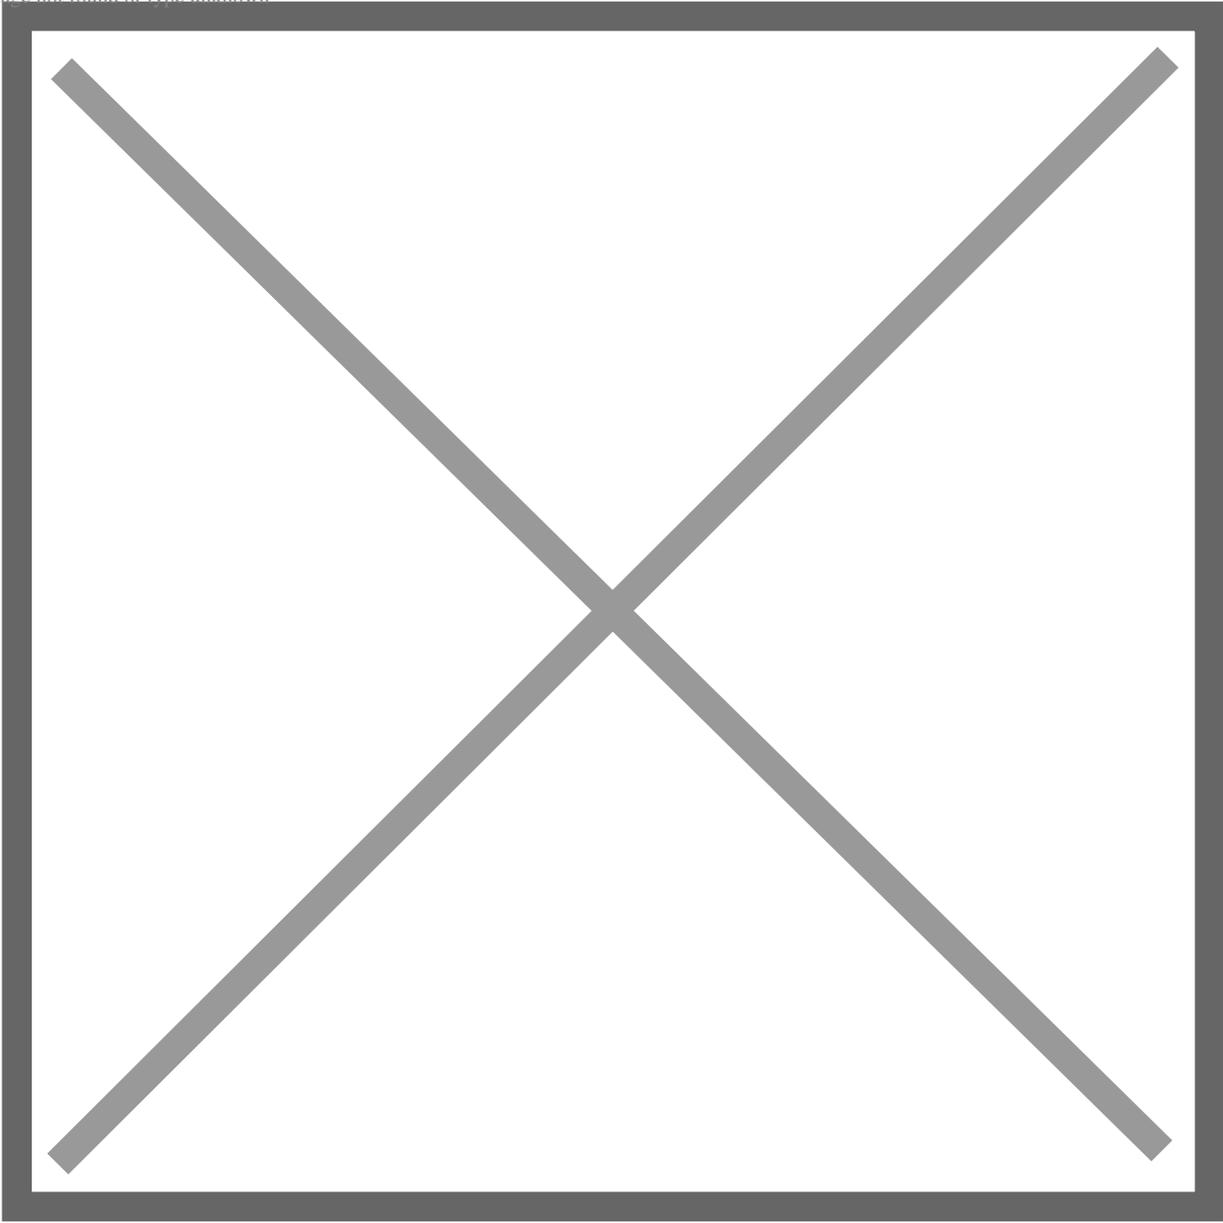


- --English

Image not found or type unknown

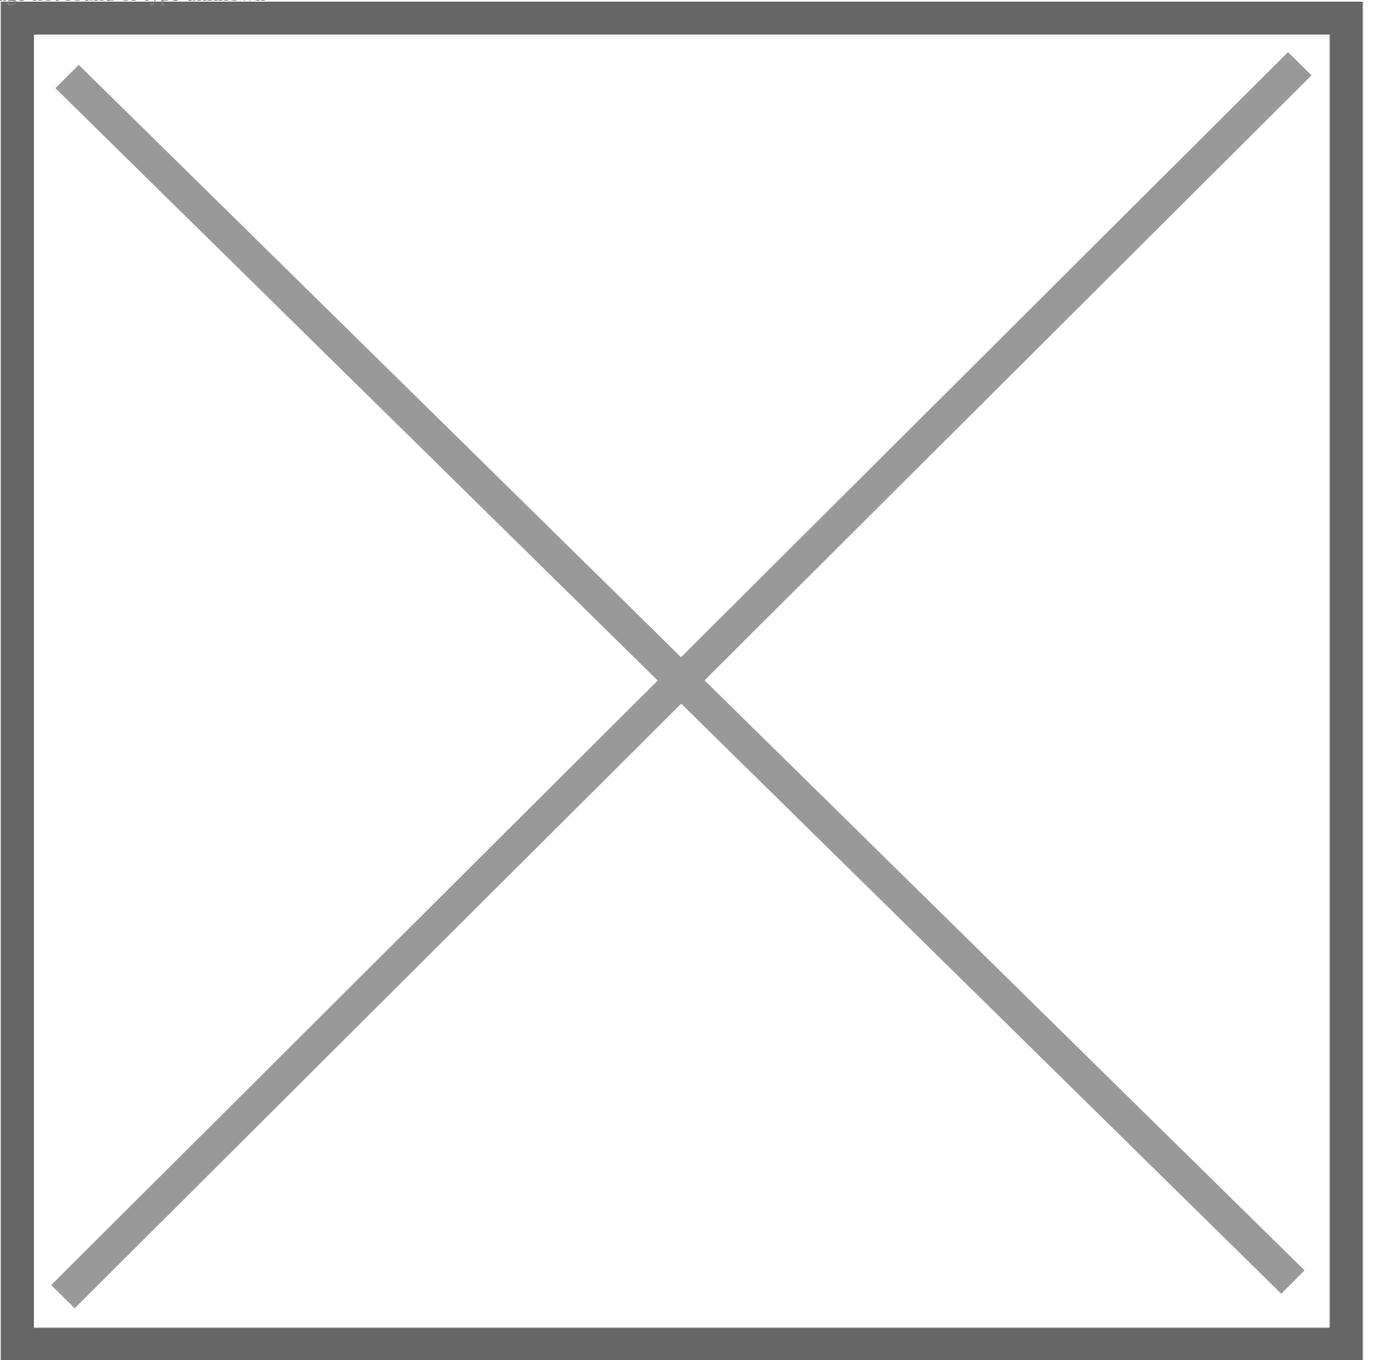


• --

Image not found or type unknown

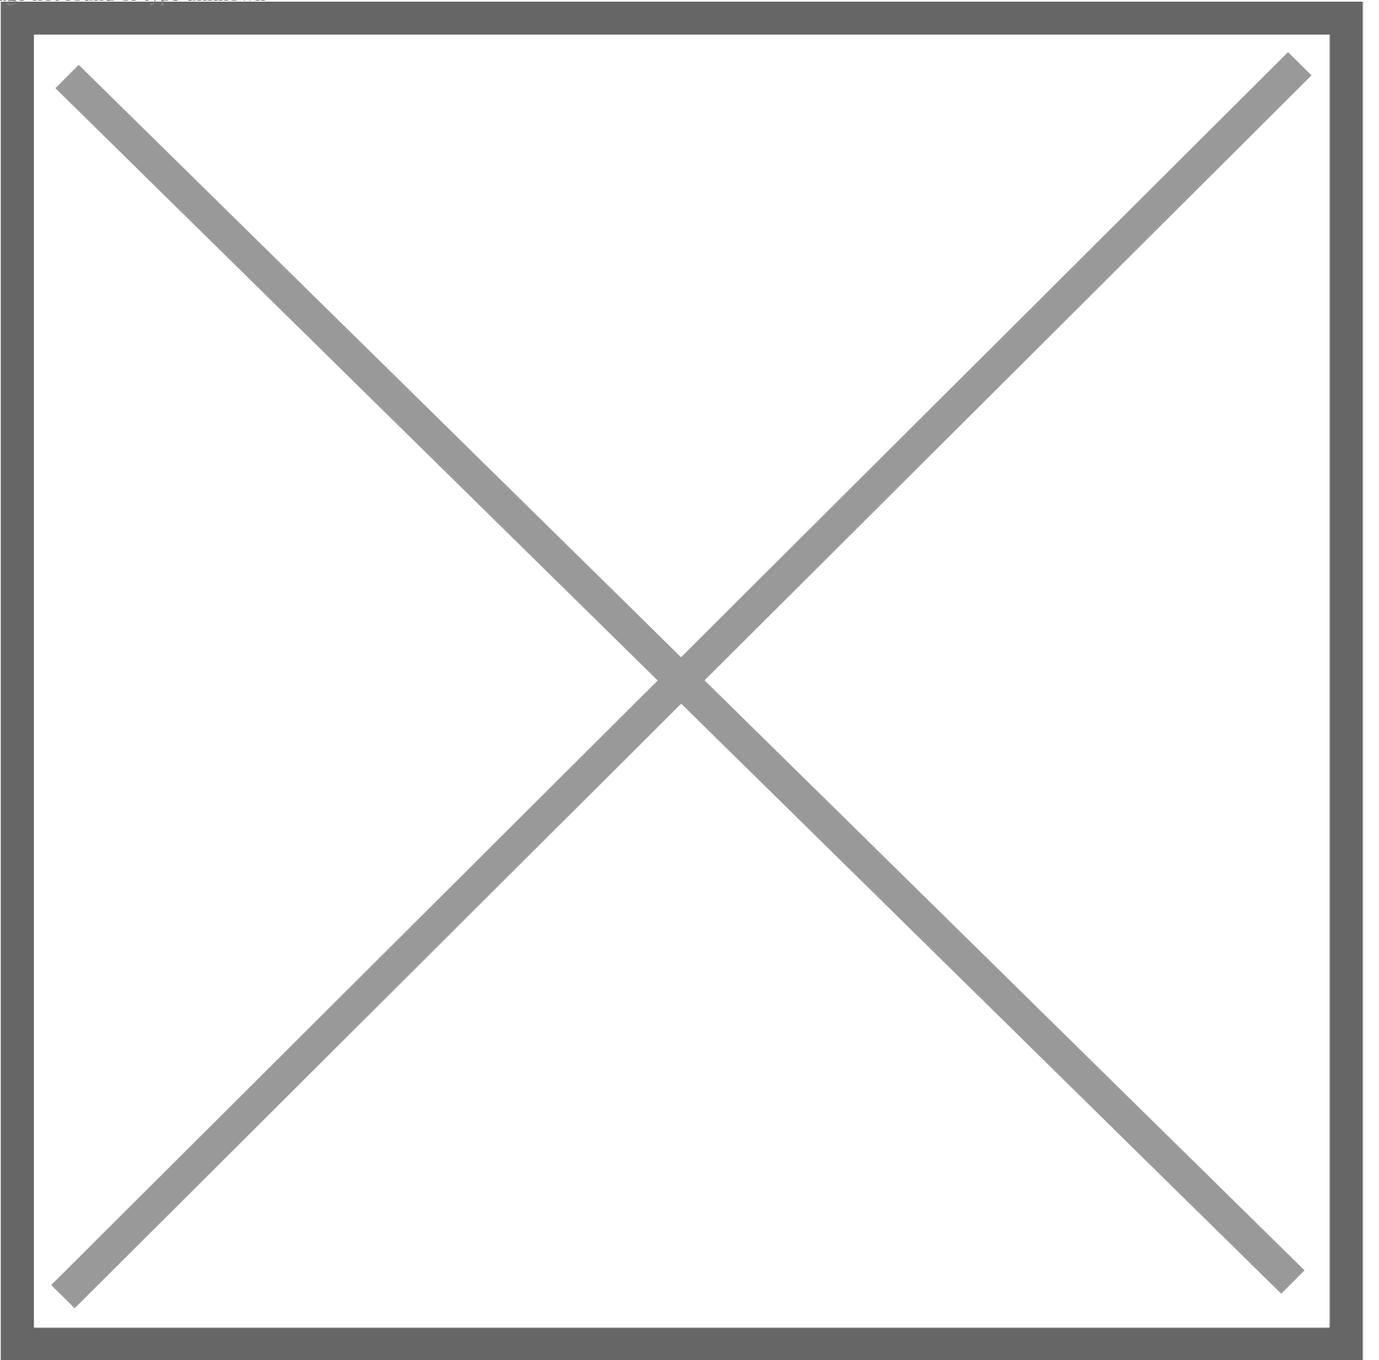


- --Minimal

Image not found or type unknown

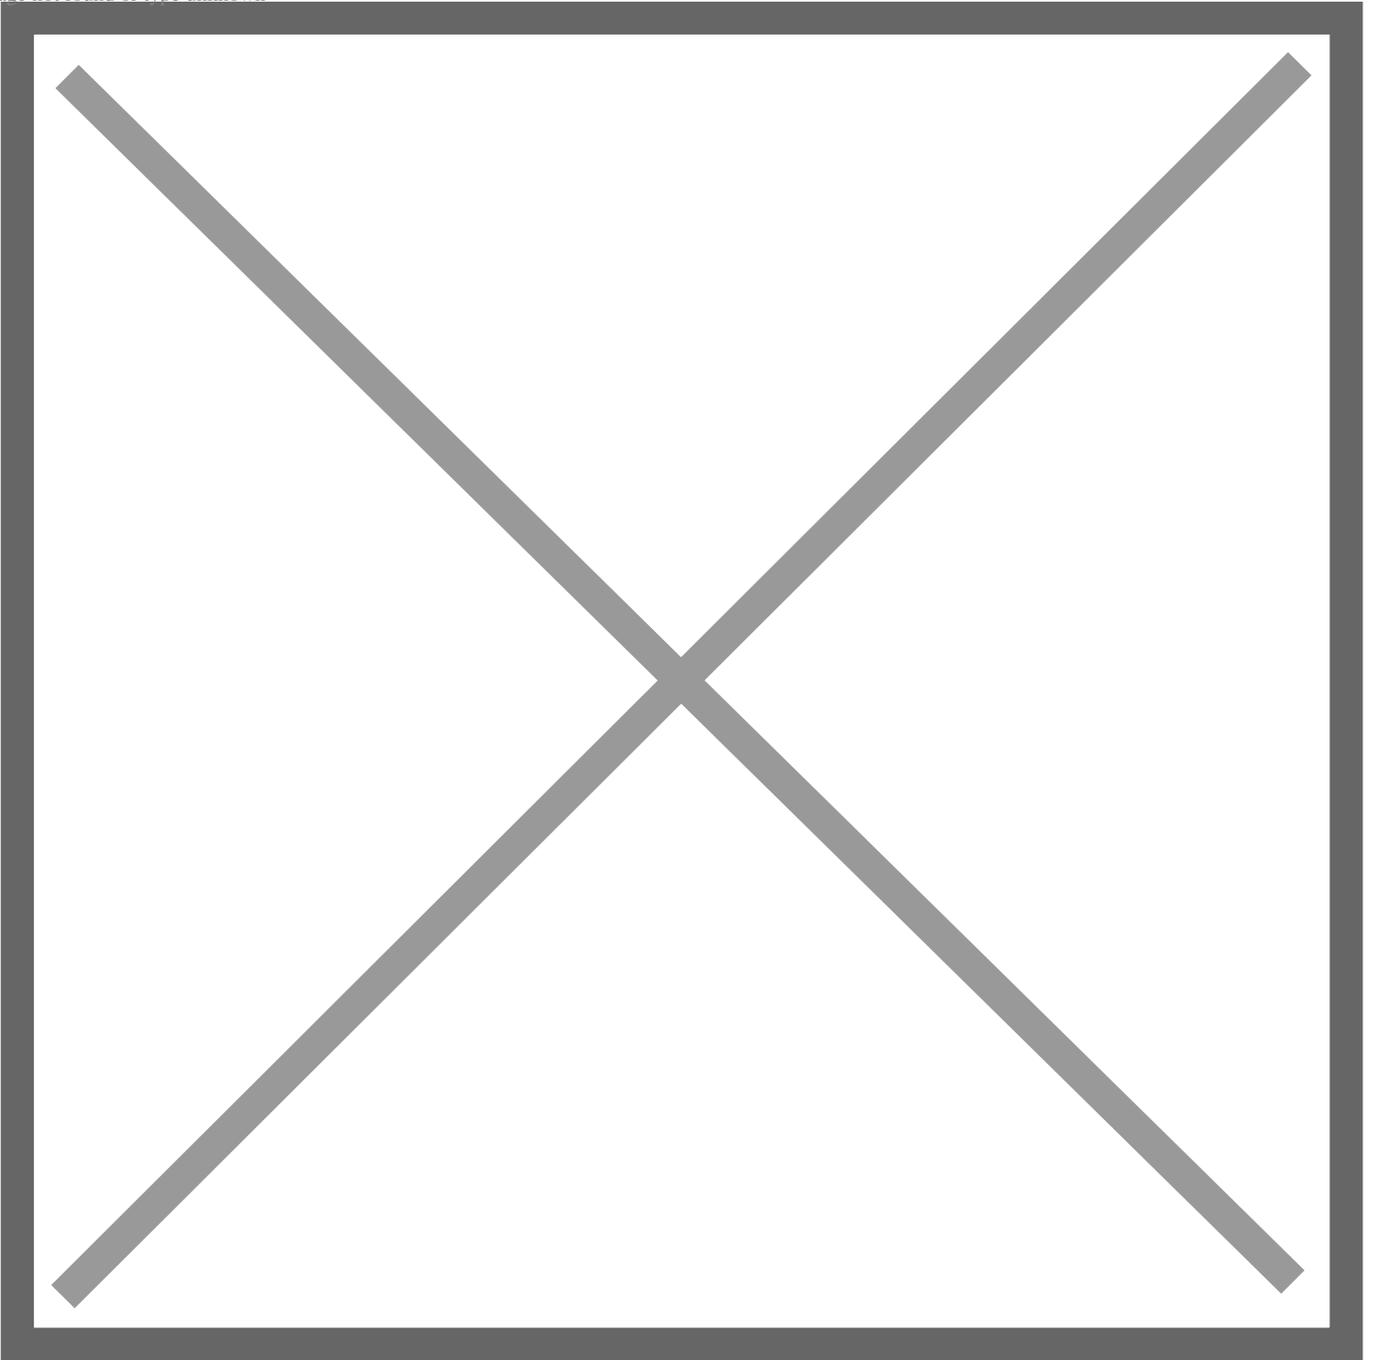


•

Image not found or type unknown

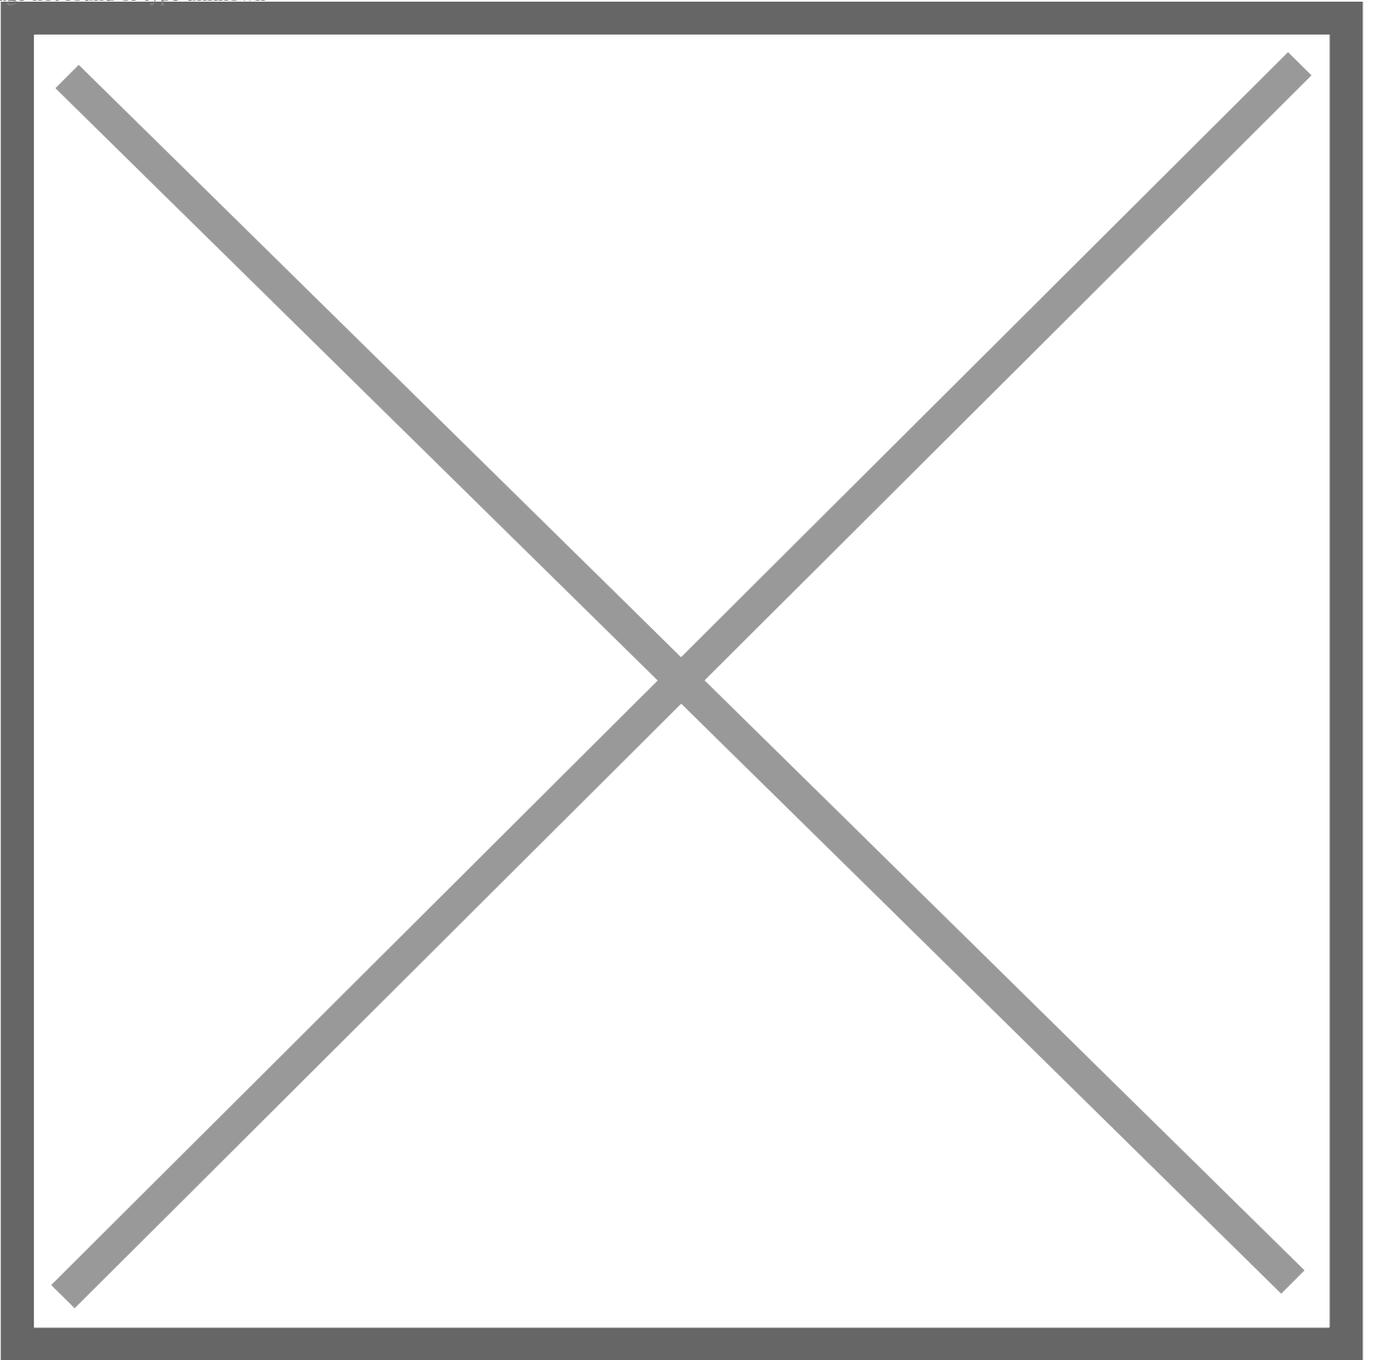


•

Image not found or type unknown

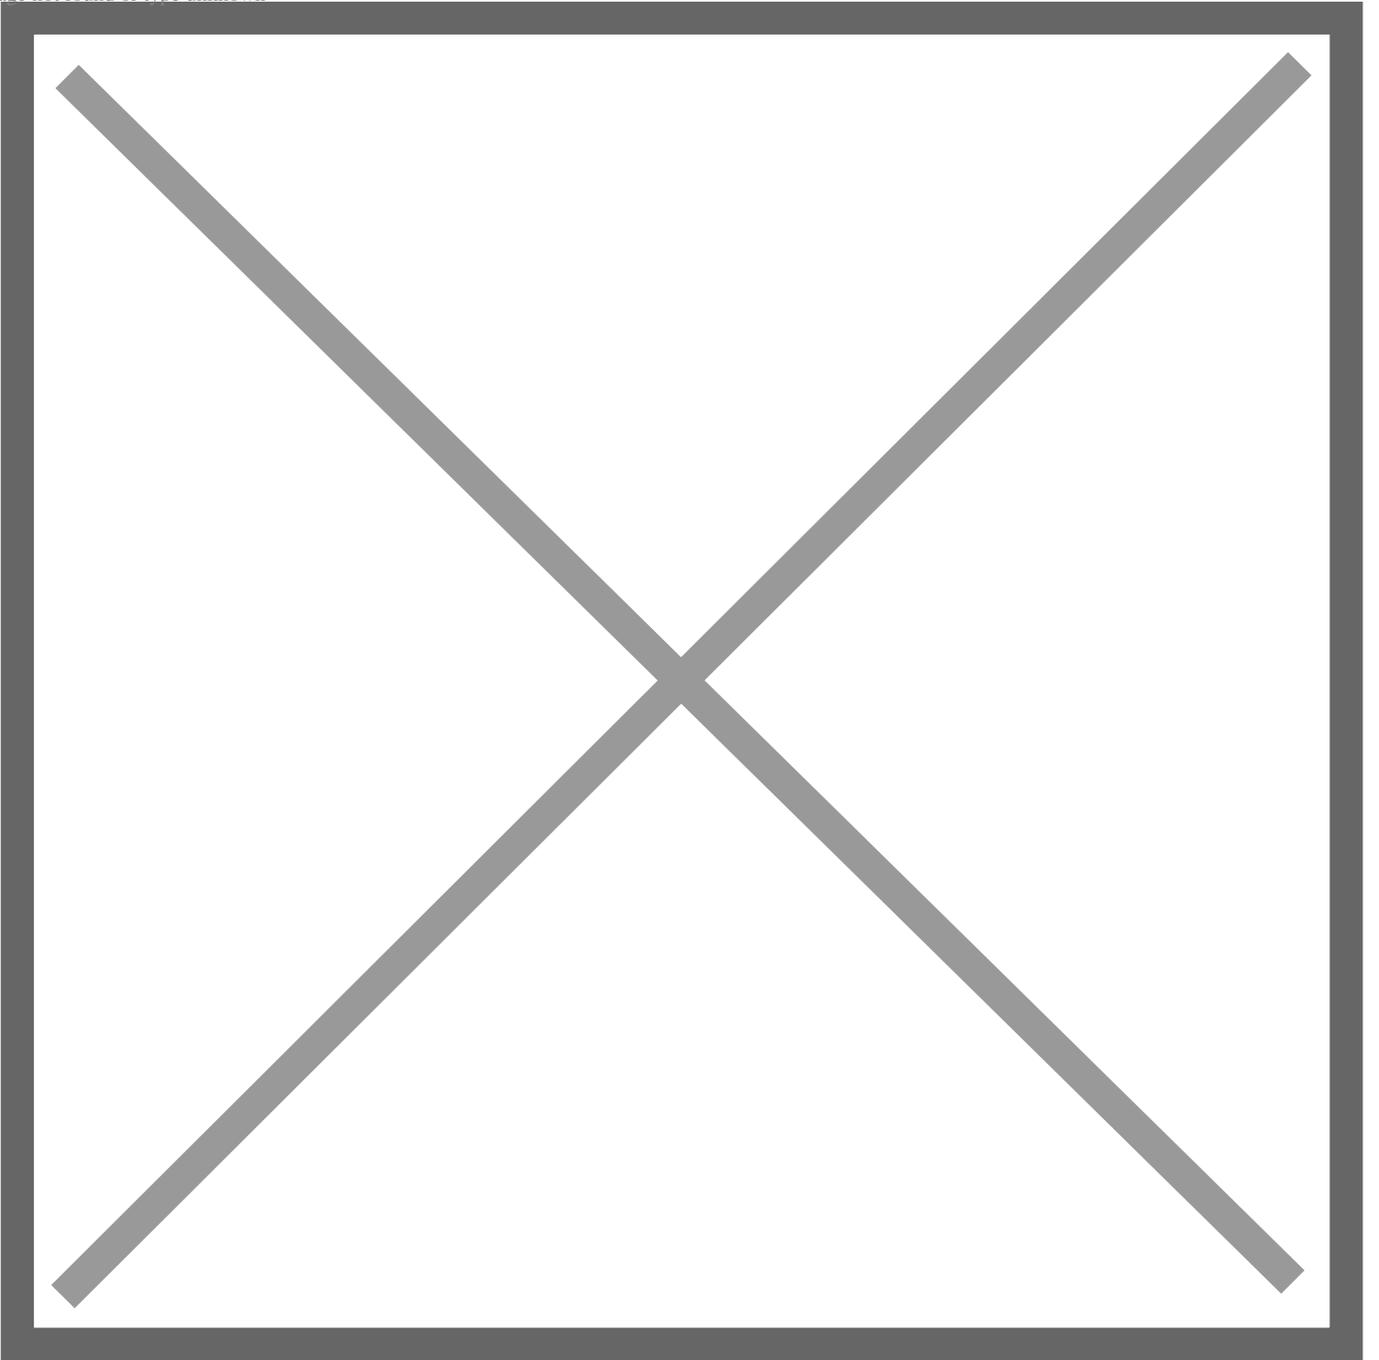

root

Image not found or type unknown

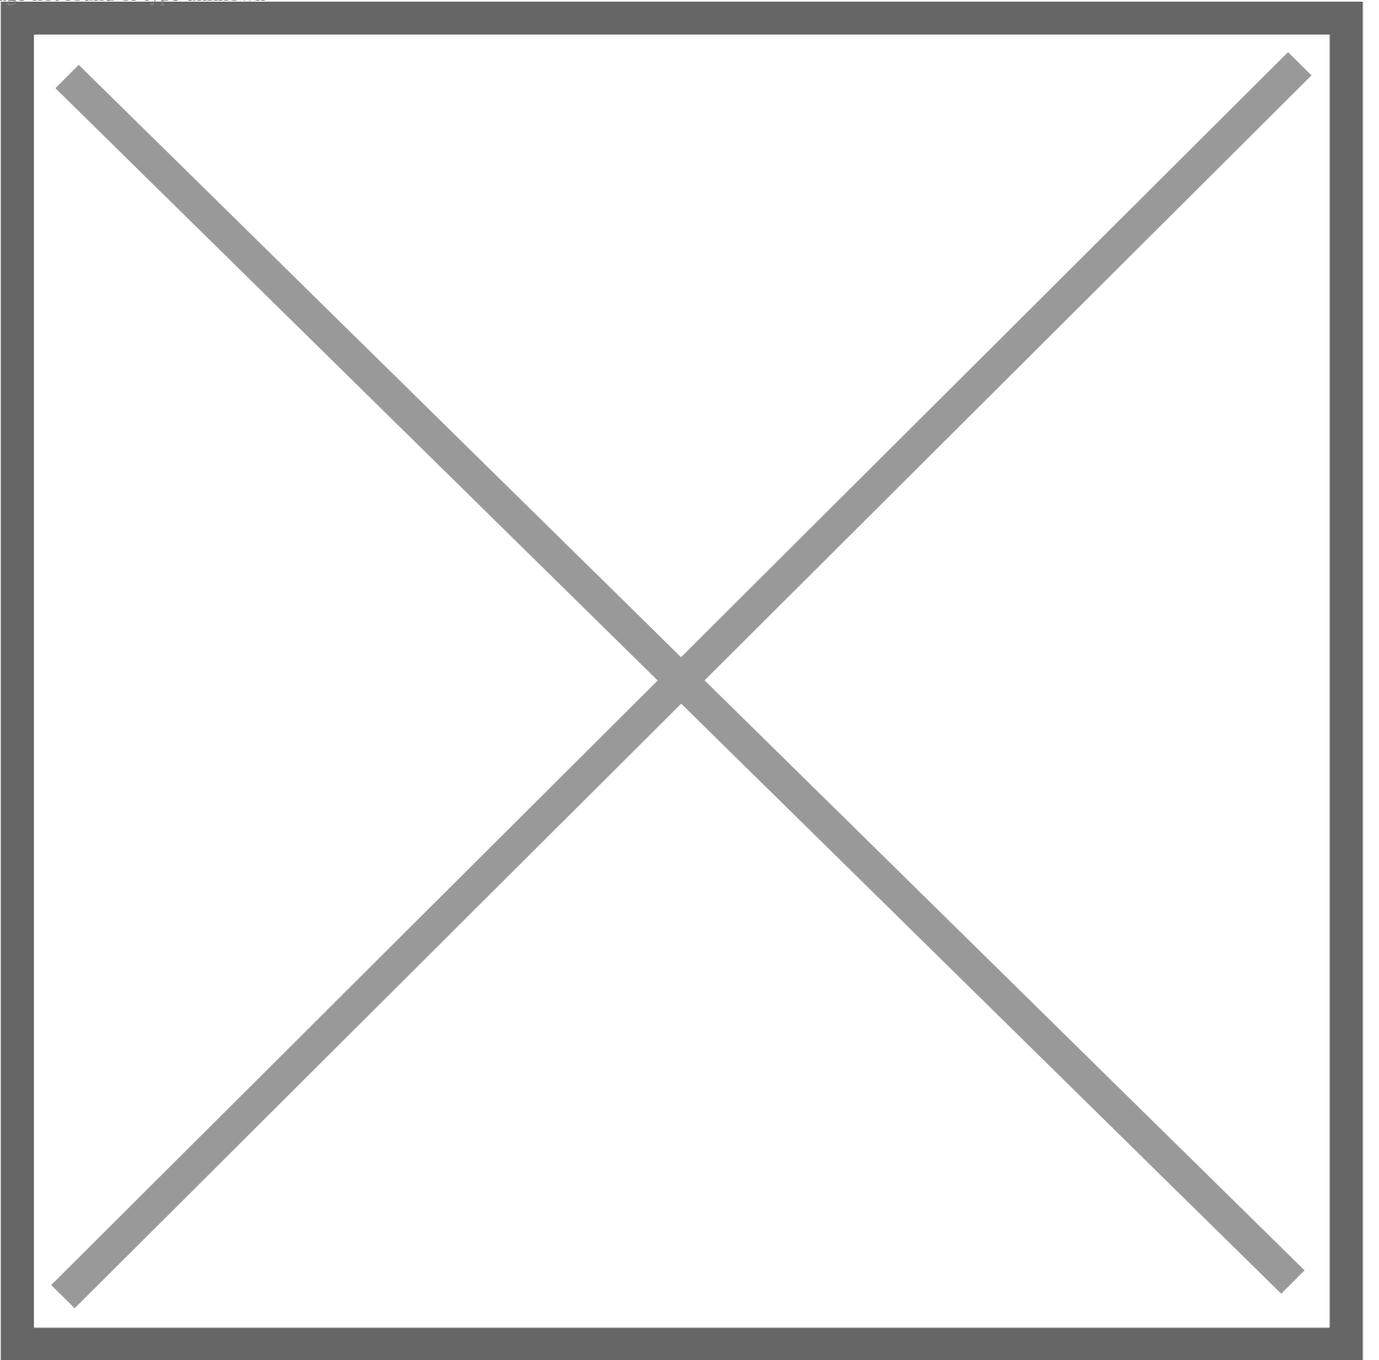

Linux

HUAWEI RH2288H V3 iBMC BIOS

✓ 华为服务器 BIOS 密码

华为FusionServer V BIOS 密码

华为服务器 V3 服务器BIOS

Huawei12#\$ 或者: **u**

华为服务器 V5 服务器BIOS

Admin@9000

华为服务器 TaiShan 200 BIOS 密码

华为 TaiShan 100 (型号XI
服务器

BIOS默认密码为: **u**

✓ 华为服务器管理地址信息

华为服务器MGMT网
(iBMC/iMana) 的默
掩码如下：

默认IP地址： 192.168.

默认子网掩码： 255.25

✓ 华为服务器 BMC (iBMC/iMana)

华为V2/V3机架服务
(iBMC/iMana) 默认

HUAWEI RH2288H V3 RAID SR130 LSI SAS3008 EFI

BIOS V658

1. "UEFI Boot" UEFI BIOS V658

2. LSI SAS3008IR

1. 5-21 "Delete"

5-21 BIOS

Huawei_imgDownload?uuid=20c6092c99d64cd88c510bfdca91782b

Image not found or type unknown

Huawei_imgDownload?uuid=91f207976bd04fc3b5892393fa9d599a

Image not found or type unknown

V5 BIOS "Admin@9000"

2. "Enter"

5-22

5-22 Setup Utility

Huawei_imgDownload?uuid=143e256358154d148935d1ad11fddce4

Image not found or type unknown

3. "Device Manager" "Enter"

5-23

5-23 Device Manager

Huawei_imgDownload?uuid=858f2d482f014e60b38e828dd98ba2ea

Image not found or type unknown

4. LSI SAS3008IR "Enter" 5-24

5-24 LSI SAS3008IR

Huawei_imgDownload?uuid=ed8eae777a2b41588c828dbfcdee76ef

Image not found or type unknown

5. "Enter"

5-25

5-25 LSI SAS3008IR

Huawei_imgDownload?uuid=7f0be0c9435745b289e3576d78236286

Image not found or type unknown

RAID 0

Huawei_imgDownload?uuid=f7053227d99545908abc56cab69fd285

Image not found or type unknown

- RAID RAID
- LSI SAS3008IR SAS/SATA HDD SAS/SATA SSD RAID

1. BIOS V658 BIOS V363
2. "Create Configuration"
 1. "Controller Management" "Enter"
 2. "Create Configuration" "Enter"
3. RAID
 1. "↑" "↓" "Select RAID level" "Enter"

RAID 5-31

5-31 RAID

Huawei_imgDownload?uuid=7ef7c3fe9b3d460cbbae65ae87737d63

Image not found or type unknown

2. RAID "RAID 0" "Enter"
4.
 1. "↑" "↓" "Select Physical Disks" "Enter"

5-32 5-9

5-32

Huawei_imgDownload?uuid=6a007f9f9dd14b599d25e0a7a131626c

Image not found or type unknown

5-9

| | |
|---------------------------|------|
| Selected RAID Level | RAID |
| Select Interface Type | RAID |
| Select Media Type | RAID |
| 0:2:0 SAS HDD-512b 1117GB | |

| | |
|-------------|--|
| Check All | |
| Uncheck All | |

2. 5-9 RAID

Huawei_imgDownload?uuid=c7649f5430614e43a175edffa7803b68

Image not found or type unknown

- RAID 0 2 10
- RAID RAID 14 RAID

5. 1. “↑” “↓” “Apply Changes” “Enter”

5-33

5-33

Huawei_imgDownload?uuid=eeb9ca90b18f4c57ad060c7ccf12dd3f

Image not found or type unknown

2. “↑” “↓” “Confirm” “Enter”

3. “↑” “↓” “Yes” “Enter”

Operation completed successfully

4. “Esc”

6.

1. “Virtual Disk Management” “Enter”

2. “Manage Virtual Disk Properties” “Enter”

RAID

RAID 1

Huawei_imgDownload?uuid=084bcdadc3454cec9a7e88e2ed732cc1

Image not found or type unknown

- RAID RAID
- LSI SAS3008IR SAS/SATA HDD SAS/SATA SSD RAID

1. BIOS V658 BIOS V363

2. “Create Configuration”

1. “Controller Management” “Enter”

2. “Create Configuration” “Enter”

3. RAID

1. “↑” “↓” “Select RAID level” “Enter”

RAID 5-34

5-34 RAID

Huawei_imgDownload?uuid=9af6c2c59cf741adaea7cce7e9f10694

Image not found or type unknown

2. RAID “RAID 1” “Enter”

4.

1. “↑” “↓” “Select Physical Disks” “Enter”

5-35 5-10

5-35

Huawei_imgDownload?uuid=31168df01bce41409fd22c2c85345aea

Image not found or type unknown

5-10

2. 5-10 RAID

Huawei_imgDownload?uuid=e7d6ae9fd5c446388d36d5d32226a182

Image not found or type unknown

- RAID 1 2

- RAID RAID 14 RAID

5.

1. “↑” “↓” “Apply Changes” “Enter”

5-36

5-36

Huawei_imgDownload?uuid=7be4e93c1b3841549590d3d6fe059df1

Image not found or type unknown

2. “↑” “↓” “Confirm” “Enter”

3. “↑” “↓” “Yes” “Enter”

Operation completed successfully

4. “Esc”

6.

1. “Virtual Disk Management” “Enter”

2. “Manage Virtual Disk Properties” “Enter”

RAID

Huawei_imgDownload?uuid=e7d6ae9fd5c446388d36d5d32226a182

Image not found or type unknown

LSI SAS3008IR RAID 1

RAID

RAID

HUAWEI RH2288H V3 RAID

SR130 LSI SAS3008

Legacy/Dual

Legacy/Dual

| | | | | | |
|-----------------------|--------|---------------|------|------|-------------|
| LSI Logic SAS BIOS CU | CU | LSI SAS3008IR | CU | BIOS | RAID |
| LSI SAS3008IR | | | RAID | | "SAS3IRCU" |
| Legacy | UEFI | OS | | | UEFI Legacy |
| | Legacy | | UEFI | UEFI | Legacy |

CU

1. "LEGACY" Legacy BIOS V363 Legacy BIOS V658
2.
 1. 5-4 "Press Ctrl-C to start LSI Corp Configuration Utility..." "Ctrl+C"
 "Please wait invoking SAS Configuration Utility..."
 5-4
 Huawei_imgDownload?uuid=02a45b2e866148baa75067626d7cffb3

 Image not found or type unknown
 2. CU 5-5 5-4
 5-5 CU
 Huawei_imgDownload?uuid=6a31de463def40359f54be7c15b6ce73

 Image not found or type unknown
 - RAID
 - RAID RAID RAID
 5-4

3. RAID

5-6 RAID "Boot Order" RAID

5-6 RAID 1

Huawei_imgDownload?uuid=5a349600d4024d2b83aa0ed7de4a9183

Image not found or type unknown

1. "Boot Order" "+" "-" RAID 5-7 "SAS9300-8i" "SAS3008"

5-7 RAID 2

Huawei_imgDownload?uuid=d9b6c65d39fa429abbbf1fe77feae5b9

Image not found or type unknown

2. "Esc"

5-8

5-8

Huawei_imgDownload?uuid=b7ef2684758b4ccf928f52c4c690a866

Image not found or type unknown

3. "Save changes and reboot." "Enter"

4. 5-9 "Press Ctrl-C to start LSI Corp Configuration Utility..." "Ctrl+C"

CU

5-9

Huawei_imgDownload?uuid=02a45b2e866148baa75067626d7cffb3

Image not found or type unknown

Huawei_imgDownload?uuid=65447ab96ef84cf7b42321c1a0c4e5b2

Image not found or type unknown

BIOS

Purley

Purley BIOS " "

4. LSI SAS3008IR "Enter"

"Adapter Properties" 5-10 5-5

5-10 Adapter Properties

Huawei_imgDownload?uuid=37ba8bb1f33d4578b5a28a50025f42f3

Image not found or type unknown

5-5 Adapter Properties

RAID 0

- RAID RAID

2. RAID 0

1. "Adapter Properties" "RAID Properties" "Enter"
"Select New Volume Type" 5-11
5-11 Select New Volume Type
Huawei_imgDownload?uuid=85c4c052ddb94b2790f852f06009ec33

Image not found or type unknown

2. "Select New Volume Type" "Create RAID 0 Volume" "Enter"
"Create New Volume" 5-12 5-6
5-12 Create New Volume
Huawei_imgDownload?uuid=d6135ba610a640b08bac831cc204a881

Image not found or type unknown

5-6

3. RAID
"RAID Disk" RAID 5-13
• "RAID Disk" "Yes" RAID
• "RAID Disk" "No" RAID
Huawei_imgDownload?uuid=ee6f2c7676464698adce55b070117aa2

Image not found or type unknown

- RAID 0 2 10
- RAID RAID 14 RAID

5-13

Huawei_imgDownload?uuid=3f9e72df9b3640f4ac011c3d7c82ecbe

Image not found or type unknown

4. "C"
RAID
5. "Save changes then exit this menu" "Enter"
RAID 1 CU
5-10

1. "Adapter Properties" "RAID Properties" "Enter"
"Select New Volume Type"
2. "View Existing Volume" "Enter"
RAID

RAID 1

- RAID RAID
- LSI SAS3008IR SAS/SATA HDD SAS/SATA SSD RAID

2. RAID 1

1. "Adapter Properties" "RAID Properties" "Enter"
"Select New Volume Type" 5-14
5-14 Select New Volume Type
Huawei_imgDownload?uuid=4bbb64ac83e04928a12036f7ca072bdd

Image not found or type unknown

2. "Select New Volume Type" "Create RAID 1 Volume" "Enter"
"Create New Volume" 5-15 5-7
5-15 Create New Volume
Huawei_imgDownload?uuid=7160355069bf4a98aa490e7ba47351cd

Image not found or type unknown

5-7

3. RAID
"RAID Disk" RAID 5-16
 - "RAID Disk" "Yes" RAID
 - "RAID Disk" "No" RAID
 - RAID 1 2
 - RAID RAID 14 RAID
 -

5-16

Huawei_imgDownload?uuid=ff65777c3de74dcdb79f082fde4a144f

Image not found or type unknown

4. "C"
RAID
5. "Save changes then exit this menu" "Enter"
RAID 1 CU
5-10

Huawei_imgDownload?uuid=5c2a1215978044c5831a8d967fceacc3

Image not found or type unknown

1. "Adapter Properties" "RAID Properties" "Enter"
"Select New Volume Type"
2. "View Existing Volume" "Enter"
RAID

- RAID
-

RAID

RAID

RAID

2. 1. "Adapter Properties" "SAS Topology" "Enter"
"SAS Topology"
2. "SAS Topology" "↑" "↓" RAID "ALT+B" "ALT+A"
RAID "Controller" "RAID XX VOL" "Enter"
"Device Info" "Boot" "Device Info" "Alt" 5-20
5-20
Huawei_imgDownload?uuid=c0c8ff7b29b6483491befa256334e106

Image not found or type unknown

3. "ESC"
4. "Save changes then exit this menu" "Enter"

- RAID RAID RAID
- RAID
- LSI SAS2308/LSI SAS3008IR/LSI SAS3008IT RAID RAID 3
- LSI SAS2308/LSI SAS3008IR/LSI SAS3008IT RAID BIOS

HUAWEI RH2288H V3 / /

- RH2288 V3 8*2.5 E5-2630 v4*2 16GB*8 1200G*8 R5 750W*2 2*GE , DVD,

Important: RH2288H V3 type unknown

| | | | |
|---|---------|----|-----------|
| 1 | LOM | 7 | |
| 2 | UID | 8 | PSU |
| 3 | USB 3.0 | 9 | PSU |
| 4 | USB 3.0 | 10 | I/O 1 1 3 |
| 5 | Mgmt | 11 | PCIe 4 |
| 6 | VGA | 12 | PCIe 5 |





•

KVM

HUAWEI RH2288H V3

| | |
|------|--|
| ?? | FusionServer RH2288 V3 |
| | 2U |
| | 1 Xeon® E5-2600 v3 E5-2600 v4 |
| | Intel C612 |
| | 16 DDR4 2400MT/s ECC SDDC Lockstep |
| | 8 2.5 SAS/SATA/SSD |
| RAID | RAID0 1 10 5 50 6 60 Cache RAID • SR130 LSI SAS3008 RAID 0/1/10/1E • SR430C 1GB/2GB LSI SAS3108 RAID 0/1/10/5/50/6/60 |
| | Intel C612 |
| | 2 GE NC-SI WOL PXE |
| PCIe | 6 PCIe 3.0 x8 PCIe 1 RAID PCIe 5 PC |
| | 4 |
| | 2 460W /750W/1200W |
| | SM750 32MB 60Hz 16M 192 |
| | iBMC 1 GE |
| | L |
| | 3.5 86.1 mm 2U ×447 mm×748 mm(x x) 2.5 86.1 mm 2U ×447 mm×708 mm(x x) |

HUAWEI RH2288H V3

| | |
|------|--|
| | 2U |
| | <ul style="list-style-type: none"> • 2 Intel® Xeon® E5-2600 v3 <ul style="list-style-type: none"> ◦ 14 2.3GHz 12 2.6GHz 10 4GHz 4 3.0GHz ◦ 2 QPI 9.6GT/s ◦ L3 45MB • 1 Intel® Xeon® E5-2600 v4 <ul style="list-style-type: none"> ◦ TDP 120W ◦ 18 2.1GHz 16 2.1GHz 14 0 2.4GHz 8 2.1GHz 6 1.7GHz ◦ 2 QPI 9.6GT/s ◦ L3 45MB <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <ul style="list-style-type: none"> • Intel® Xeon® E5-2600 v4 : <ul style="list-style-type: none"> ◦ 3.16 BIOS ◦ iBMC • CPU BOM </div> |
| | Intel C612 |
| RAID | <ul style="list-style-type: none"> • SR320 LSI SAS2208 SR420 LSI SAS2208 RAID 0/1/10/5/50/6/60 • SR120 LSI SAS2308 RAID 0/1/10/1E • SR130 LSI SAS3008 RAID 0/1/10/1E • SR430C 1GB/2GB LSI SAS3108 RAID 0/1/10/5/50/6/60 • SP435 PM8060 RAID 0/1/10/5/50/6/60 • SR135 PM8068 RAID 0/1/10/5 <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <ul style="list-style-type: none"> • SP435 PM8060 RAID PCIe • RAID </div> |

| | |
|------|---|
| | <ul style="list-style-type: none"> • 16 DDR4 8 DDR4 RDIMM LRDIMM • 2400MT/s • RDIMM 16 32GB RDIMM 2 512GB • LRDIMM 16 128GB LRDIMM 2 2048GB • ECC SDDC Lockstep <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> RDIMM LRDIMM </div> |
| | <ul style="list-style-type: none"> • RAID RAID0/1/10/1E/5/50/6/60 Cache • SAS Serial Attached SCSI Card SAS RAID 2 cache • RAID PCIe <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <ul style="list-style-type: none"> • 12 D 2 3.5 4 3.5 SAS/SATA 2 2.5 • 25 3 2.5 • NVMe SATADOM SATADO M SoftRAID BIOS Legacy </div> |
| | <p>6 IO</p> <ul style="list-style-type: none"> • 2 GE NC-SI WOL PXE • 4 GE NC-SI WOL PXE • 2 10GE NC-SI PXE • 2 10GE NC-SI WOL PXE • 2 56G IB NC-SI WOL PXE • 1 56G IB NC-SI WOL PXE |
| PCIe | <ul style="list-style-type: none"> • 6 PCIe 3.0 x8 PCIe 1 RAID PCIe 5 ◦ IO 1 PCIe 3.0 x16 PCIe 3.0 x8 1 1 PCIe 3.0 x8 IO PCIe CPU2 ◦ 2 PCIe 3.0 x8 PCIe CPU1 • IO PCIe ES3000 V2 SSD 2 ES30 • PCIe K2000 NVS 315 GPU <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <ul style="list-style-type: none"> • 2 2.5 • 2 3.5 <p>IO</p> <ul style="list-style-type: none"> • 1 PCIe 3.0 x16 PCIe 3.0 x8 1 PCIe 3.0 x8 1 PCIe • 2 PCIe 3.0 x16 PCIe 3.0 x8 • 2 2.5 • SSD Riser 2 </div> |

| | |
|--|---|
| | <ul style="list-style-type: none"> • 2 USB 2.0 1 DB-15 VGA 8 2.5 10 3.5 • 2 USB 3.0 1 DB-15 VGA 1 DB-9 1 RJ-45 • 1 USB 3.0 1 SD 2 Mini SSD SATADOM <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> USB windows OS 2 Mini SSD SATADOM RAID OS </div> |
| | 4 |
| | 2 <ul style="list-style-type: none"> • 460W AC 240V • 750W AC 240V • 750W AC • 1200W 380V • 800W-48V -60V |
| | <ul style="list-style-type: none"> • UEFI • Huawei iBMC SNMP IPMI GUI KVM SC • NC-SI • eSight VMware vCenter SystemCenter Na |
| | <ul style="list-style-type: none"> • TPM • |
| | SM750 32MB 60Hz 16M 192 <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <ul style="list-style-type: none"> • Windows Sever 2012 Windows Sever 2012 R2 Windows Server 2016 1920x1200 • 1024x768 </div> |

HUAWEI RH2288H V3

- 01 .mp4
- 02 L RH2288 V3 .mp4
- 03 RH2288 V3 .mp4
- 04 RH2288 V3 .mp4
- 05 RH2288 V3 .mp4
- 06 RH2288 V3 .mp4
- 07 RH2288 V3 .mp4
- 08 RH2288 V3 .mp4
- 09 RH2288 V3 .mp4
- 10 RH2288 V3 Riser .mp4
- 11 RH2288 V3 Riser PCIe .mp4
- 12 RH2288 V3 PCIe .mp4
- 13 RH2288 V3 .mp4
- 14 RH2288 V3 RAID .mp4
- 15 RH2288 V3 .mp4
- 16 RH2288 V3 CPU.mp4
- 17 RH2288 V3 DIMM.mp4
- 18 RH2288 V3 .mp4

- 19 RH2288 V3 .mp4
- 20 RH2288 V3 .mp4
- 21 RH2288 V3 .mp4

RAID-

RAID

RAID RAID

RAID

•

2.

1. "Adapter Properties" "SAS Topology" "Enter"
"SAS Topology"
2. "SAS Topology" "↑" "↓" "ALT+B" "ALT+A"
"Direct Attach Devices" "Enter"
"Device Info" "Boot" 7-10 "Device Info" "Alt"

7-10

```
Avago Technologies Config Utility      v8.35.00.00 (2017.05.03)
SAS Topology -- SAS3008
SAS3008(1C:00)
└─ Controller
   └─ Slot 4
      └─ Slot 5
         ┌─ Device Identifier
         │   Direct Attach Devices
         │   ───────────────────
         │   HUAWEI HWE52SS3960L005H 3232
         │   HUAWEI HWE52SS3960L005N 3232
         └─ Device Info
            Controller
            SAS-SSD, Alt
            SAS-SSD, Boot
```

Esc = Exit F1/Shift+1 = Help
Alt+D = Device Properties Alt+M = More Keys

3. "ESC"
4. "Save changes then exit this menu" "Enter"

RAID- LEGACY

legacy


iBMC iMana 200

1. [A-6 BIOS](#) "Delete"

BIOS

A-6BIOS


Image not found or type unknown

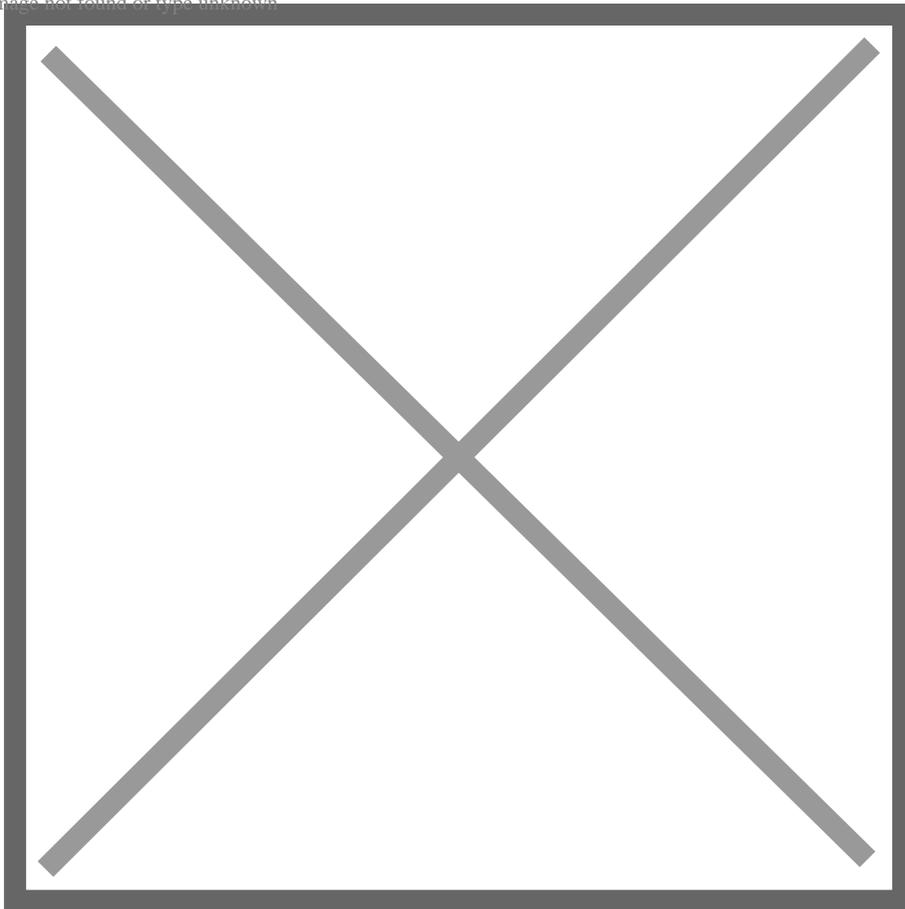

2. BIOS "Boot" RAID "LEGACY"

- Grantley "Boot Type" "Legacy Boot Type" Grantley LEGACY
A-7Grantley LEGACY

Image not found or type unknown

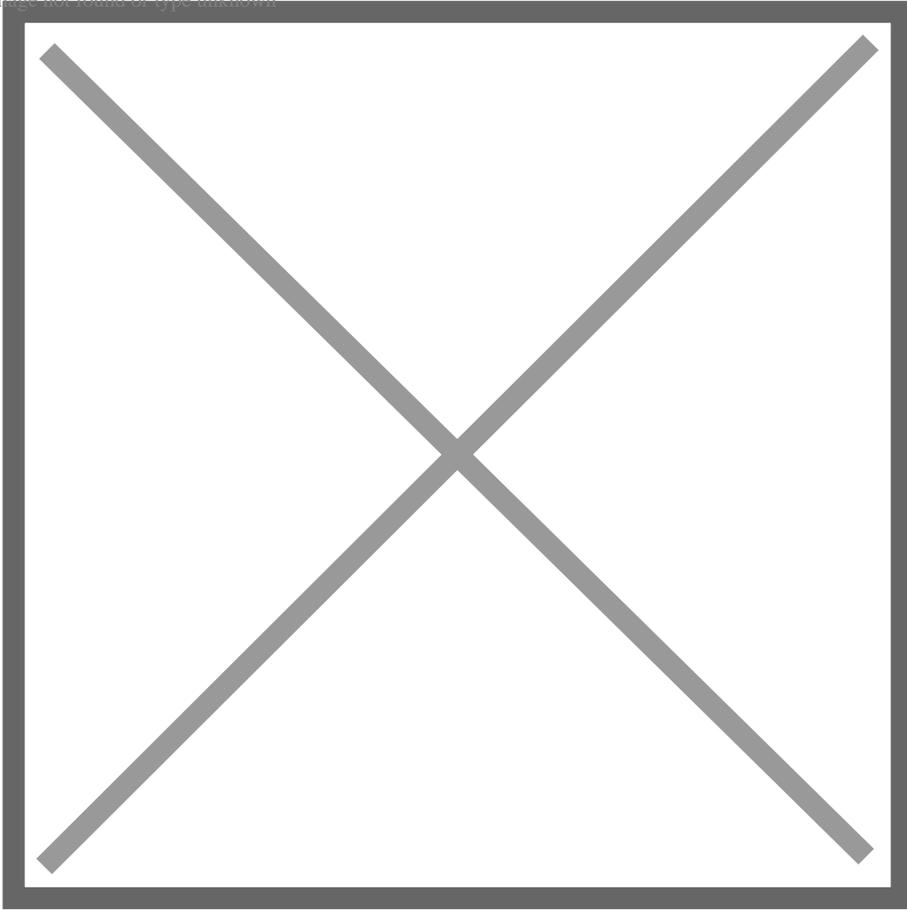

- Romley "Boot Type" "Legacy Boot Type" ~~AT&P~~ Romley LEGACY

RAID-SAS Topology

SAS Topology

LSI SAS3008IT


7-13 SAS Topology7-4

“↑” “↓”

“Enter”

7-13 SAS Topology

Image not found or type unknown

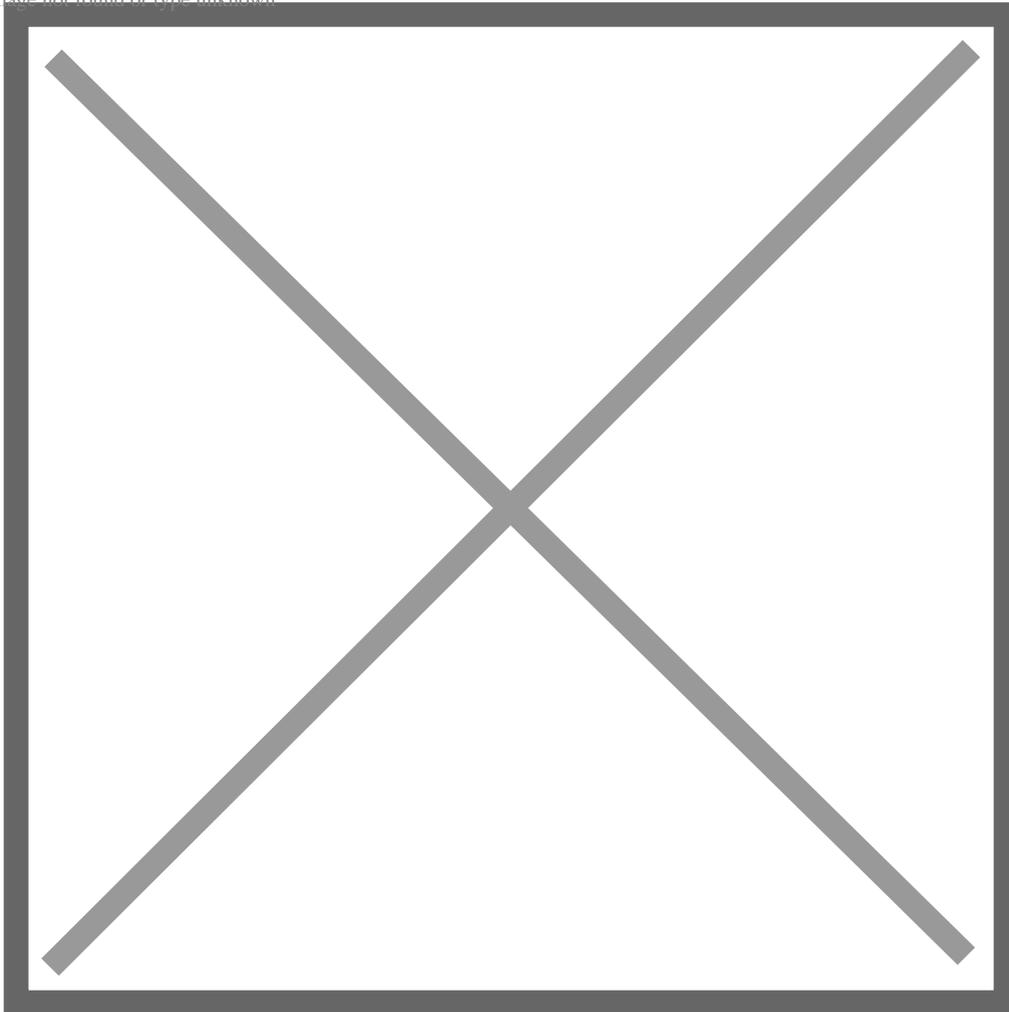

7-4

| | |
|-------------------|--|
| Device Identifier | |
| Device Info | |

“Enter”

/


“ALT+D”

7-14

- Format
- Verify

7-14

Image not found or type unknown

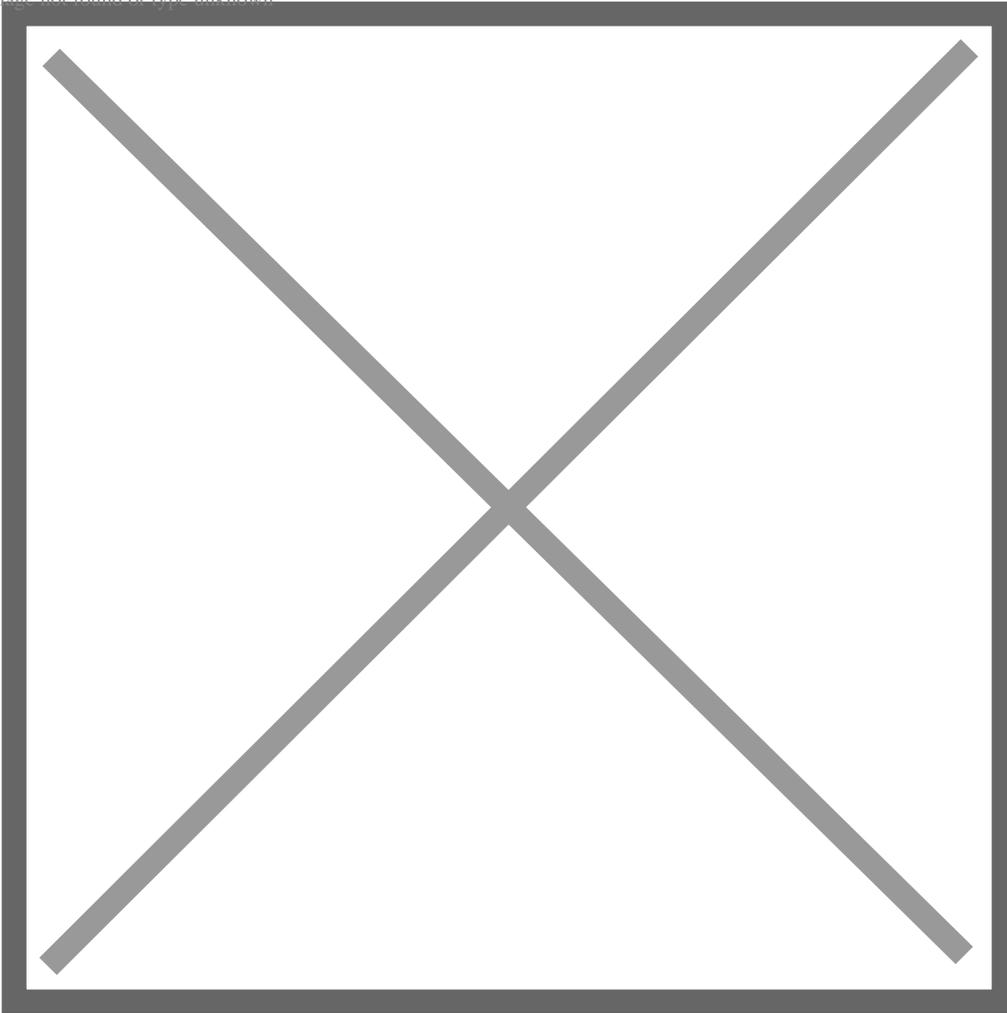

RAID-


CU

1. "LEGACY" [LEGACY](#)
- 2.

1. [7-3](#) "Press Ctrl-C to start LSI Corp Configuration Utility..." "Ctrl+C"
"Please wait invoking SAS Configuration Utility..."

7-3

Image not found or type unknown

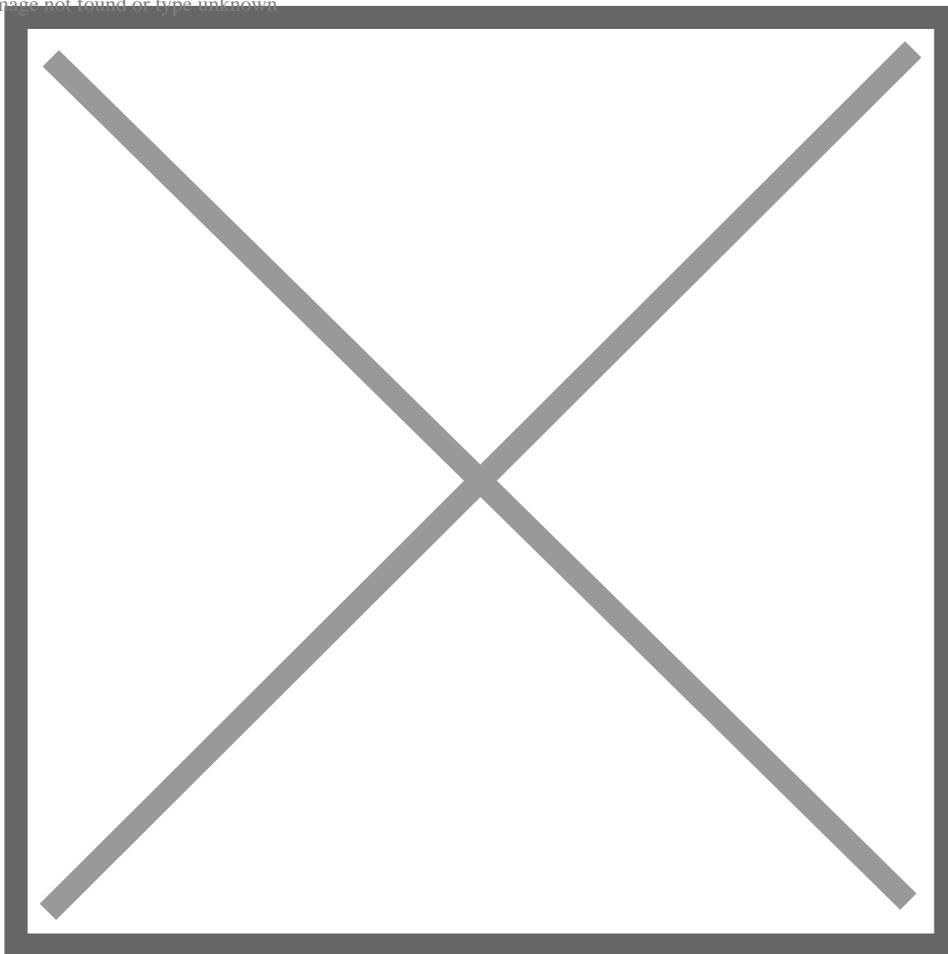

2. [7-4 CU](#)
[7-4CU](#)

Image not found or type unknown


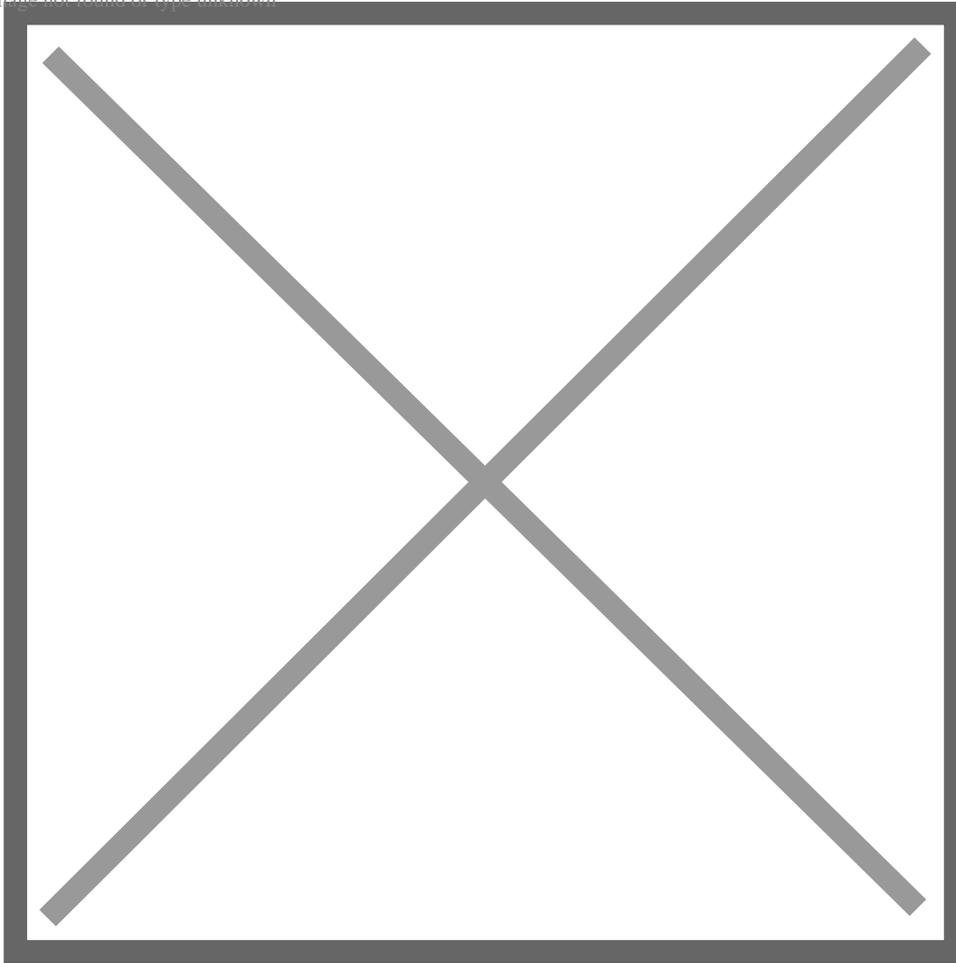


Image not found or type unknown

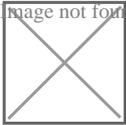

RAID

RAID

RAID

RAID

7-2


| | |
|-------------|--|
| Adapter | RAID |
| PCI Bus | PCI |
| PCI Dev | PCI |
| PCI Fnc | PCI |
| PCI Slot | PCI |
| FW Revision | |
| Status | <p>RAID</p> <ul style="list-style-type: none"> • Enabled RAID • Disabled RAID • Error RAID RAID |
| Boot Order | <p>RAID</p> <p>Boot Order RAID</p> |

3. RAID

7-5 RAID RAID "Boot Order" RAID


7-5 RAID 1

Image not found or type unknown

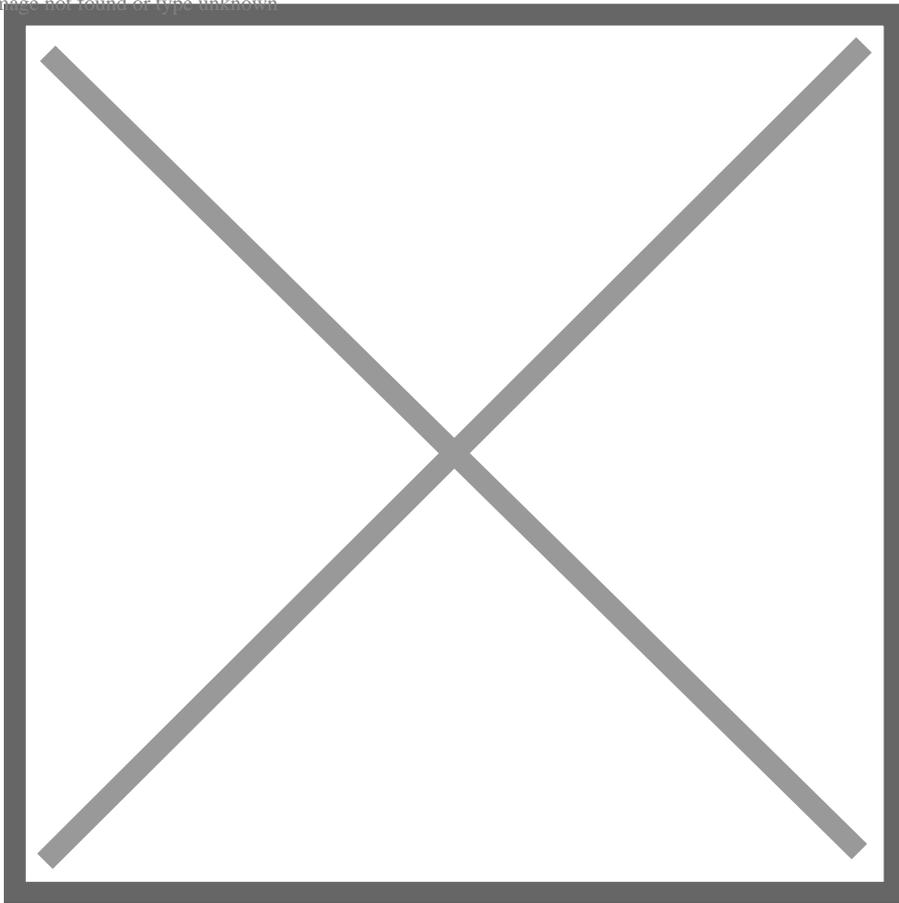

1. "Boot Order" 7-6 " RAID RAID "SAS3008"
7-6 RAID 2

Image not found or type unknown

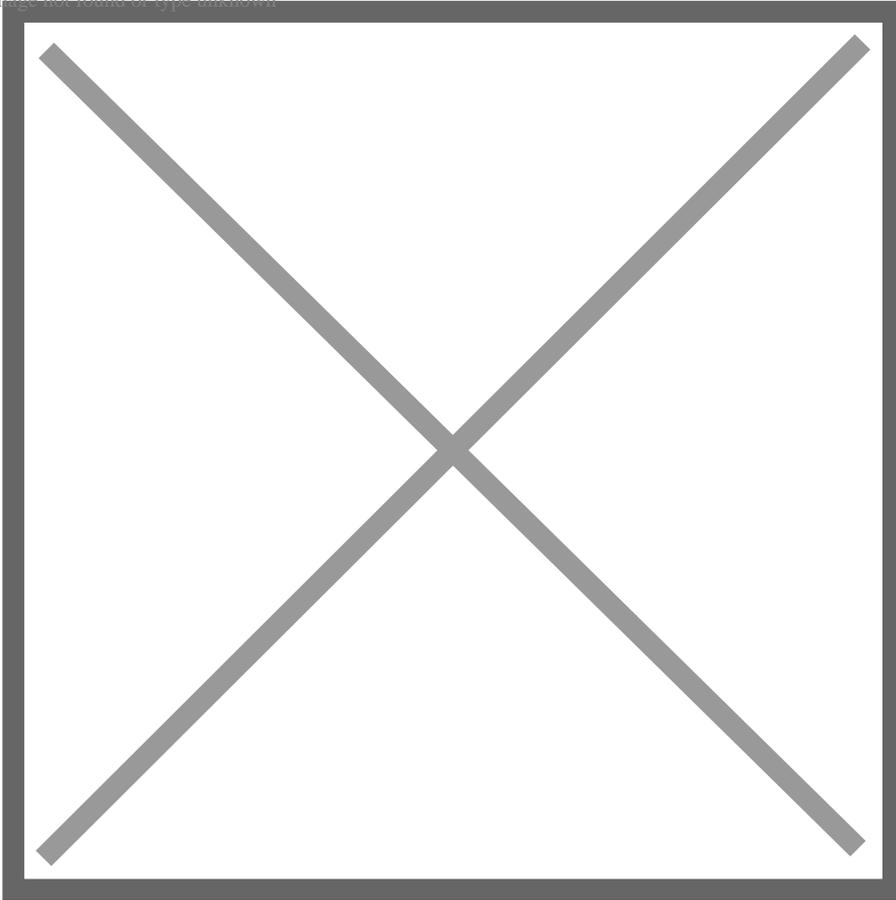


2. "Esc"

7-7

7-7

Image not found or type unknown

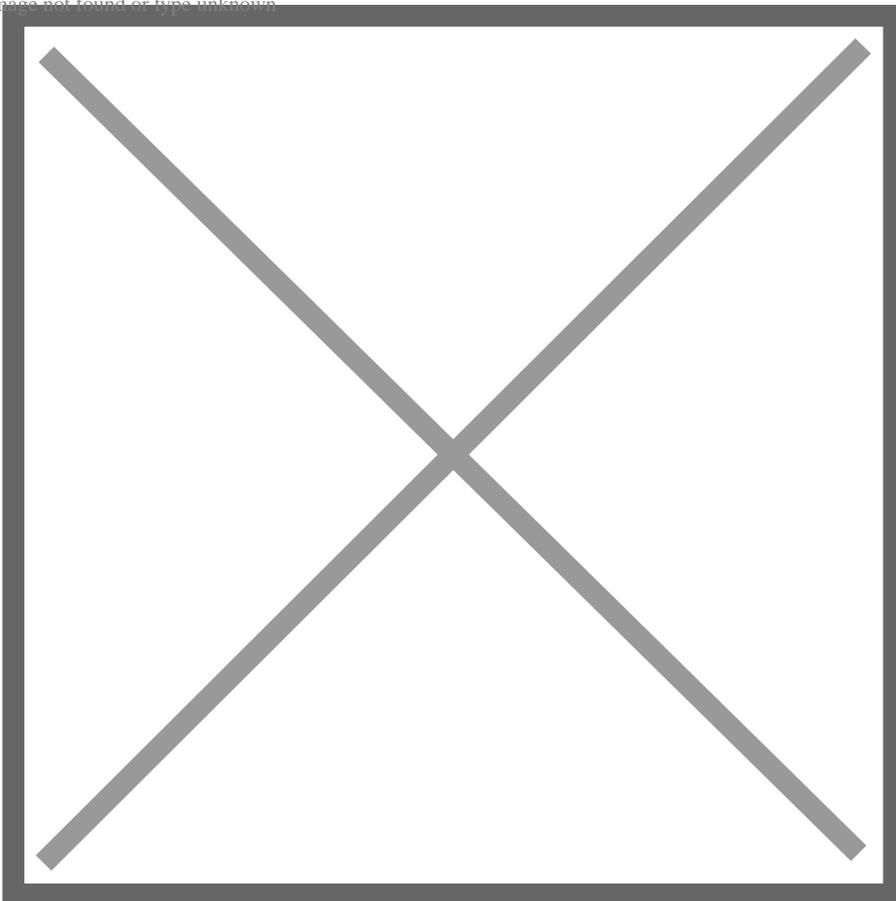

3. "Save changes and reboot." "Enter"
4. [7-8](#) "Press Ctrl-C to start LSI Corp Configuration Utility..." "Ctrl+C"
CU

7-8

Image not found or type unknown

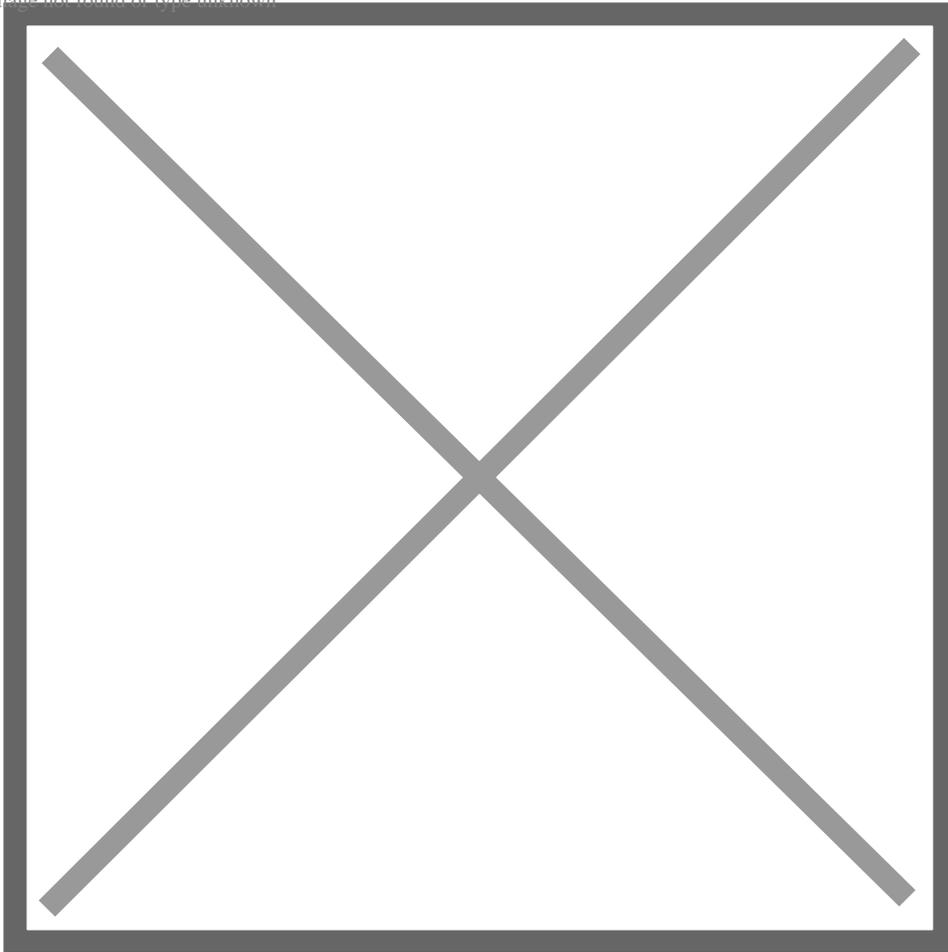


Image not found or type unknown




BIOS

- Grantley [Grantley " BIOS "](#)
- Brickland [Brickland " BIOS "](#)
- Romley [Romley " BIOS "](#)

4. LSI SAS3008IT "Enter"

["Adapter Properties7-9 Adapter Properties7-3 Adapter Properties](#)
[7-9Adapter Properties](#)

Image not found or type unknown

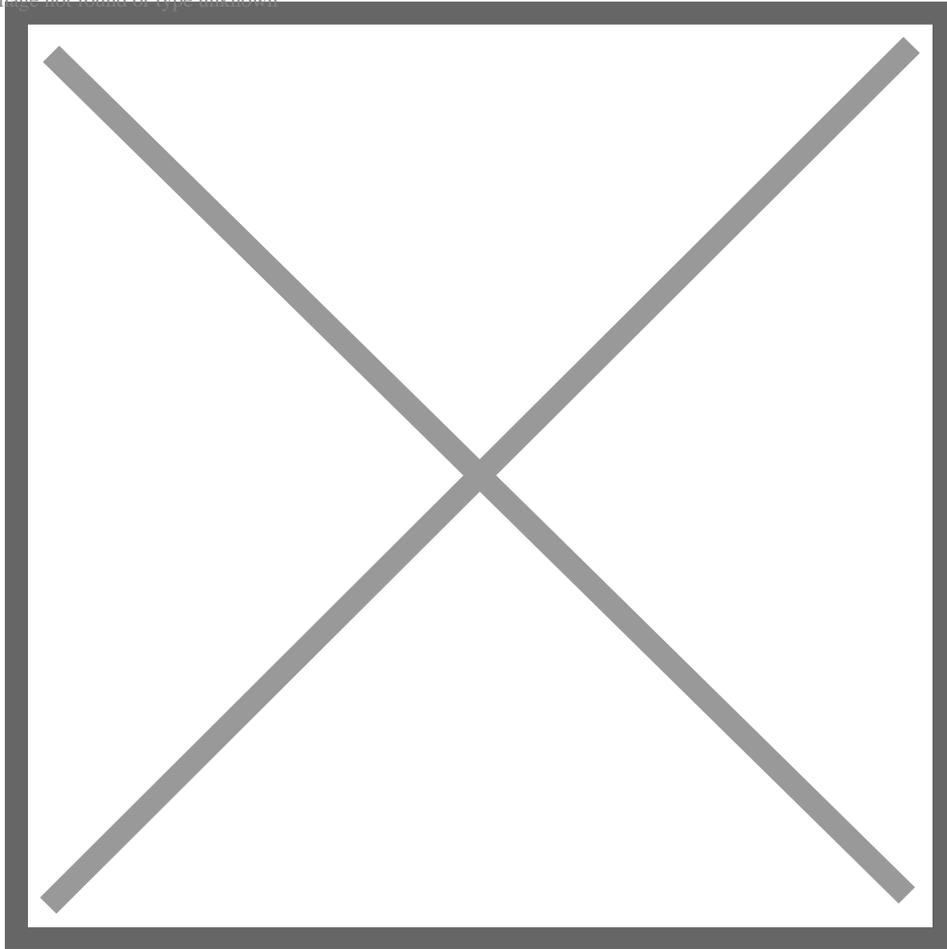

7-3Adapter Properties

| | |
|-----------------------|--|
| Adapter | RAID |
| PCI Slot | PCI |
| PCI Address (Bus/Dev) | PCI |
| MPT Firmware Revision | 3008 MPT |
| SAS Address | 3008 SAS |
| NVDATA Version | 3008 |
| Status | 3008 |
| Boot Order | RAID 1 RAID "0" |
| Boot Support | <ul style="list-style-type: none">• Enabled BIOS & OS BIOS OS RAID• Enabled BIOS Only BIOS RAID• Enabled OS Only OS RAID• Disabled BIOS OS RAID |

RAID-

LSI SAS3008IR RAID 1/1E/10 2

LSI SAS3008IR

Image not found or type unknown



- RAID
- RAID RAID
- RAID 0 RAID


RAID

•

2.


1. "Adapter Properties" "RAID Properties" "Enter"
 "Select New Volume Type" [6-35 Select New Volume Type](#)
 6-35Select New Volume Type

Image not found or type unknown

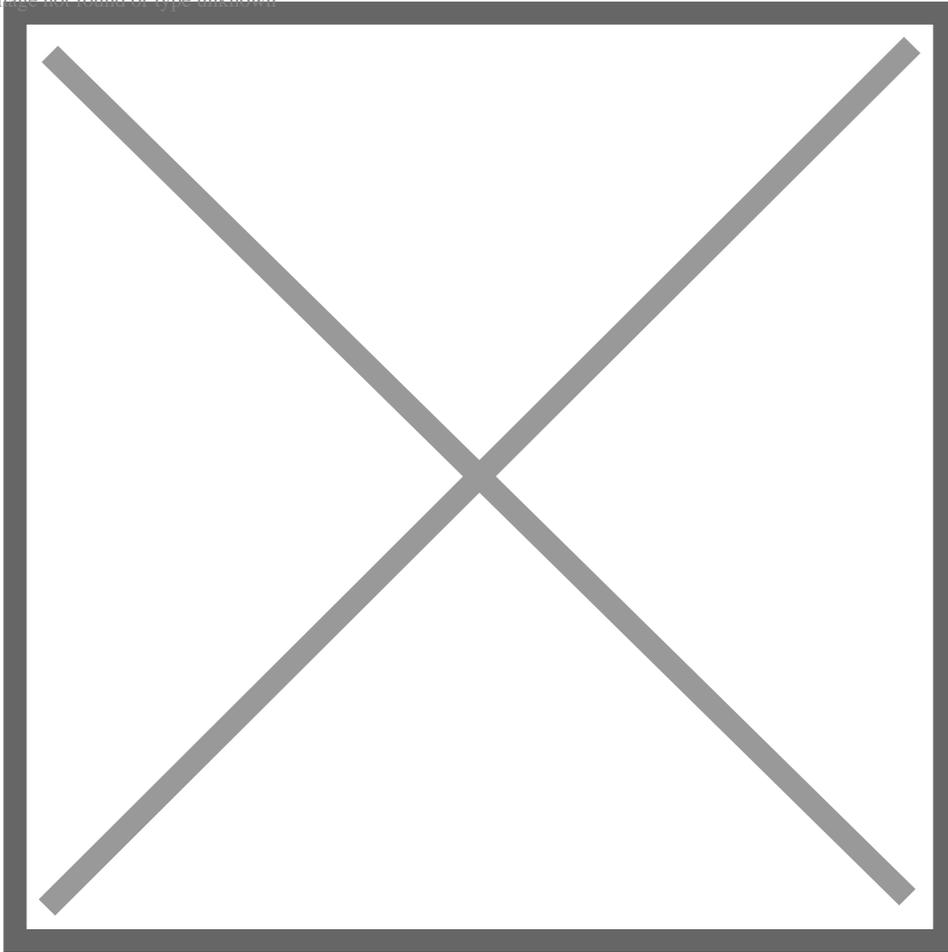


2. "Select New Volume Type" "View Existing Volume" "Enter"
"View Volume" [6-36 View Volume](#)
6-36View Volume

Image not found or type unknown

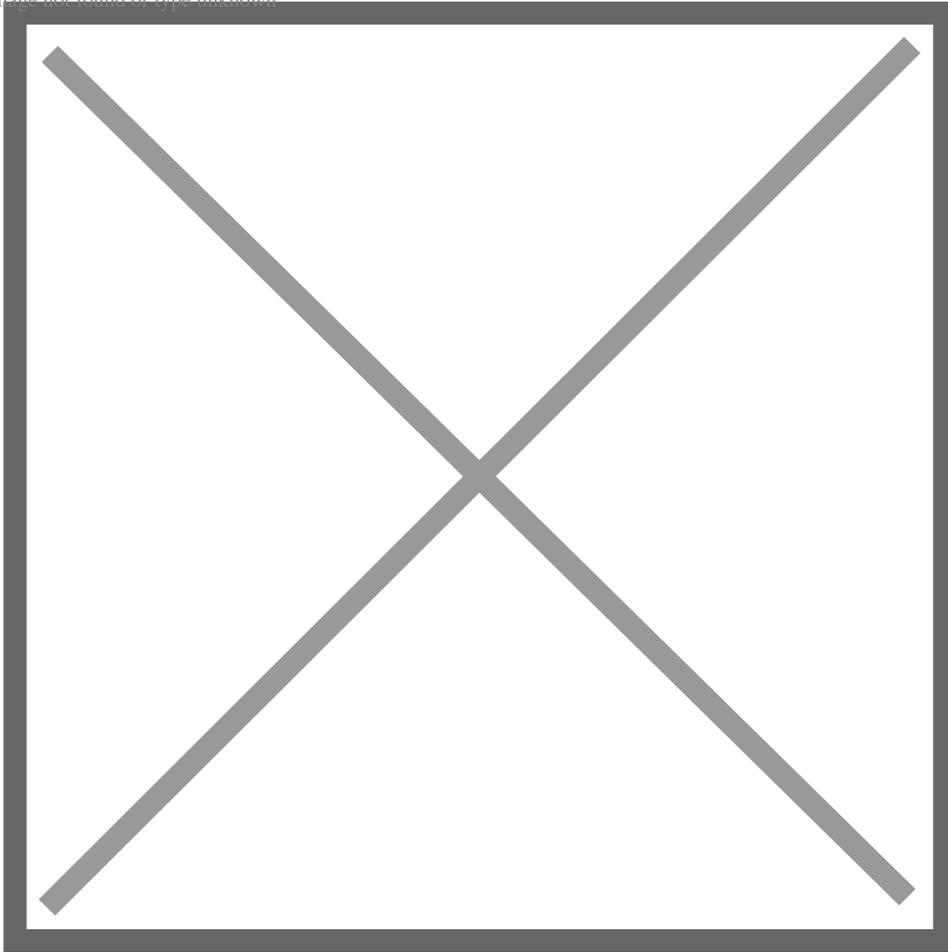

3. "Manage Volume" "Enter"
"Manage Volume"
6-37Manage Volume

Image not found or type unknown

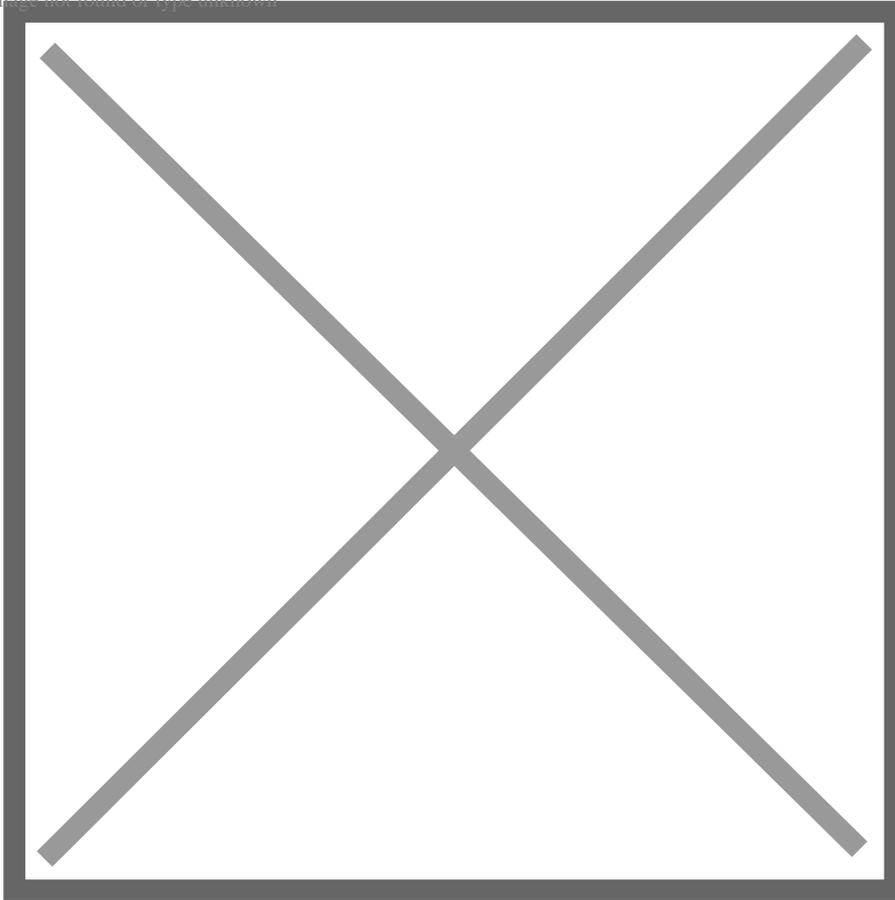


4. "Manage Hot Spares" "Enter"
"Manage Hot Spares"

5. RAID

 Image not found or type unknown

"Hot Spr" "6-38" RAID
"Hot Spr" "Yes" RAID
6-38

Image not found or type unknown

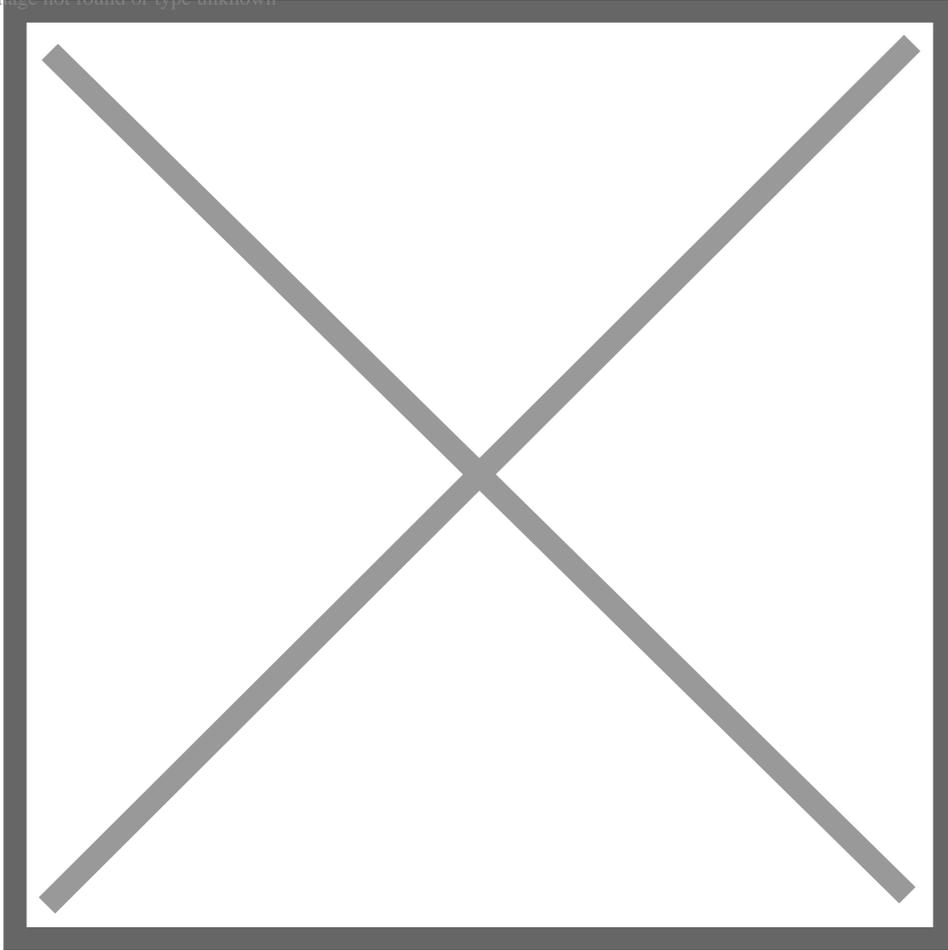

6. "C"
7. "Save changes then exit this menu" "Enter"

RAID 1 CU

[6-37 Manage Volume](#)

RAID-


2.

1. "Adapter Properties" "RAID Properties" "Enter"

"Select New Volume Type" [6-39 Select New Volume Type](#)

6-39 Select New Volume Type

Image not found or type unknown

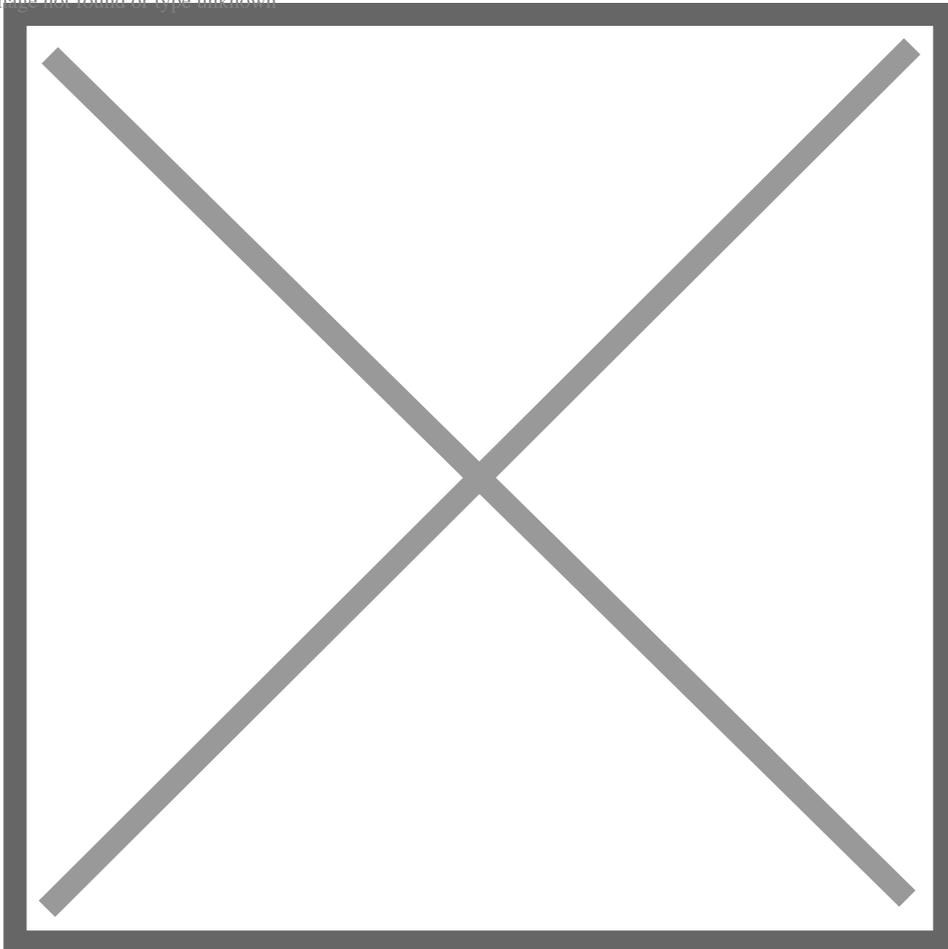


2. "Select New Volume Type" "View Existing Volume" "Enter"

"View Volume" [6-40 View Volume](#)


6-40 View Volume

Image not found or type unknown

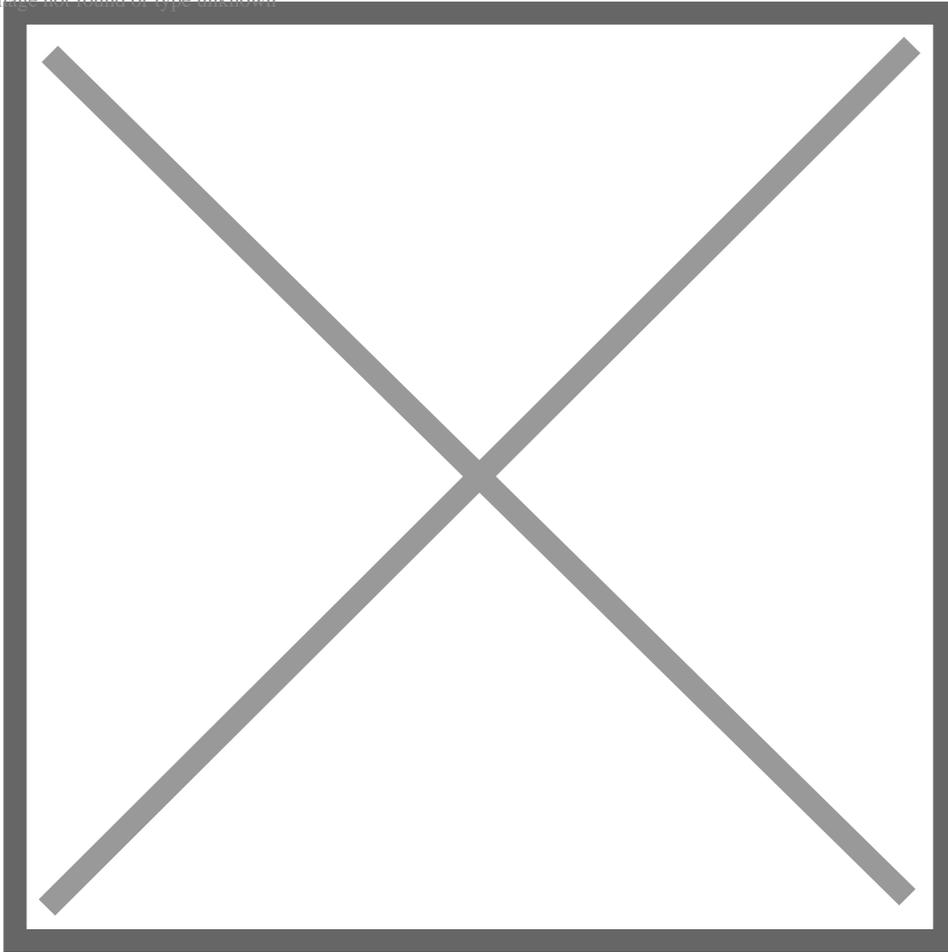

3. "Manage Volume" "Enter"
"Manage Volume"
6-41Manage Volume

Image not found or type unknown

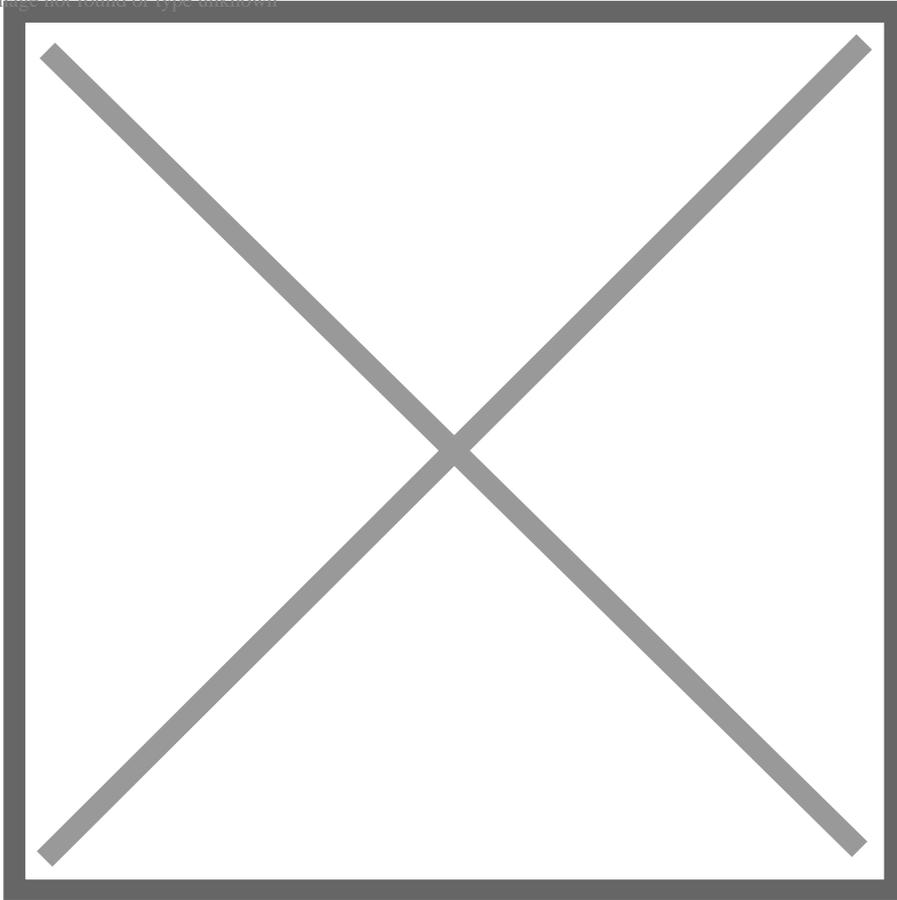

4. "Manage Hot Spares" "Enter"
"Manage Hot Spares"


5.

"Hot Spr" [6-41 Manage Volume RAID](#)

"Hot Spr" "No"

6-42

Image not found or type unknown

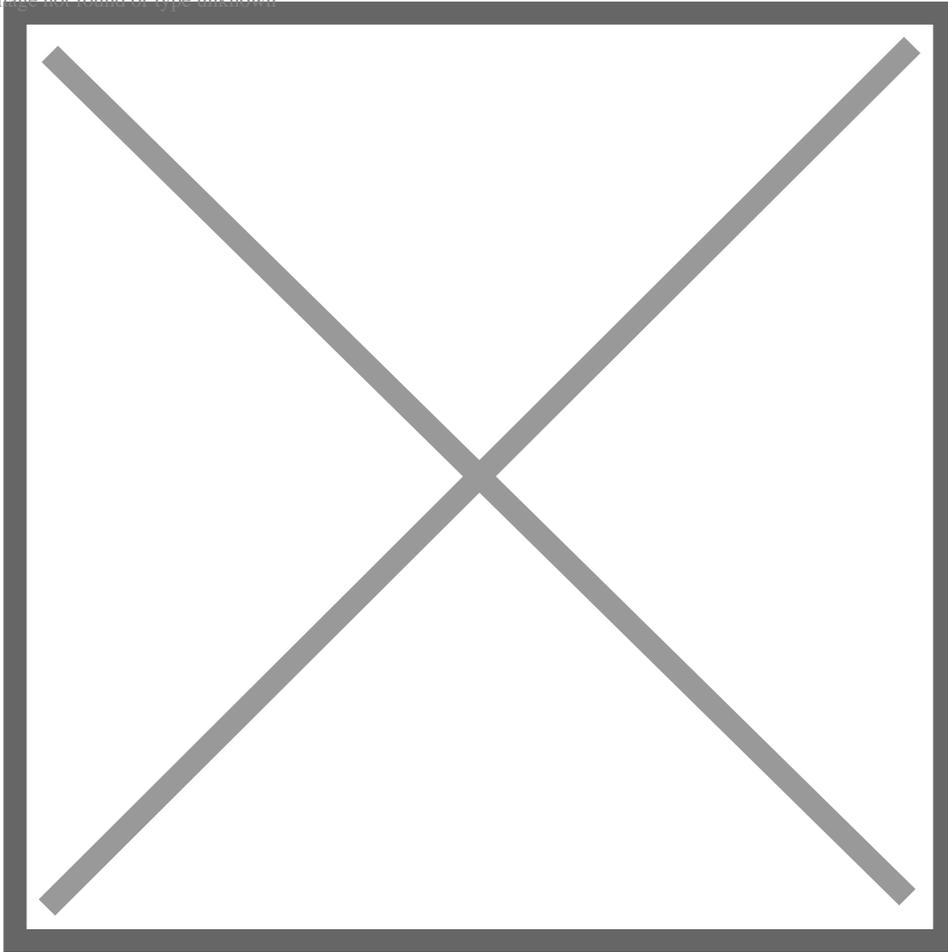

6. "C"
7. "Save changes then exit this menu" "Enter"

6-41 Manage Volume

RAID- RAID


RAID

- RAID RAID RAID
- RAID RAID RAID

2. RAID

1. "Adapter Properties" "RAID Properties" "Enter"
"Select New Volume Type" [6-43 Select New Volume Type](#)
6-43 Select New Volume Type

Image not found or type unknown

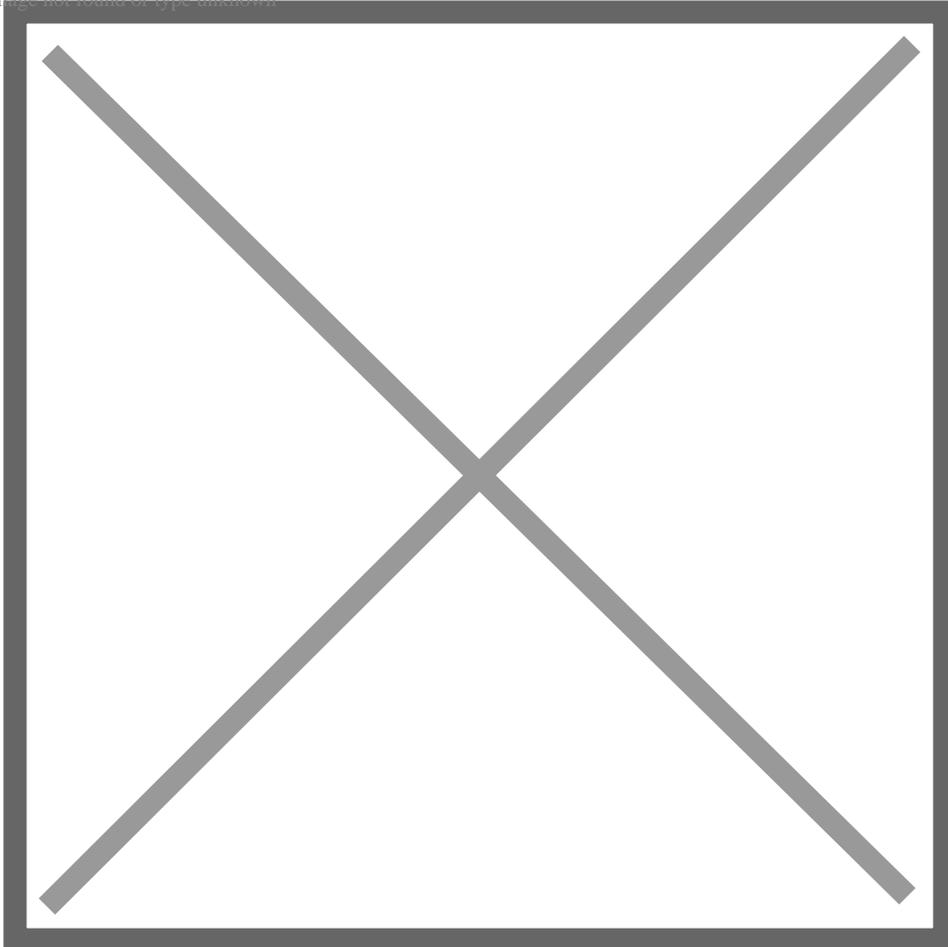


2. "Select New Volume Type" "View Existing Volume" "Enter"

“View Volume” “Enter”


6-44View Volume

Image not found or type unknown

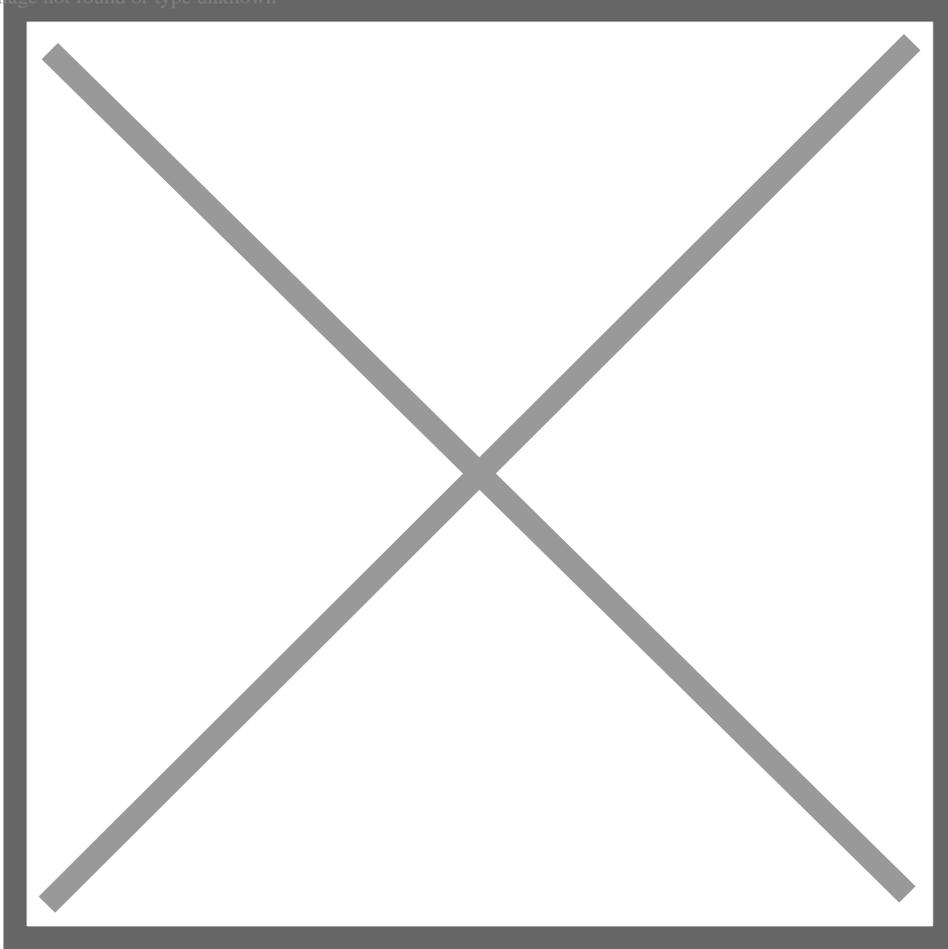

3. “Manage Volume” “Enter”
“Manage Volume”
6-45Manage Volume

Image not found or type unknown

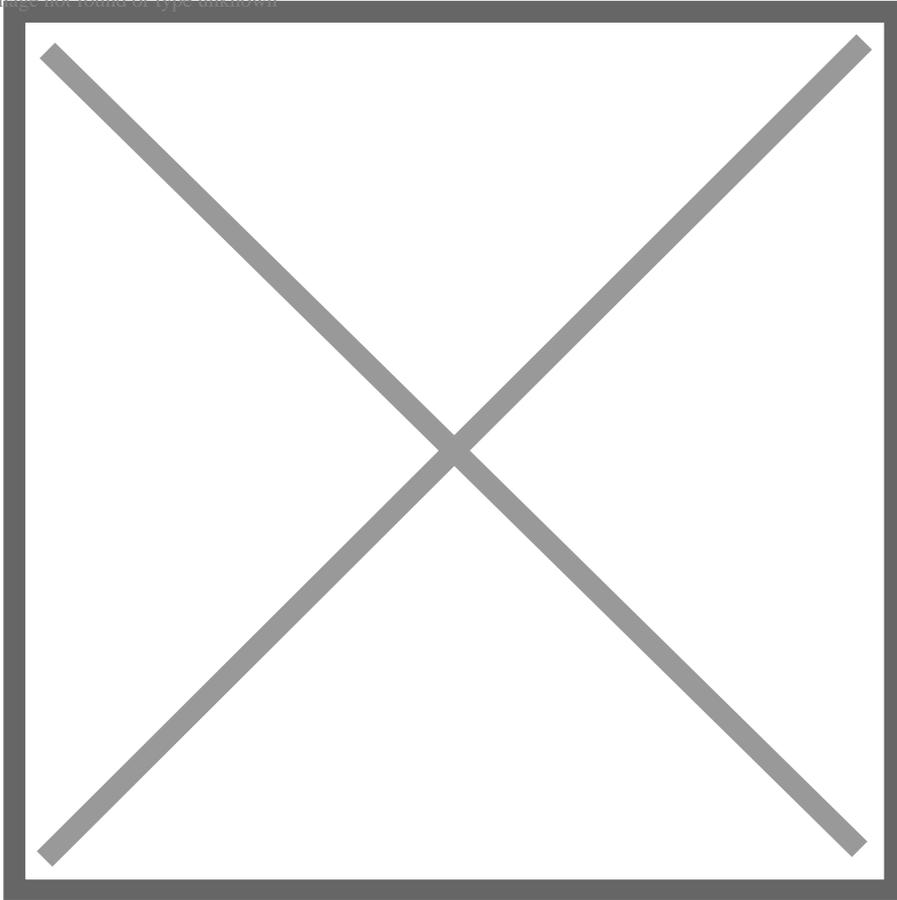

4. "Activate Volume" "Enter"

5.

- "Y"

[RAID-10 Adapter Properties](#)

- "N"

[RAID Manage Volume](#)


RAID-

1. "Adapter Properties" "RAID Properties" "Enter"
3. "View Existing Volume" "Enter"

RAID 6 "View Volume" 6-13 View Volume

6-46 "View Volume"

Image not found or type unknown

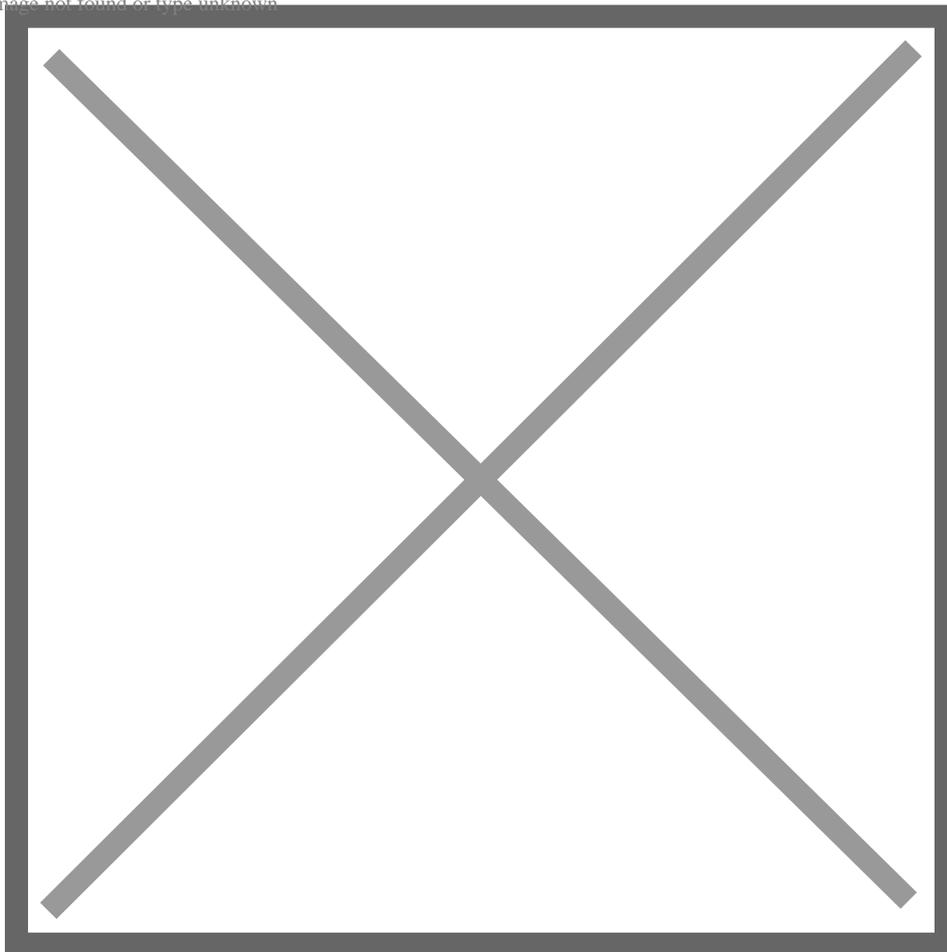

6-13 View Volume

| | |
|------------|------------------|
| Volume | RAID 3008 2 RAID |
| Identifier | RAID |
| Type | RAID |
| Size | RAID |
| Status | RAID |
| Task | RAID None RAID |

| | |
|-------------------|--|
| Slot Num | RAID |
| Device Identifier | |
| RAID Disk | RAID • Yes RAID • No RAID |
| Hot Spr | • Yes • No |
| Drive Status | |
| Pred Fail | RAID Fail • Yes RAID Fail • No |
| Disk Size | |

Image not found or type unknown



LSI SAS3008IR RAID "Alt+N" RAID RAID


RAID-

1. "Adapter Properties" "SAS Topology" "Enter"

"SAS Topology" SAS Topology

6-47 SAS Topology

6-47 SAS Topology

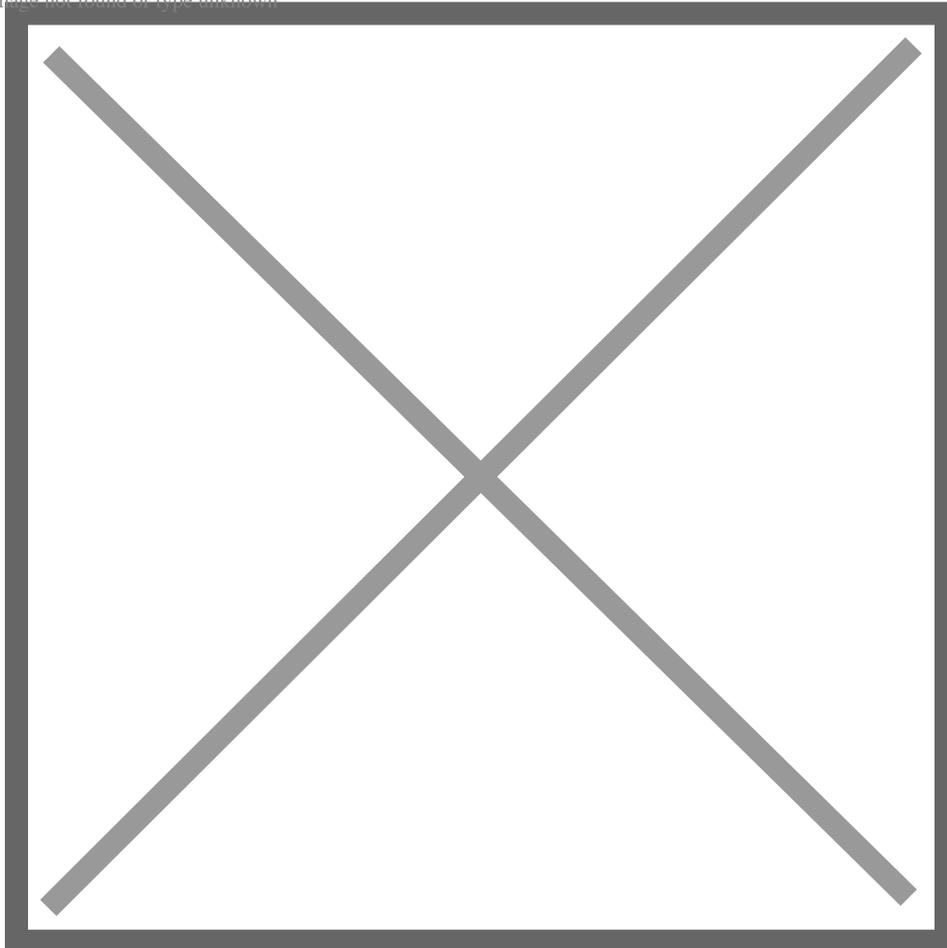

6-14

| | |
|-------------------|--|
| Device Identifier | |
| Device Info | |

RAID- RAID

RAID

 Image not found or type unknown

RAID

RAID


2. RAID

1. "Adapter Properties" "RAID Properties"

"Enter" "Select New Volume Type" [6-48 Select New Volume Type](#)

6-48 Select New Volume Type

 Image not found or type unknown

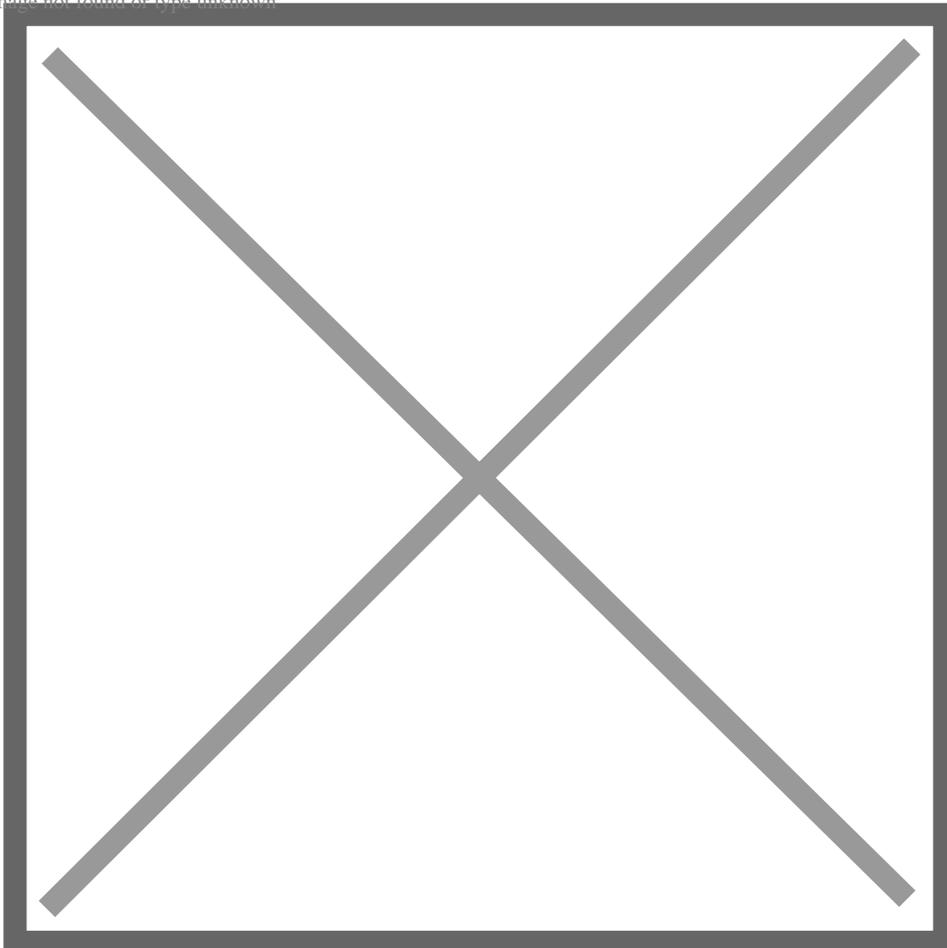


2. "Select New Volume Type" "View Existing Volume"

"Enter" "View Volume" [6-49 View Volume](#)


6-49View Volume

Image not found or type unknown

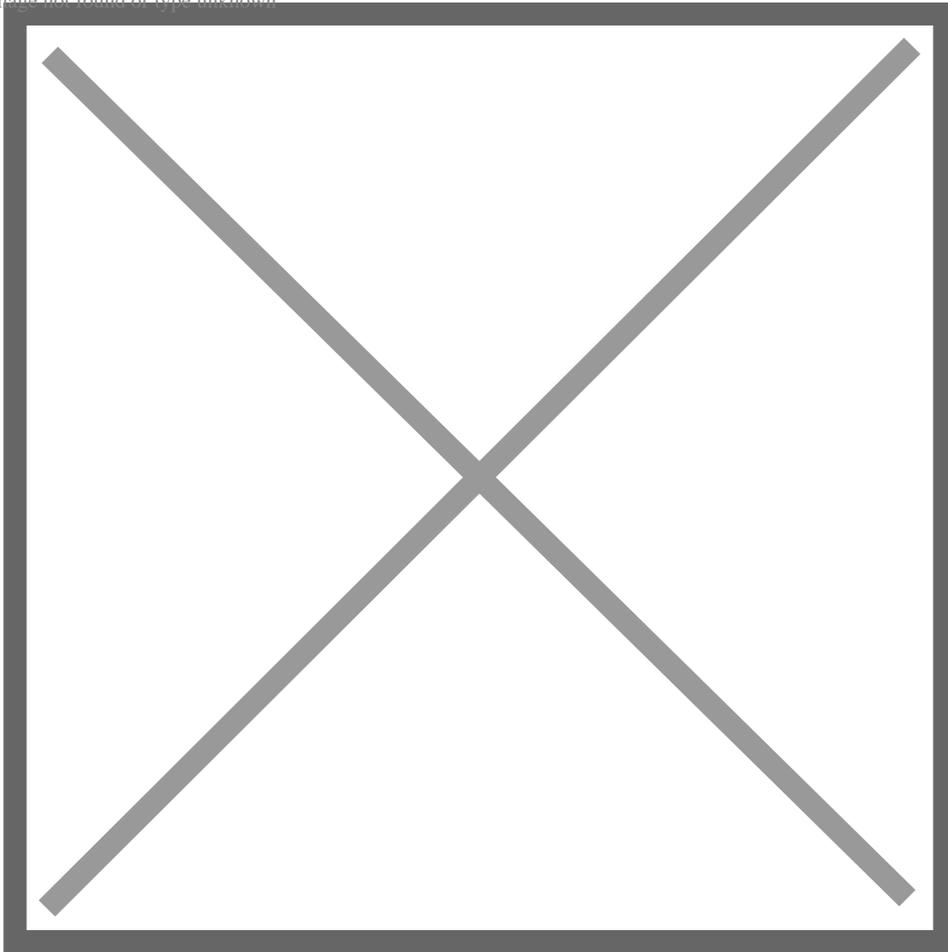

3. "Manage Volume" "Enter"
"Manage Volume"
6-50Manage Volume

Image not found or type unknown

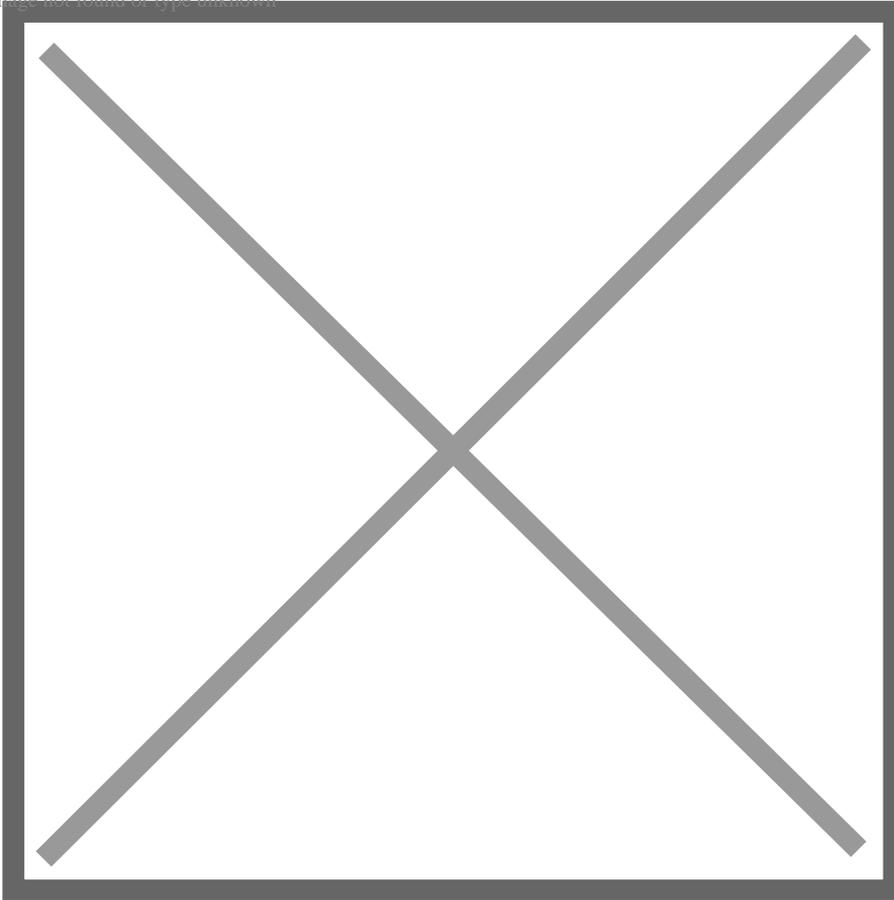

4. "Delete Volume" "Enter"
"Delete Volume"

 Image not found or type unknown

RAID

- 5.

- "Y"

[RAID-10 Adapter Properties](#)

- "N"

[RAID2 Manage Volume](#)

RAID-

RAID 1/10/1E


2.

1. "Adapter Properties" "RAID Properties"

"Enter" "Select New Volume Type" [6-51 Select New Volume Type](#)

6-51 Select New Volume Type

Image not found or type unknown

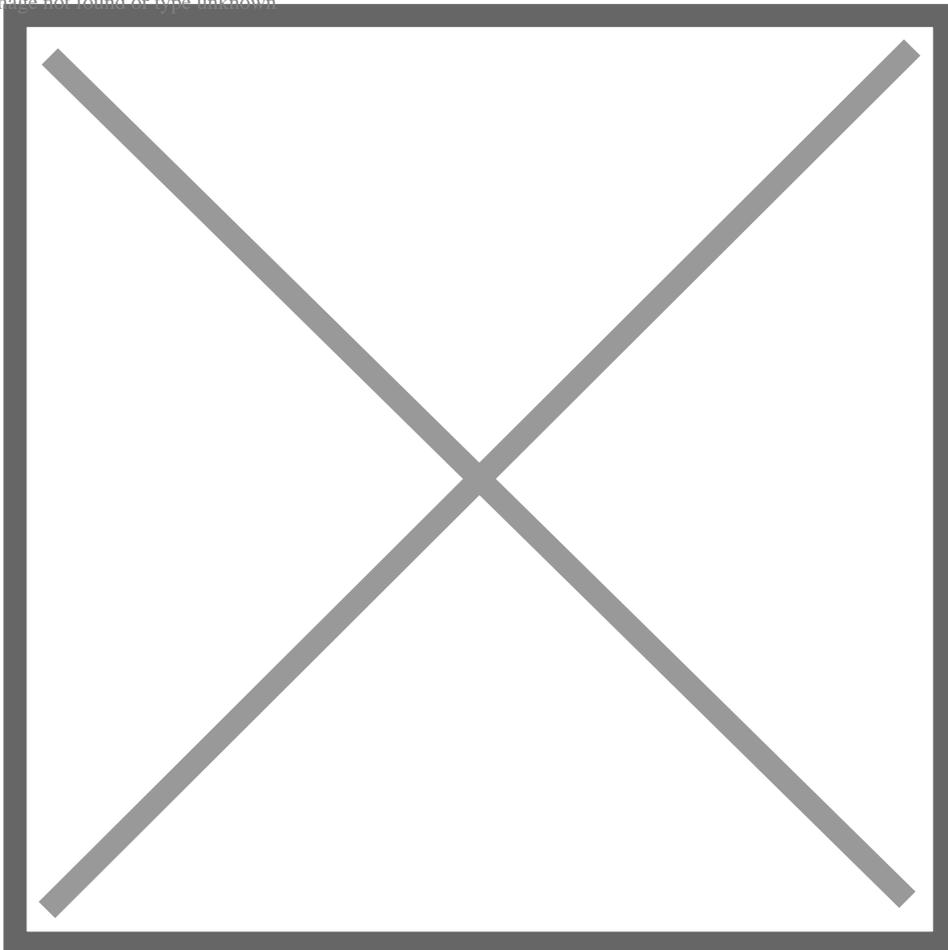


2. "Select New Volume Type" "View Existing Volume"

"Enter" "View Volume" [6-52 View Volume](#)


6-52 View Volume

Image not found or type unknown

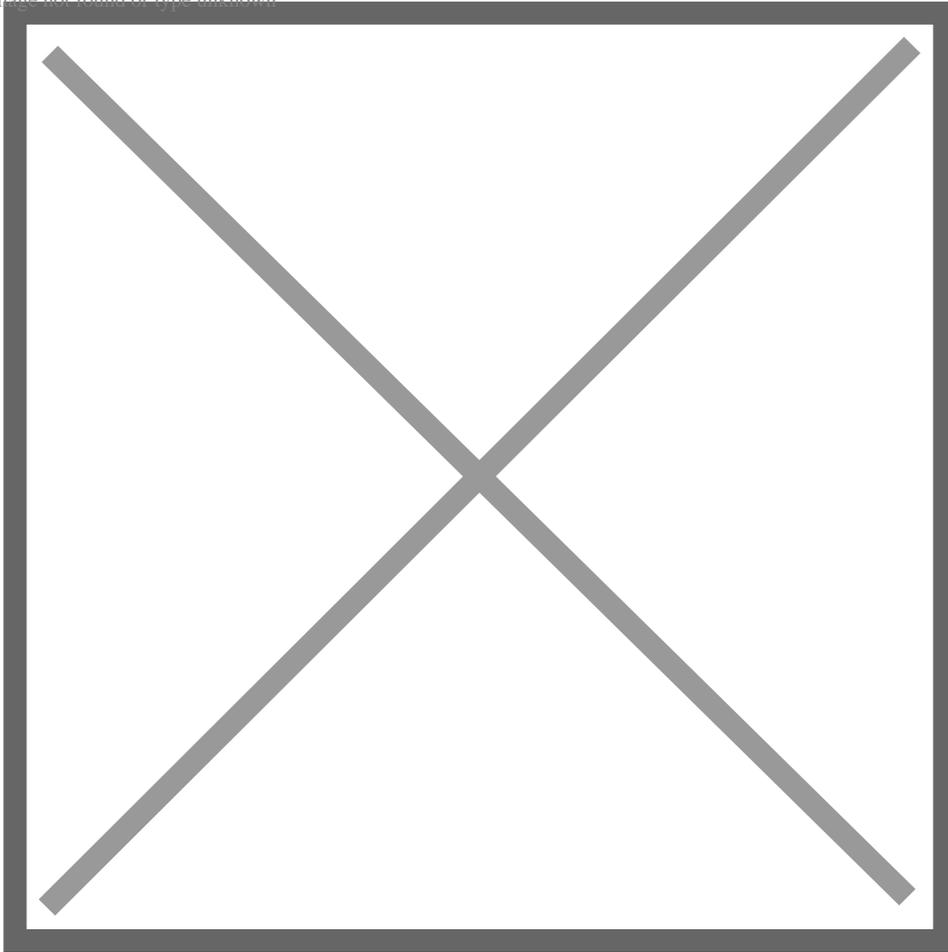

3. "Manage Volume" "Enter"
"Manage Volume"
6-53Manage Volume

Image not found or type unknown

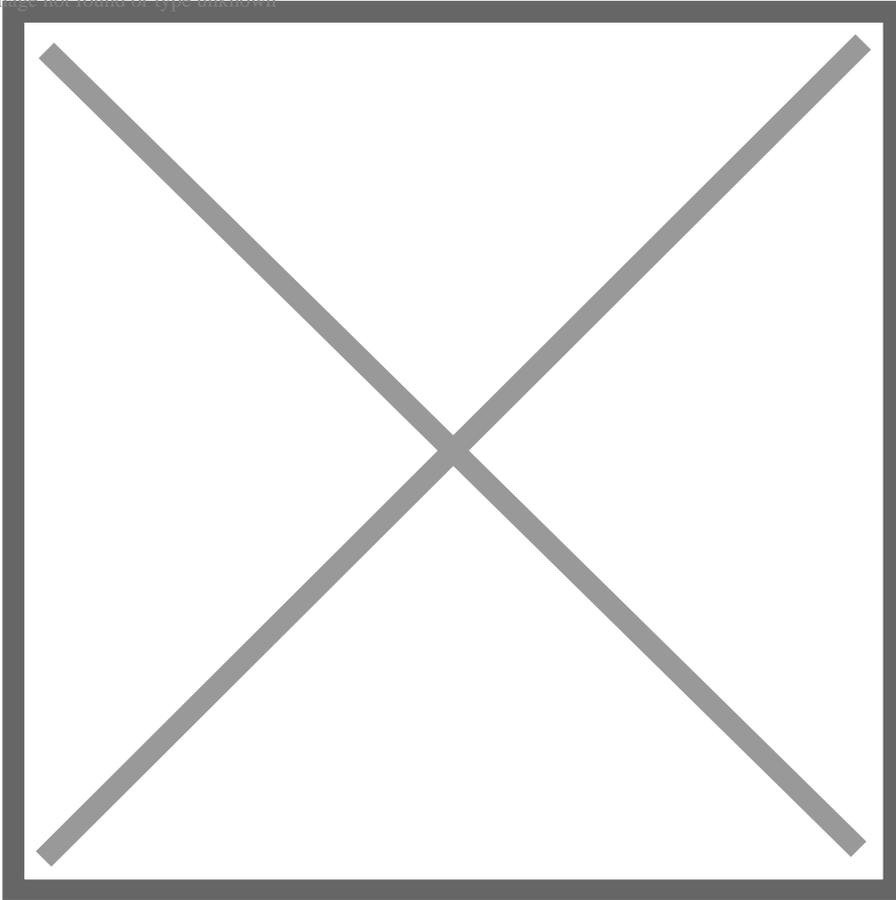

4. "Consistency Check" "Enter"
"Consistency Check"

5.

- "Y"

[6-10 Adapter Properties](#)

- "N"


[6-82 Manage Volume](#)

RAID-

2.

1. "Adapter Properties" "SAS Topology"
"Enter" "SAS Topology" [6-54 SAS Topology](#)
6-54 SAS Topology

Image not found or type unknown

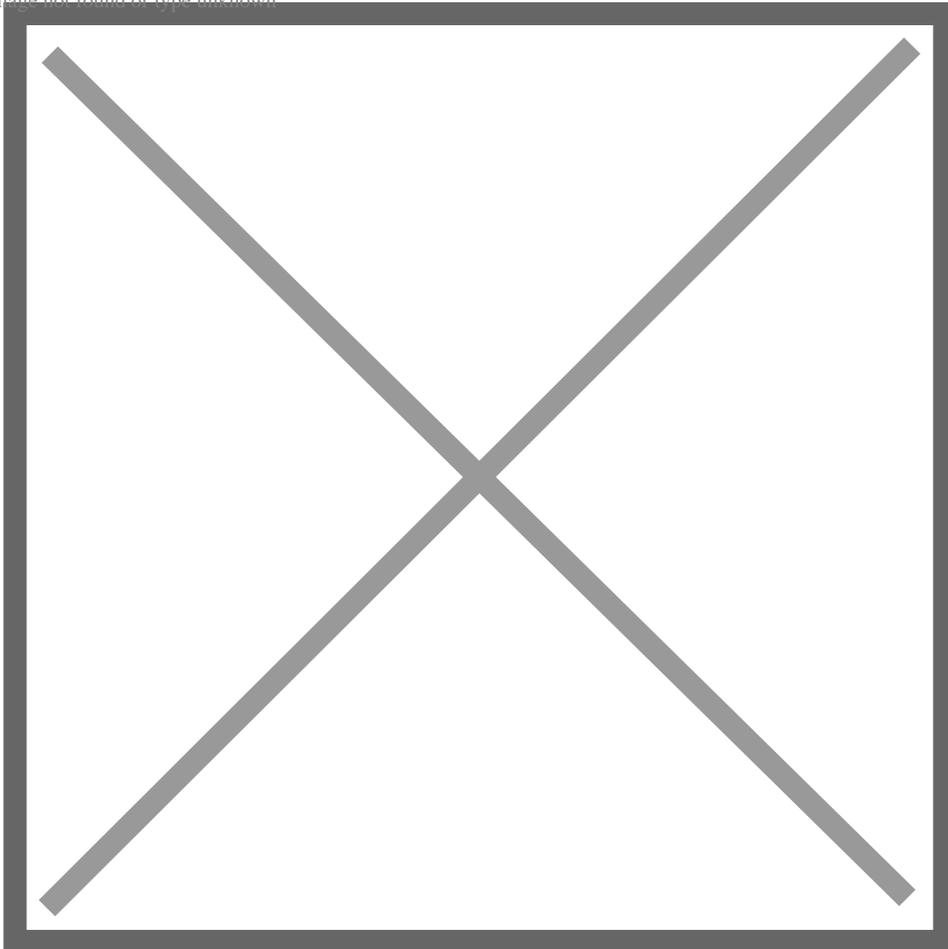

1. "Enter"

Image not found or type unknown



- OS

/

Image not found or type unknown




-
1. "ALT+D"

6-55

- Format
- Verify

6-55

Image not found or type unknown

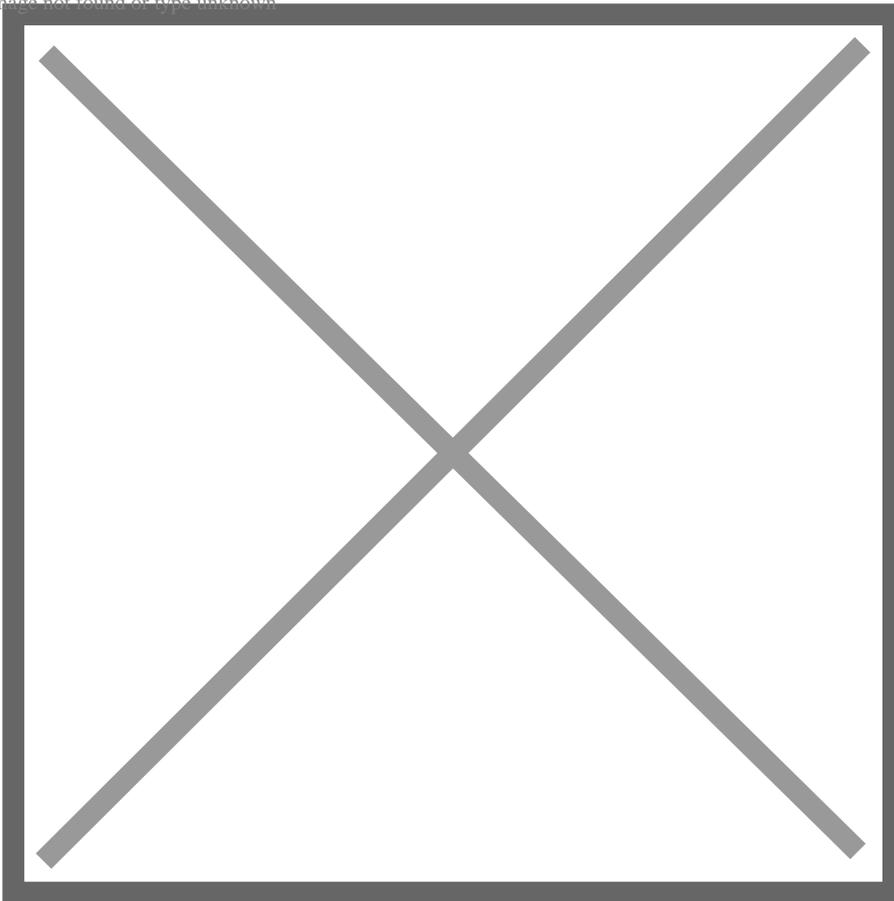


- 2.

1. "Format" "Enter"

6-56

6-56

Image not found or type unknown

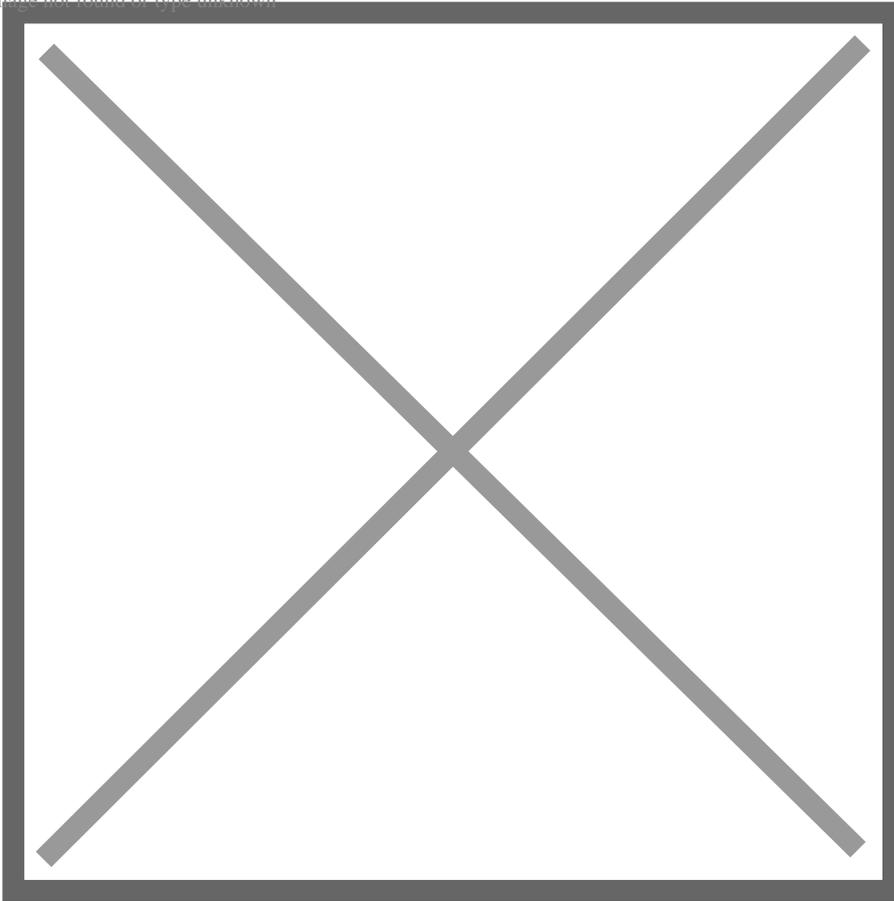


2. "F"

~~6-50~~%

6-57

Image not found or type unknown

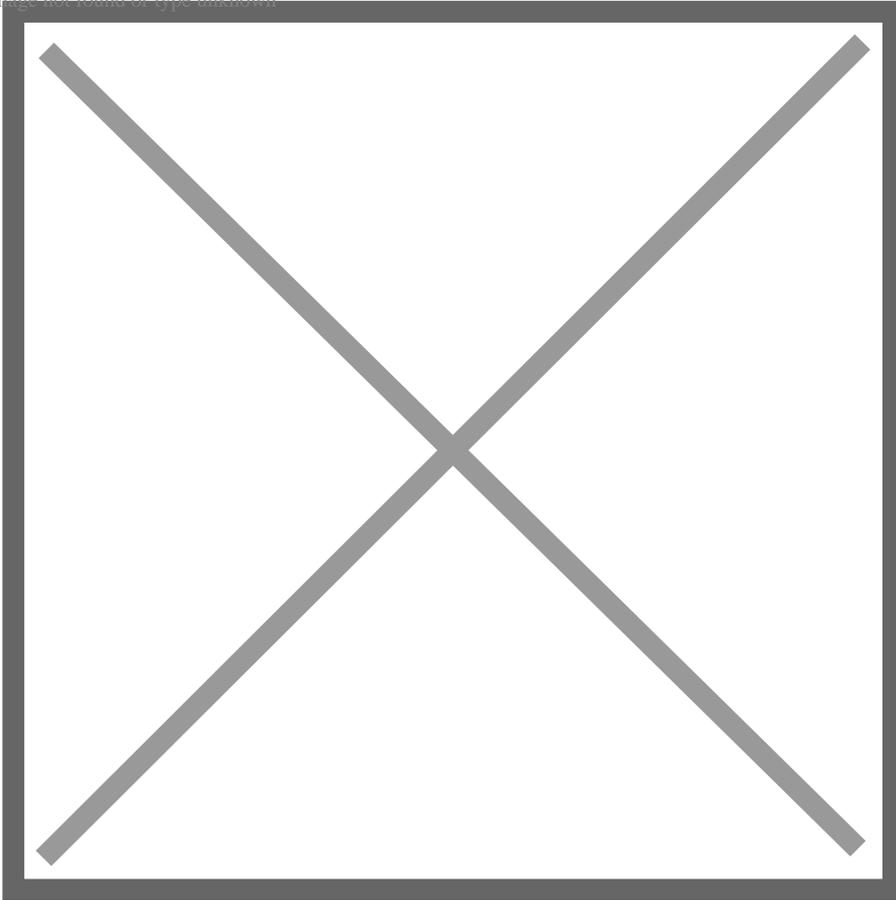


3.

1. "Verify" "Enter"

6-58

6-58

Image not found or type unknown

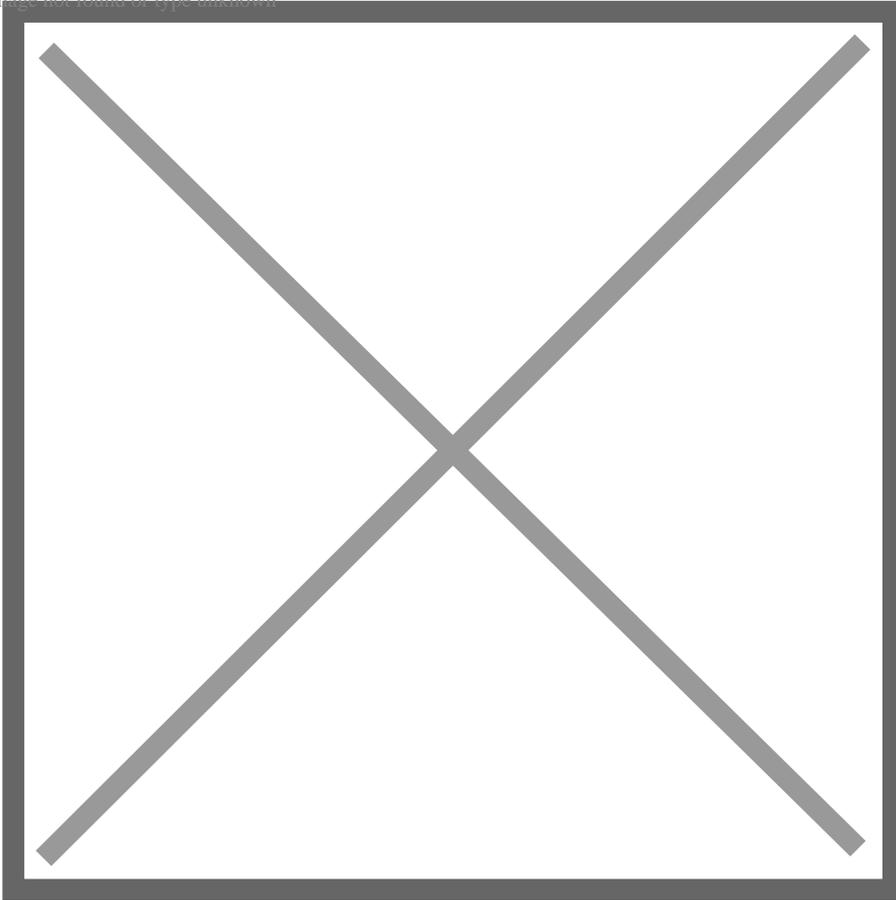


2. "Enter"

6-59

6-59


Image not found or type unknown

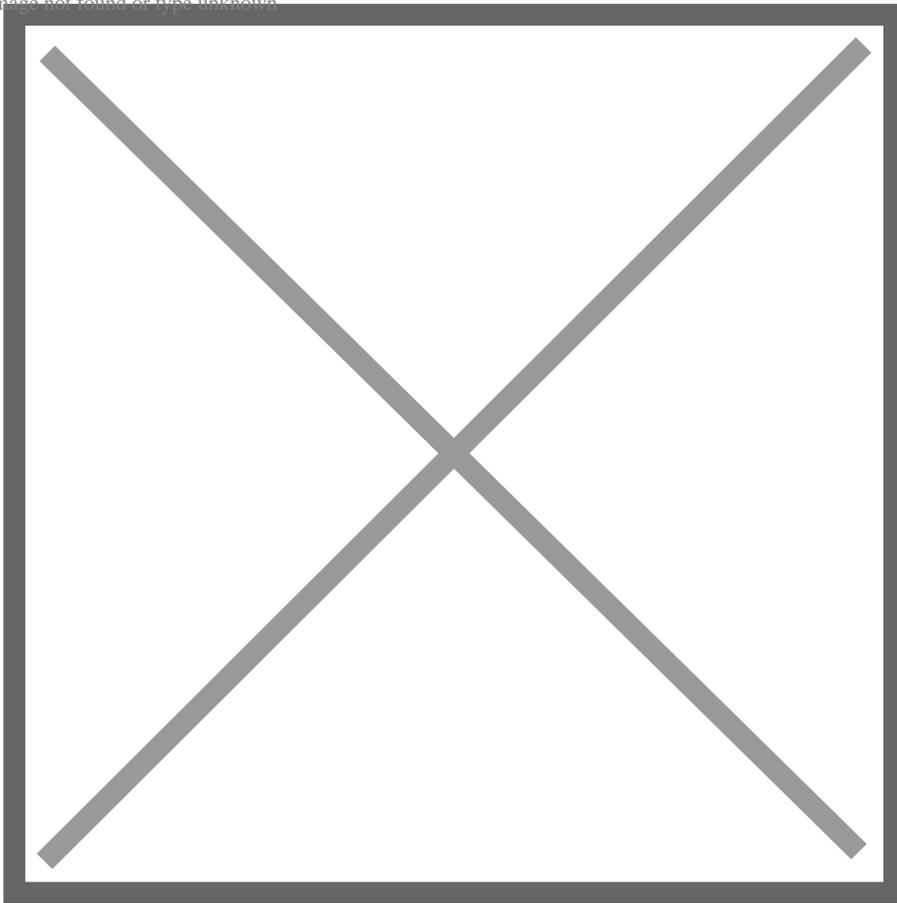

6-60%

6-60

Image not found or type unknown

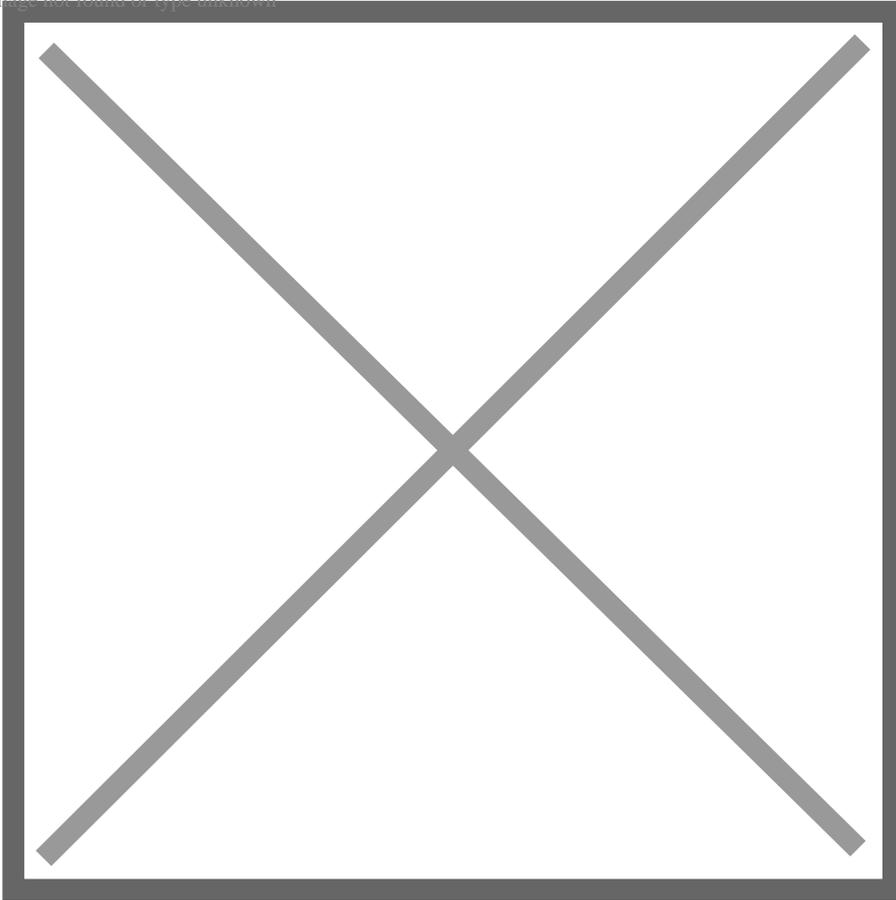


1. RAID

- "ALT+B"

"Device Info" [6-61](#) "Boot"

6-61

Image not found or type unknown

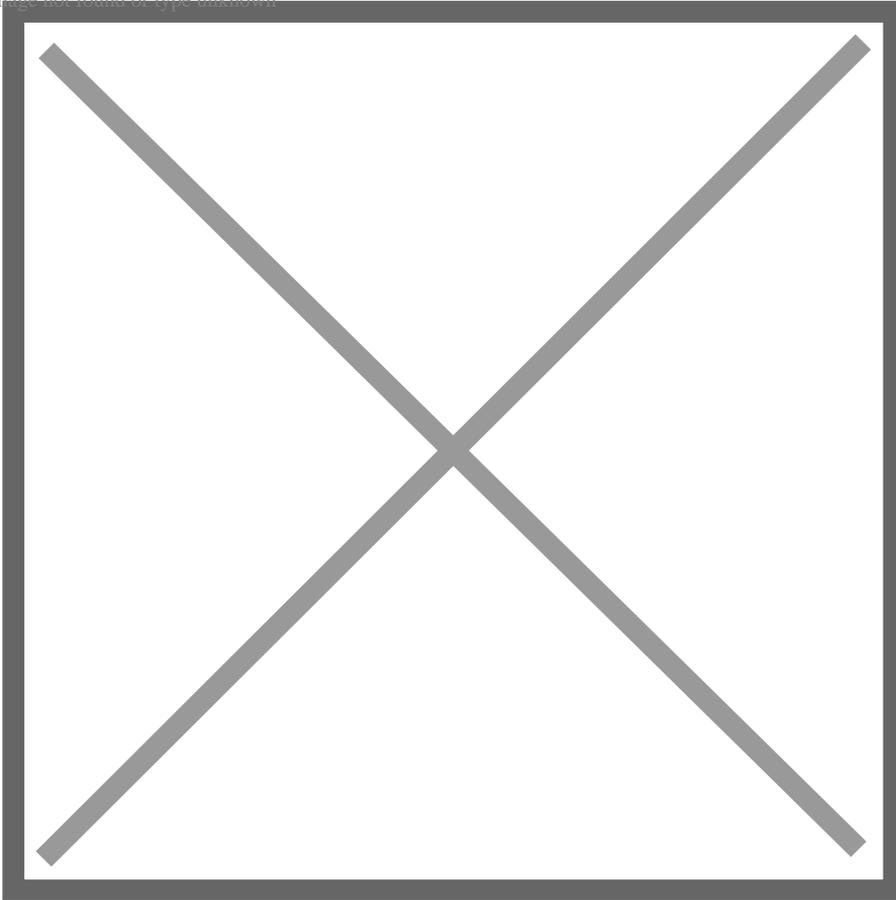


- "ALT+A"

"Device Info" [6-62](#) "Alt"

6-62

Image not found or type unknown

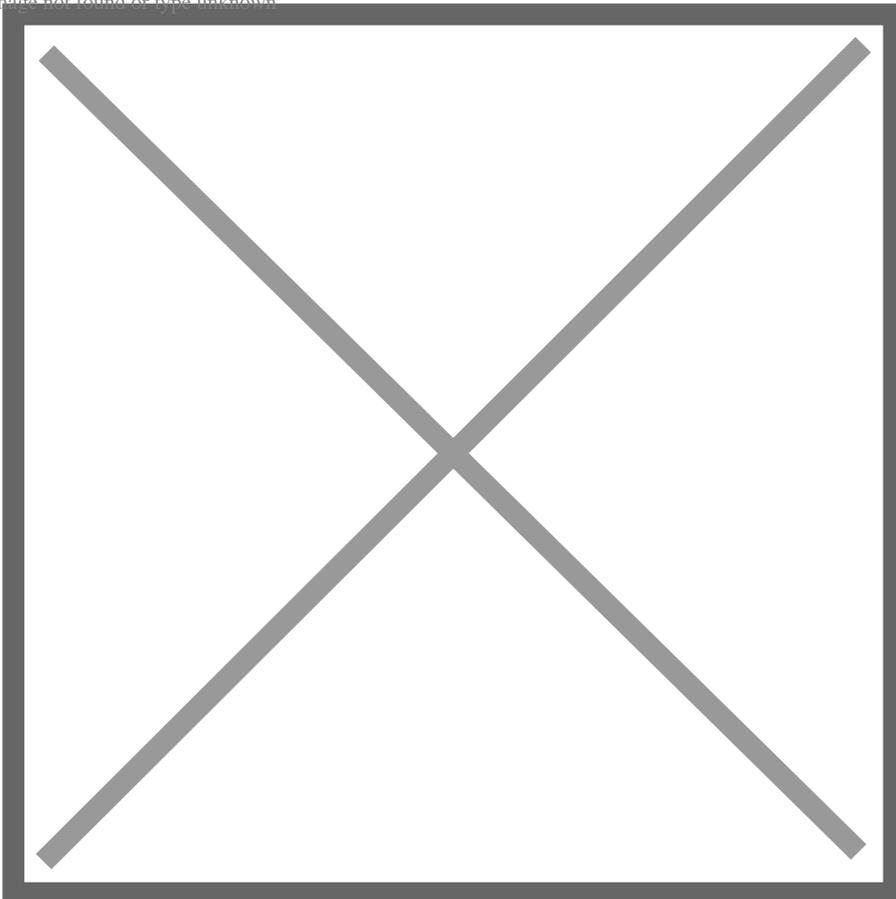

RAID- RAID / RAID

RAID Properties

RAID / RAID RAID

Image not found or type unknown




RAID

"Adapter Properties"

["RAID Properties" Volume Type](#)

6-80 Select New Volume Type

Image not found or type unknown

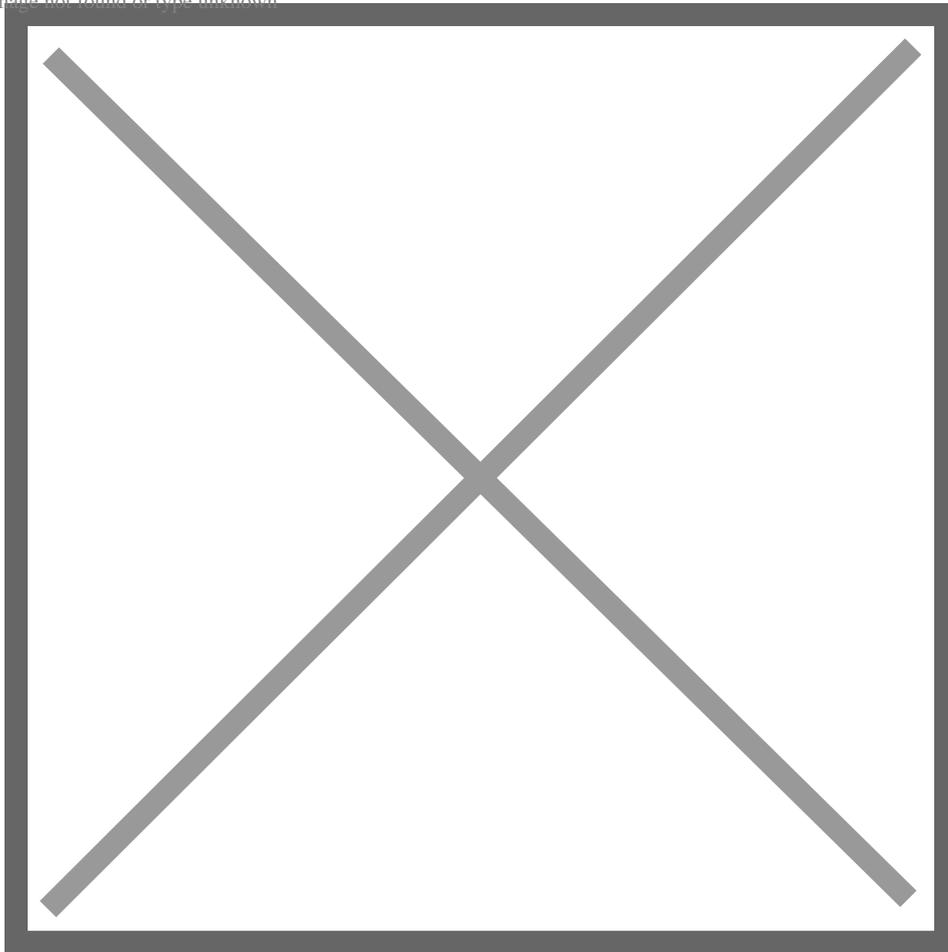

6-17

| | |
|--------------------------|---|
| View Existing Volume | View Existing Volume / RAID RAID RAID LSI SAS3008IR RAID |
| Create RAID 1 Volume | RAID 1 |
| Create RAID 1E/10 Volume | RAID 1E/10 |

| | |
|----------------------|--------|
| Create RAID 0 Volume | RAID 0 |
|----------------------|--------|

- [View Existing Volume](#)
- [Create RAID 1 Volume](#)
- [Create RAID 1E/10 Volume](#)
- [Create RAID 0 Volume](#)

View Existing Volume

View Existing Volume / RAID RAID RAID

[6-81 View Volume](#)[6-18 View Volume](#)

6-81View Volume

Image not found or type unknown

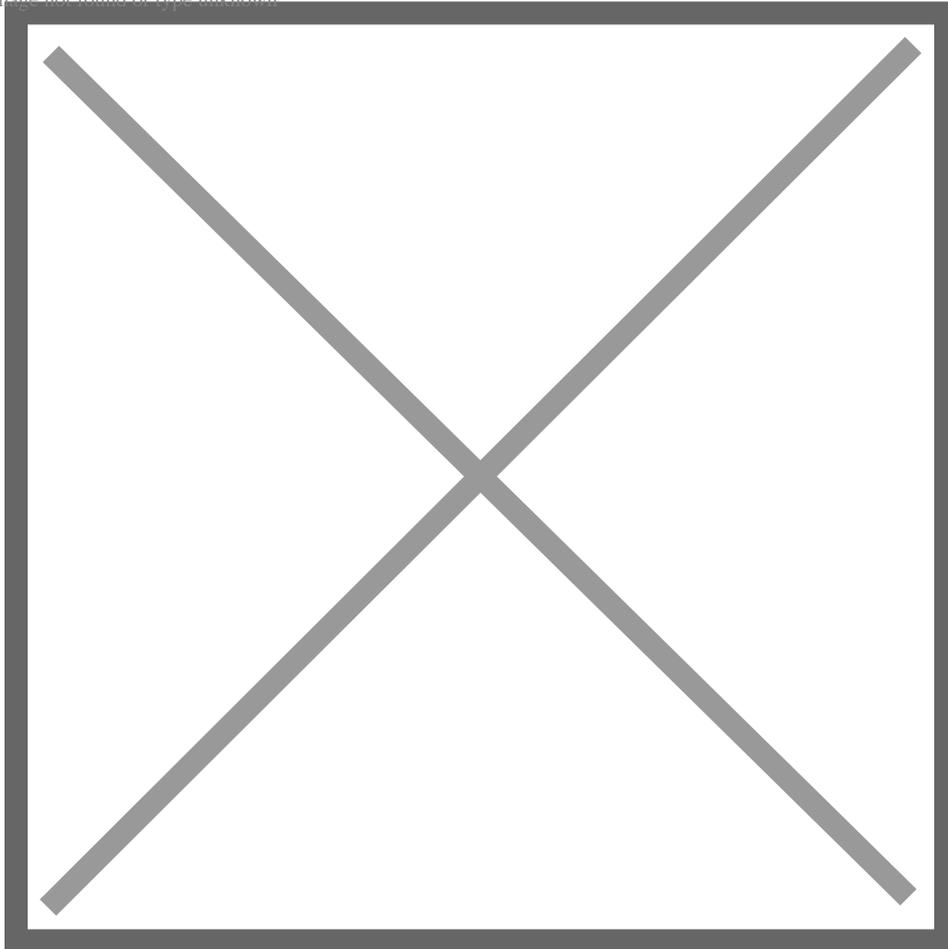


Image not found or type unknown



RAID "Alt+N" RAID RAID

6-18 View Volume

| | |
|-------------------|--------------------------------------|
| Volume | RAID 3008 2 RAID |
| Identifier | RAID |
| Type | RAID |
| Size | RAID |
| Status | RAID |
| Task | RAID None RAID |
| Slot Num | RAID |
| Device Identifier | |
| RAID Disk | RAID • Yes RAID • No RAID |
| Hot Spr | • Yes • No |
| Drive Status | |
| Pred Fail | RAID Fail • Yes RAID Fail • No |
| Disk Size | |

RAID

1. "Volume" "Enter"

RAID


/

1. "Manage Volume" "Enter"

"Manage Volume"

6-82 Manage Volume

Image not found or type unknown

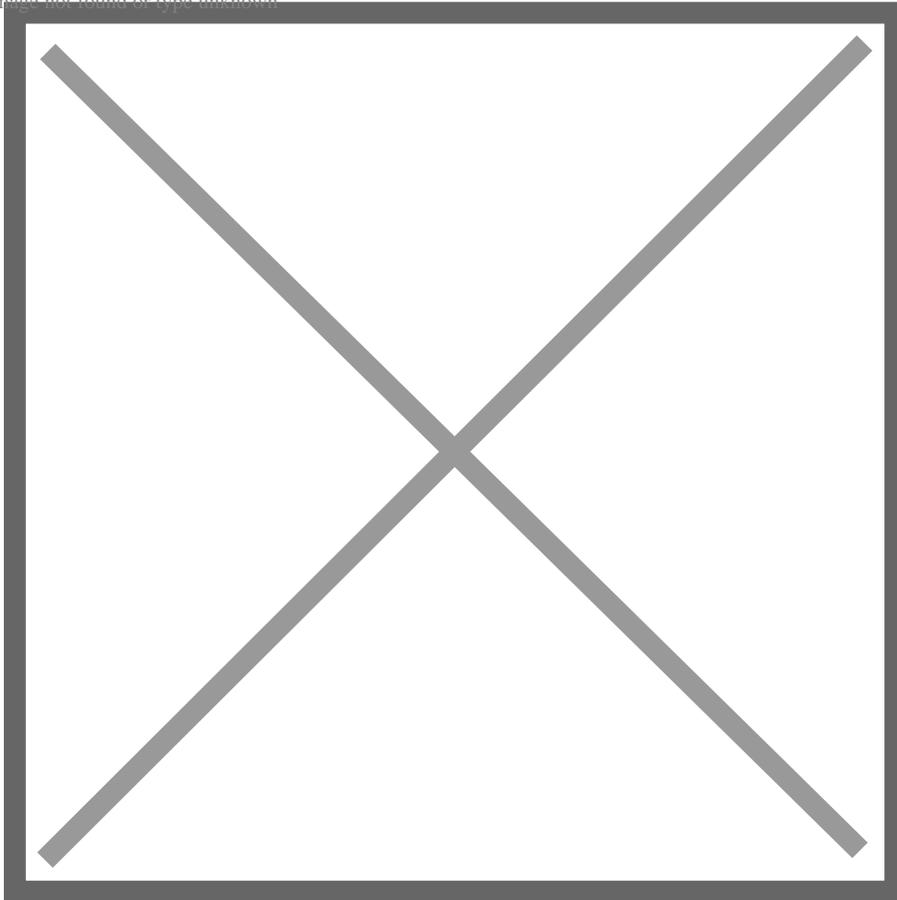

2. "Manage Hot Spares" "Enter"

"Manage Hot Spares"

3. RAID

Image not found or type unknown

RAID


"Hot Spr" "-" "6-83

RAID

- Yes
- No

6-83

Image not found or type unknown

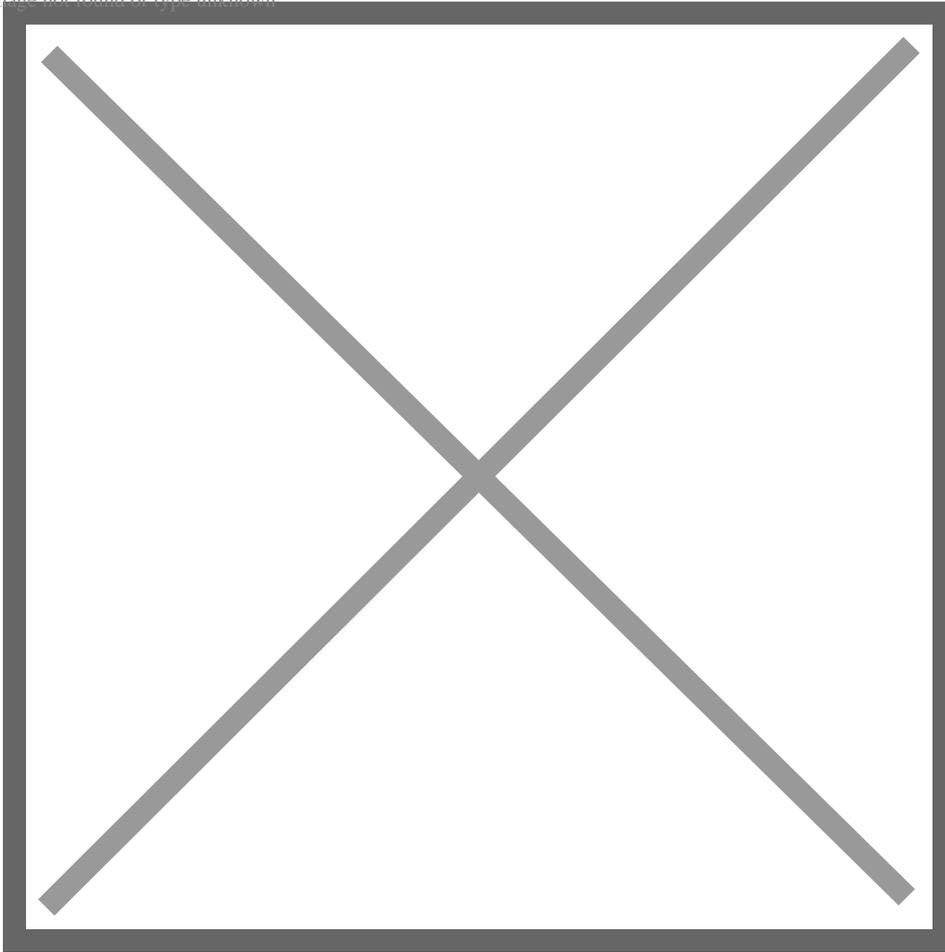

4. "C"

5. "Save changes then exit this menu" "Enter"

RAID 1 CU

[6-82 Manage Volume](#)

1. "Manage Volume" "Enter"

"Manage Volume" [6-82 Manage Volume](#)

2. "Consistency Check" "Enter"

"Consistency Check"

3.

- “Y”
6-82 Manage Volume
- “N”
6-82 Manage Volume

RAID

1. “Manage Volume” “Enter”

“Manage Volume” 6-82 Manage Volume

2. “Activate Volume” “Enter”
- 3.

- “Y”
RAID-10 Adapter Properties
- “N”
RAID-2 Manage Volume

RAID

RAID RAID RAID

1. “Manage Volume” “Enter”

“Manage Volume” 6-82 Manage Volume

2. “Delete Volume” “Enter”

“Delete Volume”

- 3.

- “Y”
RAID-10 Adapter Properties

 Image not found or type unknown

RAID

- "N"

RAID Manage Volume

RAID

Image not found or type unknown



- LSI SAS3008IR RAID 1
- LSI SAS3008IRFirmware
- 2 RAID 1 RAID 1


1. RAID 1
2. RAID 1
3. RAID 1

- OS `sas3008ircu controllerid status`
- iBMC In Failed Array

4. RAID 1
5. RAID 1 "Manage Volume" "Enter"

"Manage Volume" [5-84 Manage Volume](#)
6-84Manage Volume

Image not found or type unknown

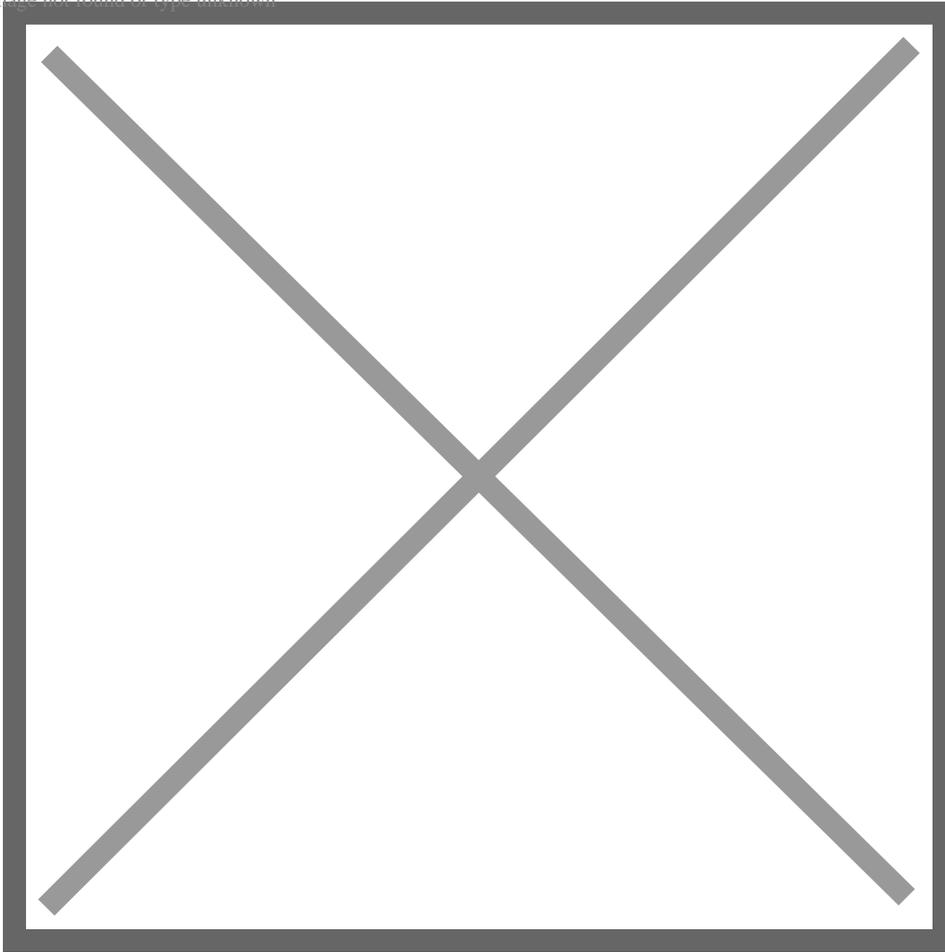

6. "Online Capacity Expansion" "Enter"

7. "Y"

RAID

8. "Manage Volume" "Status" "Optimal" "Size" RAID


Create RAID 1 Volume

Create RAID 1 Volume RAID 1

[6-85 Create New Volume6-19](#)

6-85Create New Volume

Image not found or type unknown

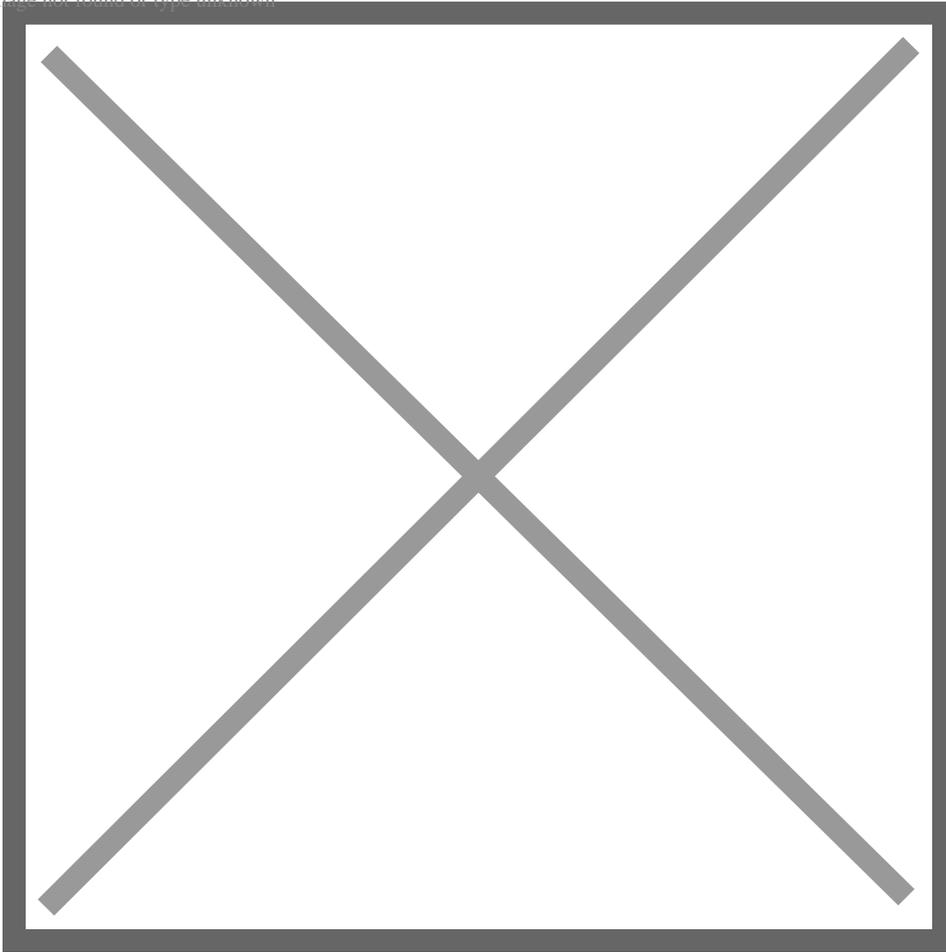

6-19

| | |
|-------------------|--------------------------------------|
| Volume Type | RAID |
| Volume Size | RAID |
| Slot Num | |
| Device Identifier | |
| RAID Disk | RAID • Yes RAID • No RAID |
| Drive Status | "Inc RAID" SMART SATA |
| Pred Fail | RAID Fail • Yes RAID Fail • No |
| Disk Size | |

RAID 1 RAID 1

Create RAID 1E/10 Volume

Create RAID 1E/10 Volume

RAID 1E/10


“Select New Volume Type”

“Create RAID 1E/10 Volume” “Enter”

“Create New Volume” [6-86 Create New Volume](#) [6-20](#)

[6-86](#) Create New Volume

Image not found or type unknown

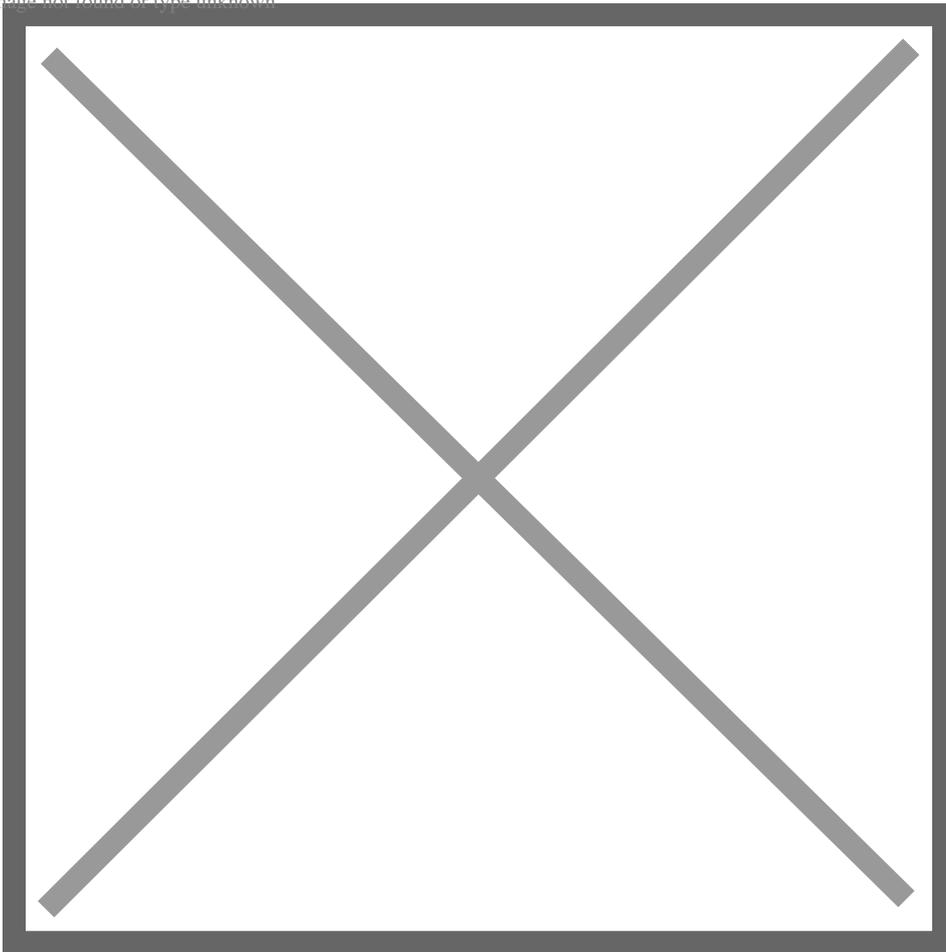

[6-20](#)

| | |
|-------------------|------|
| Volume Type | RAID |
| Volume Size | RAID |
| Slot Num | |
| Device Identifier | |

| | |
|--------------|--------------------------------------|
| RAID Disk | RAID • Yes RAID • No RAID |
| Drive Status | "Inc RAID" SMART SATA |
| Pred Fail | RAID Fail • Yes RAID Fail • No |
| Disk Size | |

RAID 1E/10

1. RAID

 Image not found or type unknown


- RAID
- RAID

"RAID Disk" "-" "6-87" RAID

- "RAID Disk" "Yes" RAID
- "RAID Disk" "No" RAID

6-87

Image not found or type unknown

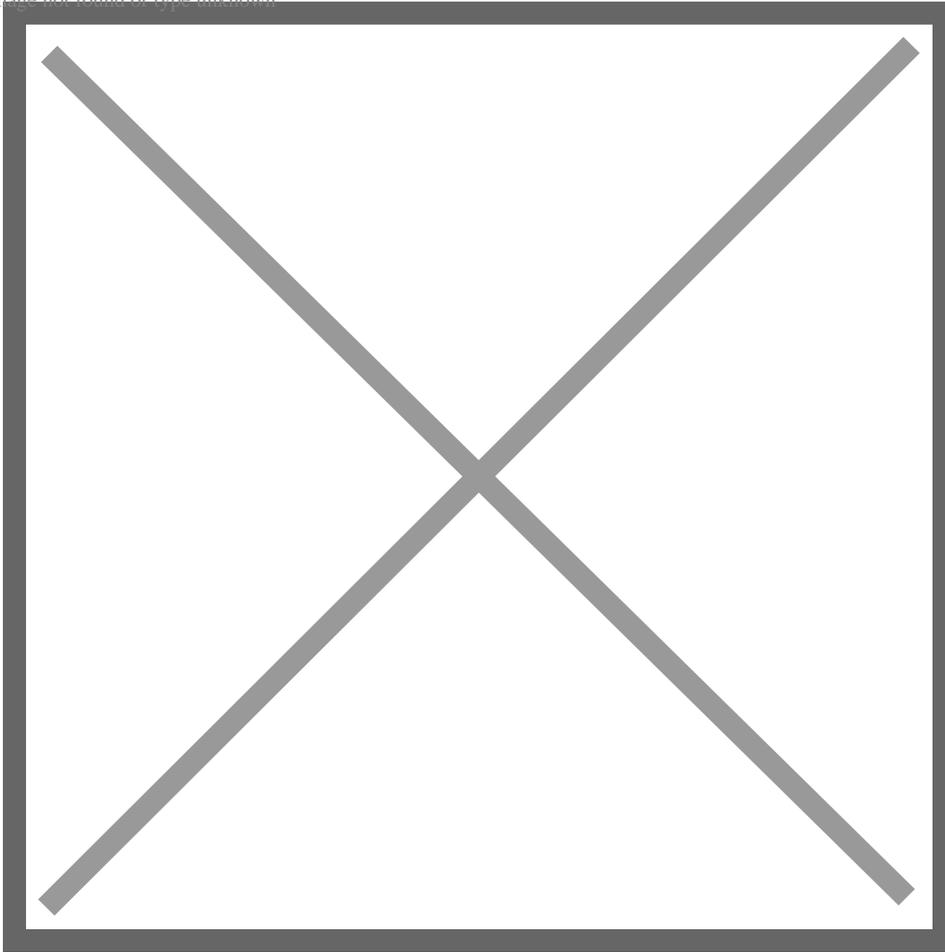

2. "C"

RAID

3. "Save changes then exit this menu" "Enter"

RAID 1 CU

[6-10 Adapter Properties](#)

Create RAID 0 Volume


Create RAID 0 Volume RAID 0

"Select New Volume Type" "Create RAID 0 Volume"

"Enter" "Create New Volume" [6-88 Create New Volume](#) [6-21](#)

6-88 Create New Volume

Image not found or type unknown

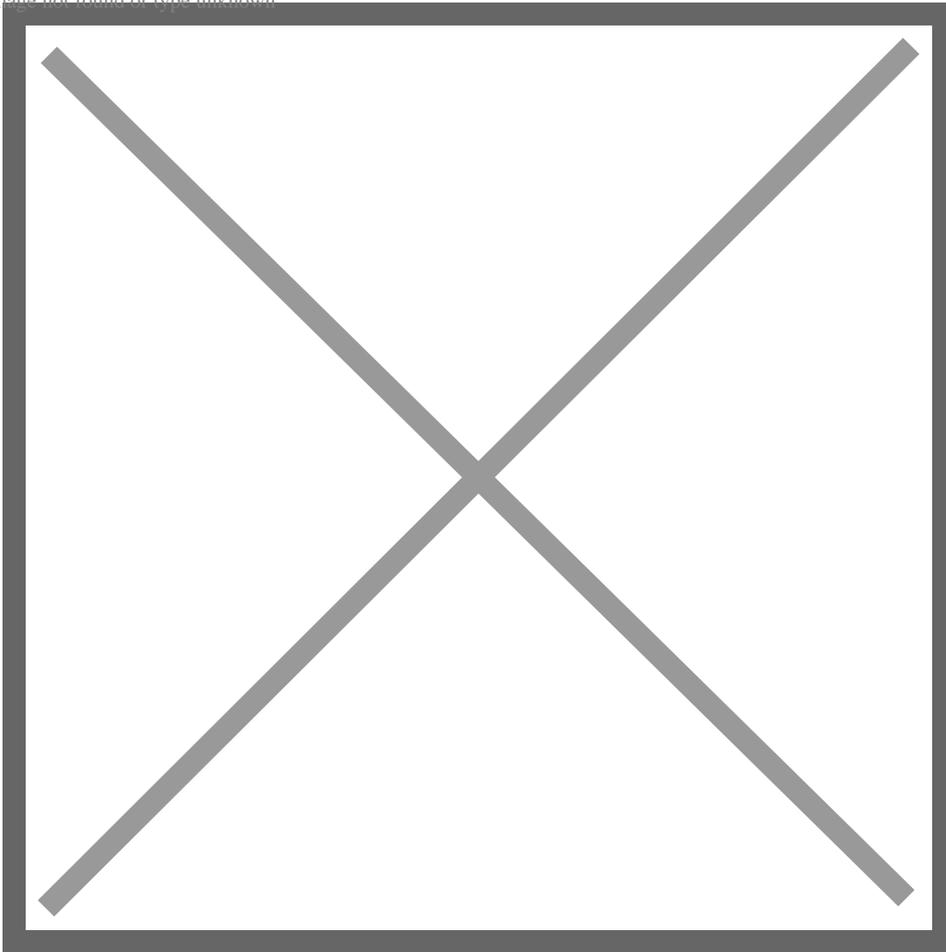

6-21

| | |
|-------------------|---|
| Volume Type | RAID |
| Volume Size | RAID |
| Slot Num | |
| Device Identifier | |
| RAID Disk | RAID <ul style="list-style-type: none"> • Yes RAID • No RAID |
| Drive Status | “Inc RAID” SMART SATA |
| Pred Fail | RAID Fail <ul style="list-style-type: none"> • Yes RAID Fail • No |
| Disk Size | |

RAID 0

1. RAID

Image not found or type unknown


- RAID
- RAID

“RAID Disk” “-” “6”89 RAID

- “RAID Disk” “Yes” RAID
- “RAID Disk” “No” RAID

6-89

Image not found or type unknown

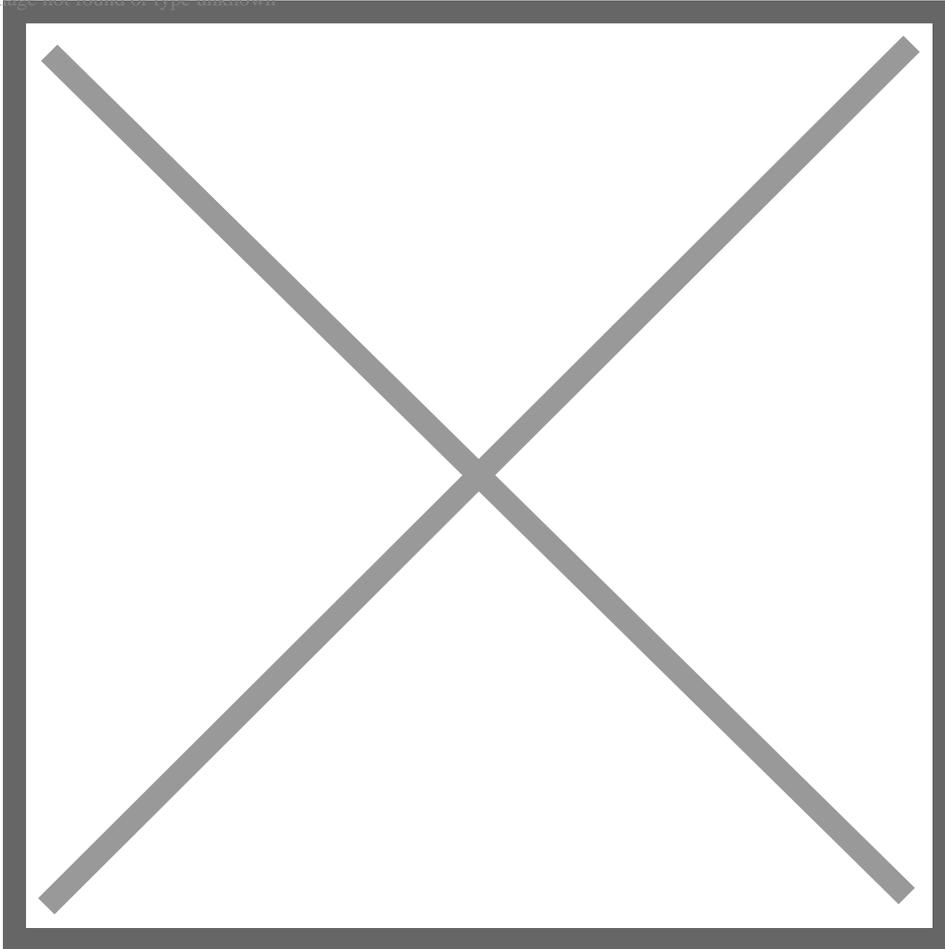

2. “C”

RAID

3. “Save changes then exit this menu” “Enter”

RAID 1 CU

[6-10 Adapter Properties](#)