

# RAID- RAID


## RAID

- RAID RAID RAID
- RAID RAID

### 2. RAID


1. "Adapter Properties" "RAID Properties" "Enter"  
"Select New Volume Type"[6-43 Select New Volume Type](#)  
6-43Select New Volume Type

Image not found or type unknown

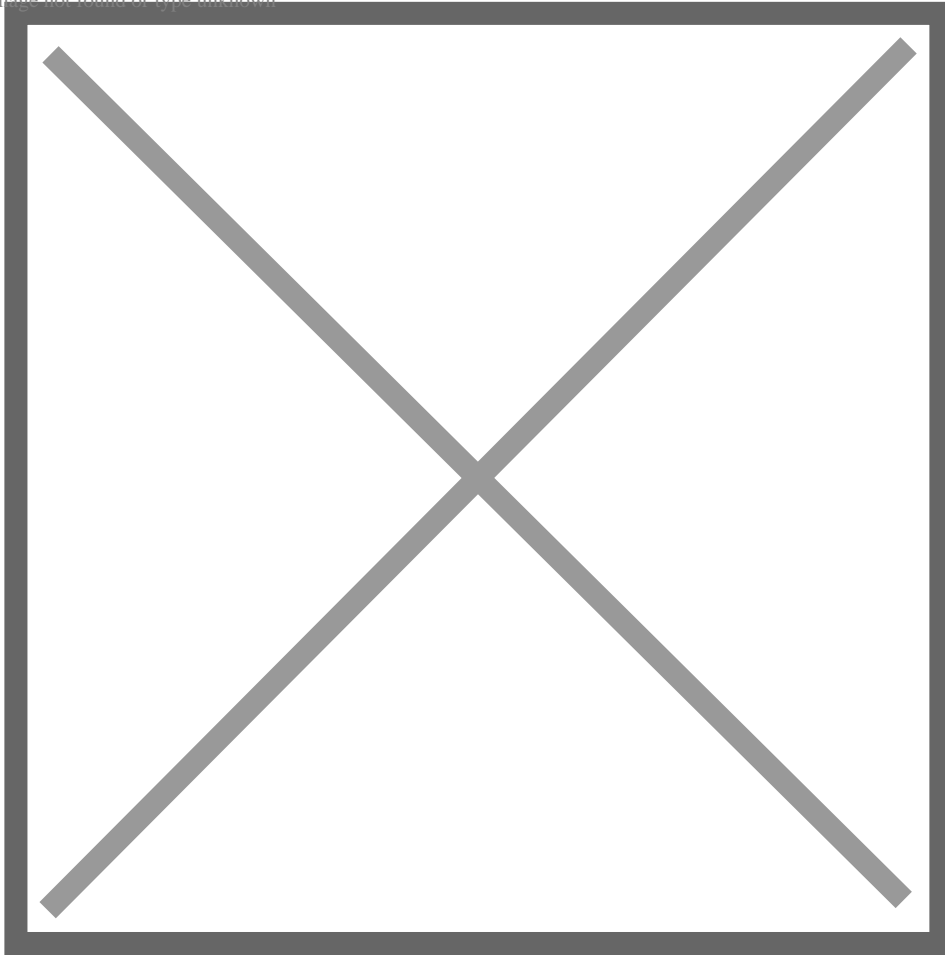


2. "Select New Volume Type" "View Existing Volume" "Enter"  
"View Volume" [6-44 View Volume](#)  
6-44View Volume

Image not found or type unknown

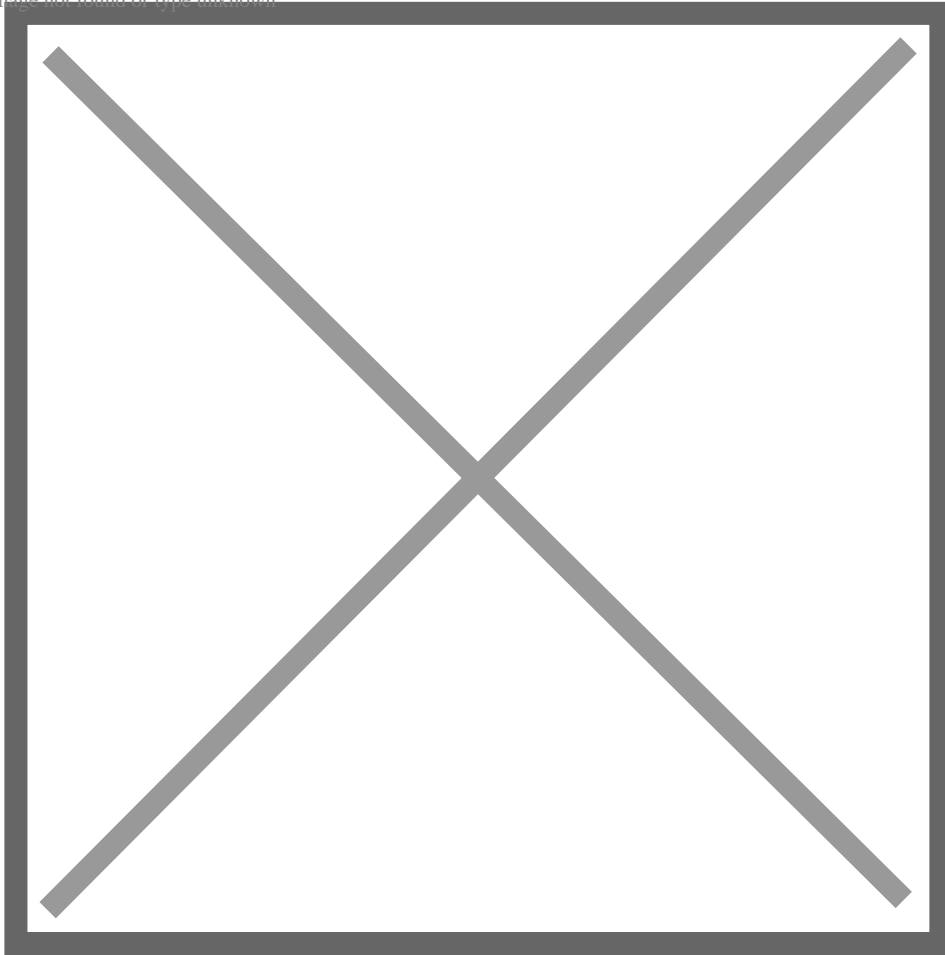

3. "Manage Volume" "Enter"  
"Manage Volume"  
6-45Manage Volume

Image not found or type unknown

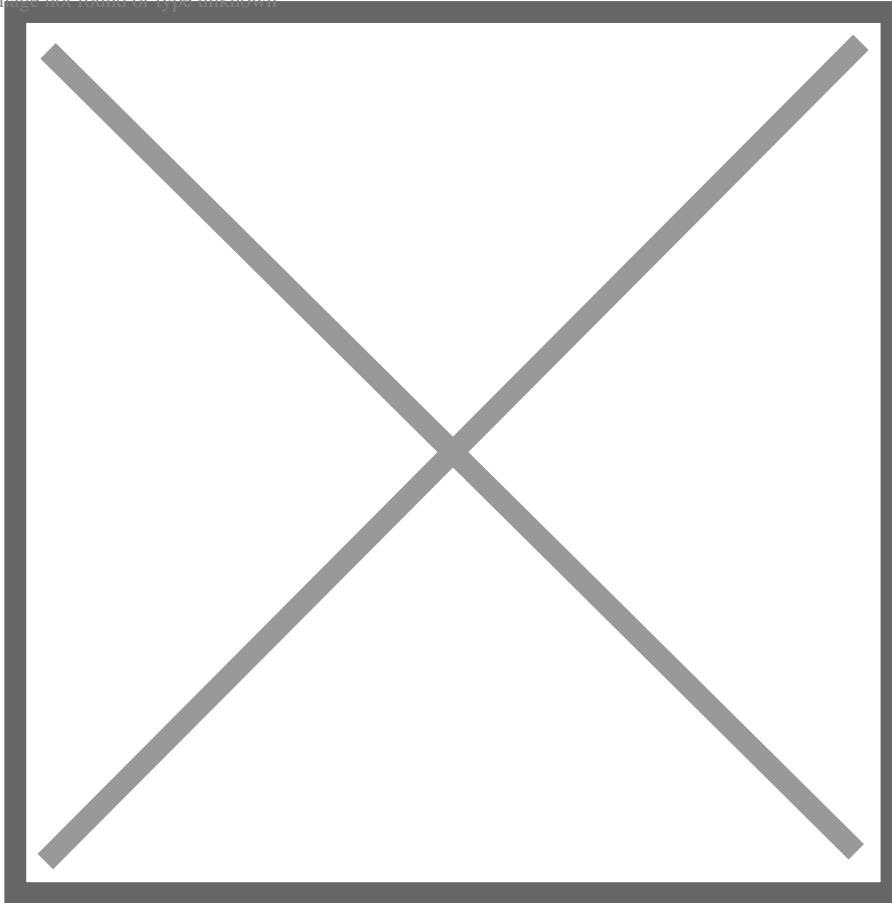

4. “Activate Volume” “Enter”

5.

- “Y”

[RAID-10 Adapter Properties](#)

- “N”

[RAID-10 Manage Volume](#)

---

Revision #1

Created 18 June 2022 15:01:08 by

Updated 9 July 2022 19:32:46 by